Welcome

Thank you for purchasing a Sony VAIO® computer! Your new computer is a superb blend of high technology and easy-to-use functionality. The information provided here is designed to help you to become familiar with the hardware and software programs included with your computer.

- View the Electronic Flyer, which provides updates and supplemental information about your computer.
- Go to the Sony online support Web site, to view the VAIO® Computer Specifications, which lists your computer's hardware specifications and preinstalled software information.
- For information about the Sony software preinstalled on your computer, click **Start** in the Windows® taskbar, and then click **Welcome to VAIO life**.

Getting Started

Congratulations on your purchase of the Sony VAIO® computer! Your new, high-performance, multimedia computer combines state-of-the-art computer functionality with the latest audio, video and information technology features.

- Unpacking Your Computer
- Planning an Ergonomic Work Space

Unpacking Your Computer

Your computer may not be supplied with all of the accessories shown, depending on the system configuration purchased. For details on the accessories supplied with your computer, go to http://www.sony.com/pcsupport to view the online specifications sheet.

Your VAIO® computer is not supplied with System or Application Recovery CDs. Use the VAIO Recovery utility to recover your computer's operating system and preinstalled software.

Computer and supplied accessories

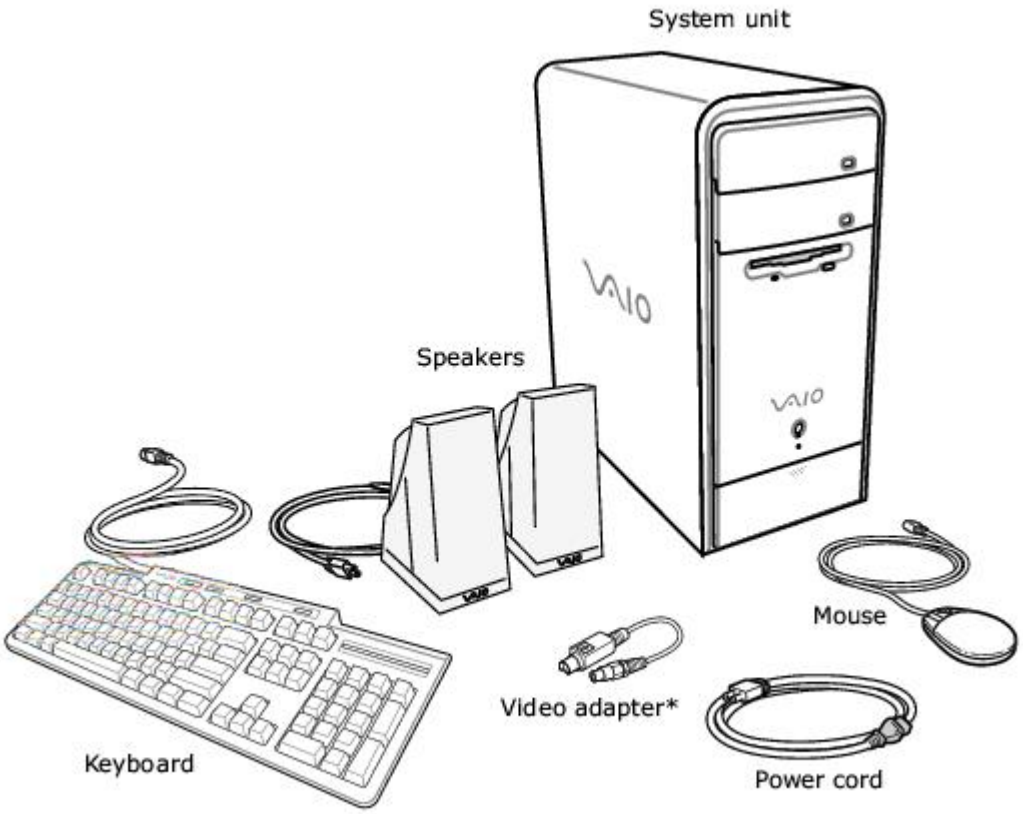

* This item is not supplied with all VAIO® computer models.

Giga Pocket Personal Video Recorder accessories (For models equipped with Giga Pocket features)

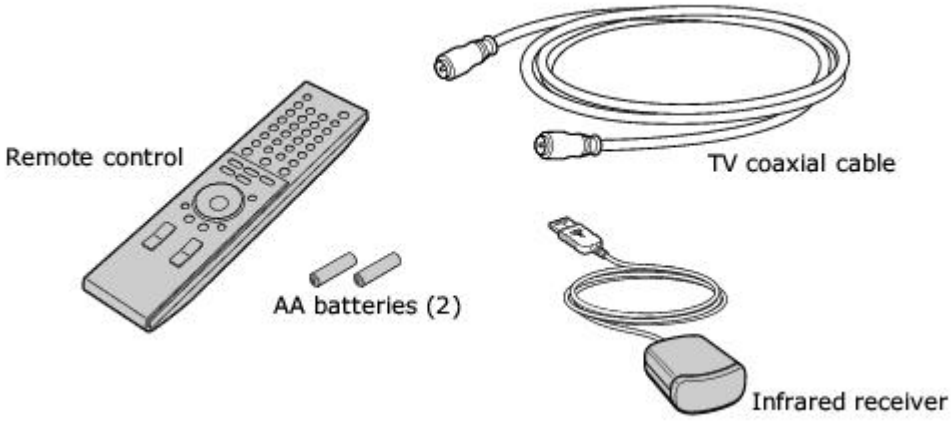

Manuals

- ***VAIO® Computer Quick Start*** — Provides basic information on setting up and registering your computer. The Quick Start also provides resources for technical support, safety guidelines, and owner's information.

Online Documentation

- ***VAIO® Computer User Guide —*** Contains information on the hardware and preinstalled software programs included with your system.

To access the online manual:

1. Click **Start** in the Windows taskbar, then click **Help and Support**.
2. From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.

- ***Specifications*** — The online specifications sheet describes the hardware and software configuration of your VAIO computer.

  To view the online specifications sheet:

  1. Connect to the Internet.
  2. Go to the Sony online support Web site at *http://www.sony.com/pcsupport*.
  3. Click the **Documentation button** and follow the on-screen instructions to locate your model's specifications sheet.
  4. ***VAIO® Software*** — Provides specific information on the preinstalled software on your computer.

     To access this online software information:

     1. Click **Start** in the Windows® taskbar.
     2. Click **Welcome to VAIO life**.

Hard Disk Drive Recovery

Your computer is equipped with the VAIO Recovery Wizard, a utility program that recovers your computer's operating system and preinstalled software.

For online information about hard disk recovery:

1. Click **Start** in the Windows® taskbar, then click **Help and Support**.
2. From the **VAIO Help And Support Center** menu, click **VAIO Recovery Options**.

You can create a VAIO Recovery Media Kit using CD-R, single layer DVD+R, or single layer DVD-R media on VAIO computers equipped with the appropriate optical drive (a CD-RW, DVD-RW, or DVD±RW drive).

DVD+RW, DVD-RW, double layer DVD+R, and double layer DVD-R media (when it becomes available) cannot be used to create a VAIO Recovery Media Kit.

Other

A software library, containing the Microsoft® software and Sony® end-user license agreements.

Planning an Ergonomic Work Space

Before you set up your new computer, find the best location for your new computer and plan your work space. There are several ergonomic factors to consider when you arrange your work space:

- **Stable work surface —** Use a stable work surface large enough to support the computer and other peripheral equipment.

- **Ventilation —** Leave at least eight inches of space on the left and back sides of your computer to enable proper ventilation.

- **Placement of the keyboard, mouse, and other input devices —** Place your keyboard, mouse, and other input devices so that your arms and hands are in a relaxed, comfortable position. The keyboard should be directly in front of you. Adjust the level of the keyboard so that your lower arms are parallel to the floor. Keep your wrists in a relaxed position when you are using the keyboard — not angled up or down. Use the palmrest briefly, for resting. While typing, never use the palmrest or rest your hands on the table. Position the mouse at the same level as the keyboard. Hold the mouse with a relaxed hand, and use your whole arm to move it. Take breaks during sessions with your computer. Excessive use of the mouse or a joystick may strain muscles or tendons.

- **Furniture and posture —** Sit in a chair with good back support and armrests. Adjust the level of the chair so your feet are flat on the floor. A footrest may make you more comfortable. Sit with relaxed, upright posture — avoid slouching forward or leaning far backward.

- **Viewing angle of the display —** Position the display 18 to 26 inches directly in front of you, with the top of the screen at or a little below eye level. Use the display's tilting feature to find the best position. You can reduce eye strain and muscle fatigue by placing the display in the proper position.

- **Lighting —** Choose a location where windows and lights do not create glare and reflection on the display. Use indirect lighting to avoid bright spots on the display. You can also purchase accessories for your display that help reduce glare. Proper lighting adds to your comfort and work effectiveness.

Locating Controls And Ports

This section is intended to familiarize you with the controls, ports and jacks on your computer. Your computer may not be equipped with all of these hardware features, and the location of the controls, ports, and jacks may vary from the illustrations shown in this section. See the specifications sheet for your computer on the Sony online support Web site at http://www.sony.com/pcsupport.

- About the Front Panel
- About the Back Panel
- About the Keyboard
- About the Remote Control
- About the i.LINK Port

About the Front Panel

The front panel of your VAIO® Computer enables access to drives, memory card readers, ports and jacks that enable you to connect compatible peripheral devices.Your computer may not be equipped with all of these hardware features or accessories. The location of the controls, ports, and jacks may vary from the illustrations shown in this section.

Front panel

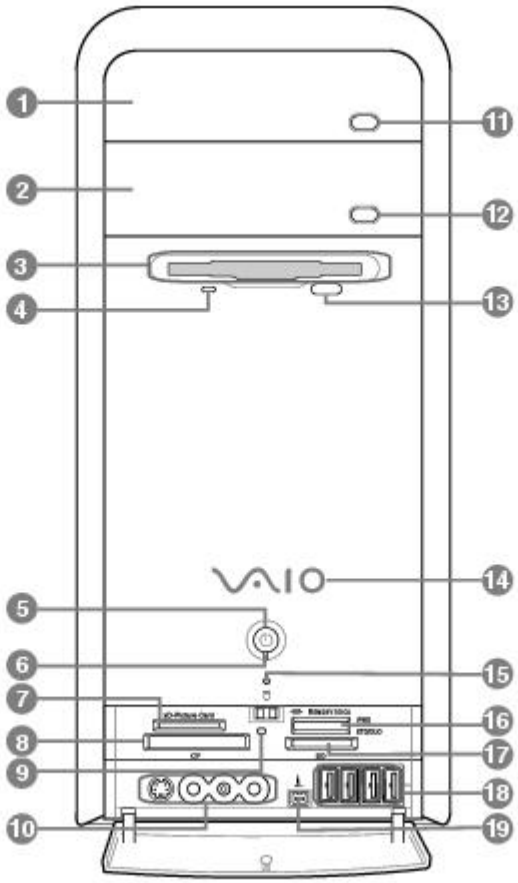

1 Optical drive 1

See the online specifications sheet for optical drive information.

2 Optical drive 2

See the online specifications sheet for optical drive information.

3 Floppy disk drive

Reads and writes data from and to a 3.5-inch floppy disk.

4 Floppy disk drive access indicator

Light is green while reading and writing data from and to a floppy disk.

5 Power button

The power button turns the computer on/off.

6 Standby indicator

Light is amber when the computer is in Stand by mode.

7 xD-Picture Card memory card reader

Reads and writes data from and to xD-Picture Card media.

8 CompactFlash® and Microdrive memory card reader

Reads and writes data from and to CompactFlash and Microdrive media.

9 Media access indicator[1]

Light is amber when reading or writing data

10 S-video In jack[2]

Connection for an S-video cable (optional).

Composite video In jack[2]

Connection for a video cable (optional).

Composite audio L In jack[2]

Connection for an audio cable (optional).

Composite audio R In jack[2]

Connection for an audio cable (optional).

11 Optical drive 1 eject button

Ejects a disc from Optical drive 1.

12 Optical drive 2 eject button

Ejects a disc from Optical drive 2.

13 Floppy disk eject button

Ejects a floppy disk.

14 Power indicator (VAIO)

Light is blue when the computer is on. The light turns off when the computer is in Standby mode or turned off.

15 Hard disk drive and optical disc drive access indicator

Light is amber while reading and writing data.

16 Memory Stick® memory card reader

Reads and writes data from and to Memory Stick®, Memory Stick Pro , and Memory Stick Duo media.

17 Secure Digital (SD)/MultiMediaCard (MMC) memory card reader

Reads and writes data from and to a Secure Digital (SD) or MultiMediaCard (MMC).

18 Universal Serial Bus (USB 2.0) ports[3]

Connections for compatible high/full/low-speed USB devices.

19 i.LINK 4-pin S400 port (IEEE 1394)

Connection for a compatible digital device.

[1] The media access indicator lights when reading or writing data with the Secure Digital (SD), Memory Stick®, xD-Picture Card , or CompactFlash® /Microdrive slots.

[2] Not available on all models. See your online specifications sheet for details.

[3] The number of USB ports may vary depending on the model purchased.

For your convenience, your computer includes USB and i.LINK ports on both the front and back panels. The 4-pin i.LINK port is located on the front panel and the 6-pin i.LINK port is located on the back.

Additional information

Your computer is equipped with one or more optical disc drives that have a drive eject button on the drive door.

- After pushing the eject button, wait for the drive to stop reading the CD or DVD. It may take a few moments for the drive tray to eject.
- Gently push the drive tray in, when closing the optical drive door. Do not force the door or handle roughly.
- After closing the drive door, wait a few moments for the drive to begin reading the CD or DVD.

About the Back Panel

The back panel of your computer contains the ports and jacks for supplied and optional accessories. The icons on the back panel locate and identify the ports and jacks on your computer.

Your hardware configuration may vary based on the computer model purchased.

Back panel

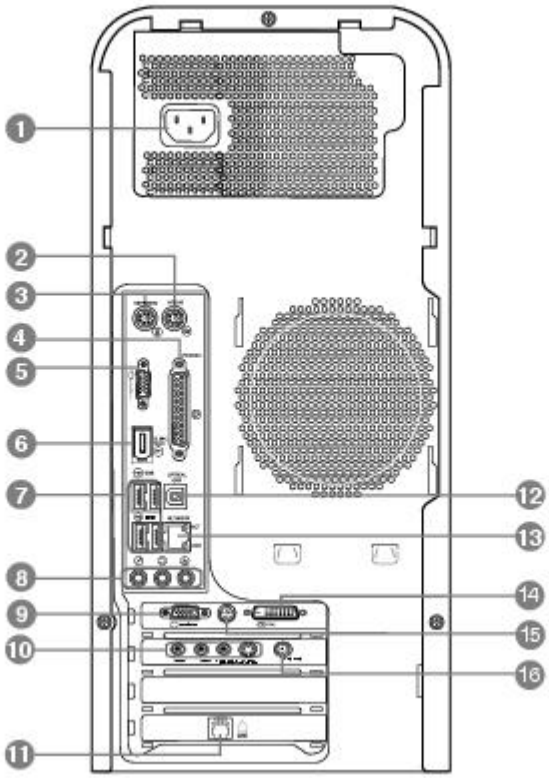

1 AC Input port

Connection for the supplied power cord.

2 Mouse port

Connection for a PS/2® mouse.

3 Keyboard port

Connection for a PS/2® keyboard.

4 Printer port

Connection for a parallel device, such as a printer or scanner.

5 Monitor port[1]

Connection for a standard display.

6 i.LINK 6-pin S400 port (IEEE 1394)

Connection for a compatible digital device.

7 Universal Serial Bus (USB 2.0) ports (4)

Connections for compatible high/full/low-speed USB devices.

8 Microphone jack

Connection for a microphone (optional).

Headphones jack

Connection for the supplied speakers or headphones (optional).

Line In jack

Connection for an audio device.

9 Monitor port[1]

Connection for a standard display.

10 Composite audio R In jack[2]

Connection for an audio cable (optional).

Composite audio L In jack[2]

Connection for an audio cable (optional).

Composite video In jack[2]

Connection for a video cable (optional).

S-video In jack[2]

Connection for an S-video cable (optional).

11 Modem line jack

Connection for an RJ-11 telephone cable (optional).

12 S/PDIF Optical Out port

Connection for a digital audio or optical device.

13 Ethernet port

Connection for a 10BASE-T/100BASE-TX Ethernet interface.

(The port marked with (Network) is for LAN connections only.)

14 Monitor (DVI-D) port[1]

Connection for a DVI monitor.

15 TV Out (S-Video/video) jack[2]

Connection for an S-video cable (optional).

16 VHF/UHF port[2]

Connection for a TV coaxial cable (supplied).

[1] This monitor port is not available on all models, and monitor port locations may vary. For details about your computer's hardware configuration, see the online specifications sheet.

[2] Giga Pocket® Personal Video Recorder features are not available on all models. For details about your computer's hardware configuration, see the online specifications sheet.

i.LINK is a trademark of Sony used only to designate that a product contains an IEEE 1394 connection. The i.LINK connection may vary, depending on the software applications, operating system, and compatible i.LINK devices. All products with an i.LINK connection may not communicate with each other.

Refer to the documentation that came with your compatible i.LINK device for information on operating conditions and proper connection. Before connecting compatible i.LINK devices to your system, such as an optical or hard disk drive, confirm their operating system compatibility and required operating conditions.

About the Keyboard

Your VAIO® keyboard uses a standard key arrangement with additional keys that perform specific functions.

VAIO Keyboard

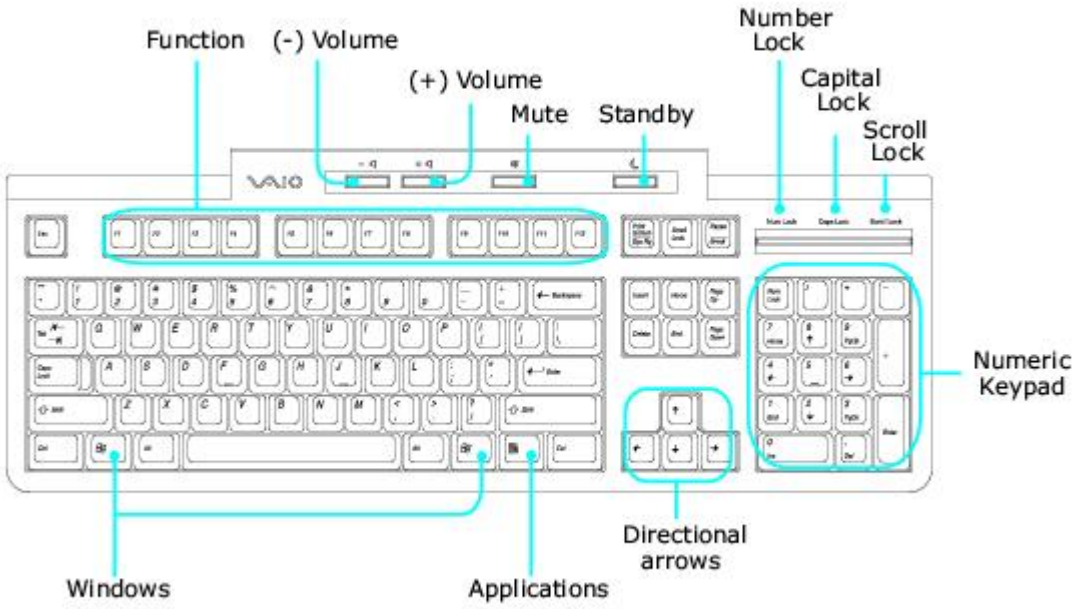

KEY **DESCRIPTION**

Function The 12 function keys along the top of the keyboard are used to perform certain tasks. The task associated with each function key may vary from one application to the next.

Volume Control Press a button to increase (+) or decrease (-) the volume of the speakers.

Mute Press the button to turn off the speaker sound. Press the Mute button again to restore sound.

Standby Press the button to place the computer in Standby mode. Press the Power button or any key briefly, to resume normal operation.

Numeric keypad Use the numeric keypad area to type numbers or to perform basic math calculations. Press the Num Lock key to activate the numeric keypad. (The Num Lock indicator lights.) Press the Num Lock key again to deactivate the numeric keypad.

Directional Arrows The Up, Down, Left, and Right arrow keys move the pointer on the screen.

Applications

The Applications key displays a shortcut menu in certain software applications. Pressing this key is equivalent to clicking the right mouse button.

Windows

The key with the Microsoft® Windows® logo, displays the Start menu. Pressing this key is equivalent to clicking Start on the taskbar.

INDICATORS FUNCTION

Num Lock The Num Lock indicator lights when the numeric keypad is activated. When the indicator is off, the directional arrow and correction keys on the numeric keypad area are active.

Caps Lock The Caps Lock indicator lights up to advise you that the keyboard is set to type letters in uppercase. When the indicator is off, the letters appear in lower case as you type.

Scroll Lock The Scroll Lock indicator lights up to advise you that your screen's scrolling pattern has changed. When the indicator is off, the screen scrolls normally. This function is not available with all software applications.

About the Remote Control

The remote control is supplied with VAIO® computers that are equipped with Giga Pocket® Personal Video Recorder features[1]. The remote control can start and stop video recording and playback, select channels, and set viewing preferences. This section describes the basic functions of your remote control.

Remote control

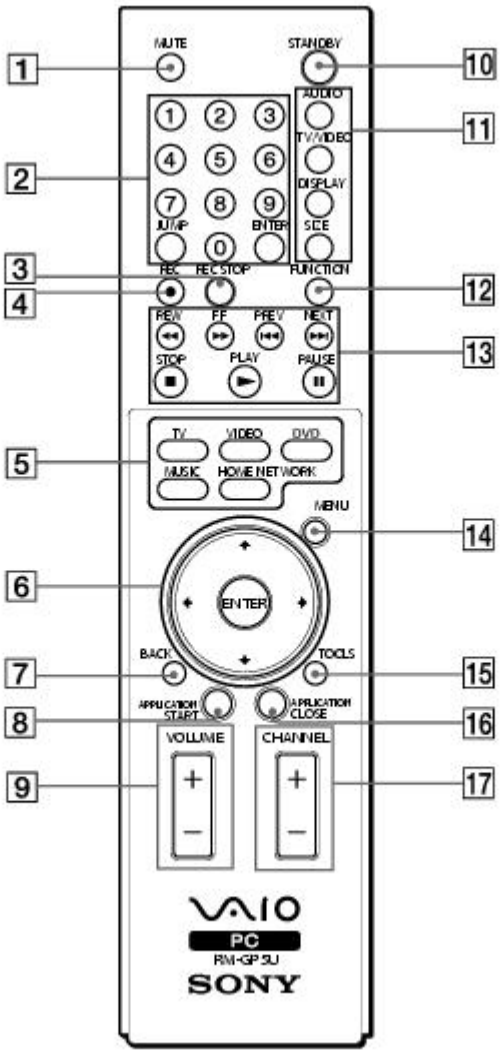

1 MUTE button

Press to turn off the sound. Press again to restore the sound.

2 Channel number buttons (0-9)

Press to select specific channels.

(Press the **ENTER** button to activate channel selection.)

JUMP button

Press to go to the previous channel. Press again to return to the current channel.

ENTER button

Press to activate channel selection. See **Channel number** buttons.

3 REC STOP button

Press to stop recording.

(Note: The REC STOP function is available for Giga Pocket software only.)

4 REC button

Press to begin recording.

(Note: The REC function is available for Giga Pocket software only.)

5 TV button

Press to change from the on-screen image to the TV/Recording deck.

VIDEO button

Press to start the Giga Pocket playback deck.

(Note: You cannot change the input source while recording.)

DVD button

Press to start the DVD player software program.

MUSIC button

Press to launch the SonicStage software.

HOME NETWORK button

Press to launch the VAIO Media.

6 Direction and ENTER buttons

Press a direction arrow to navigate. Press **ENTER** to select.

7 BACK button

Press to return to the previous screen.

(Note: This function is not available for Giga Pocket software.)

8 APPLICATION START button

Press to open a shortcut menu of software programs to start. Use the direction arrows to navigate to a specific software program and press the **APPLICATION START** button to select and start the program.

9 VOLUME button

Press to raise or lower the volume.

10 STANDBY button

Press to place the system into Stand by mode.

(Note: You cannot place the computer into Stand by mode when certain Giga Pocket functions are running.)

11 AUDIO button

Press to view available sound mode options on the monitor/display.

TV/VIDEO button

Press to change the on-screen image from the TV/Recording deck to external video equipment, such as your VCR.

(Note: You cannot change the input source while recording.)

DISPLAY button

During DVD playback in full screen mode, press to show the settings window. When using Giga Pocket software, press to display the TV/Recording deck and playback deck screens. Press again to hide these views.

SIZE button[1]

Press to view the current software in full-screen size. Press again to return the view to its original size.

12 FUNCTION button

When using SonicStage software, press to change from the music drive (hard disk drive) to the CD.

13 REW and FF buttons

Press to rewind or fast-forward.

PREV and NEXT buttons

Press to move back to the previous screen or forward to the next screen.

STOP button

Press to stop playback.

PLAY button

Press to begin playback.

PAUSE button

Press to pause playback.

14 MENU button

Press to view a shortcut menu of available options for a software program. Press again to hide this menu.

(Note: For the Giga Pocket software program, the **Select A Cabinet** window displays. Press the button again to hide this window.)

15 TOOLS button

The function of this button may vary between DVD media. See the DVD player software instructions for details.

16 APPLICATION CLOSE button

Press to view a shortcut menu of software programs to close. If more than one software program is open, use the direction arrows to navigate to a specific program and press the **Application Close button again to close the program.**

17 CHANNEL button

Press to change channels automatically (no number input required).

(Note: This function is available for Giga Pocket software only.)

[1] This function is available on certain models.

For more details about the function buttons on your remote control, see the Giga Pocket software Help.

To set up the remote control

Insert two AA batteries (supplied) into the remote control as shown.

Inserting batteries into the remote control

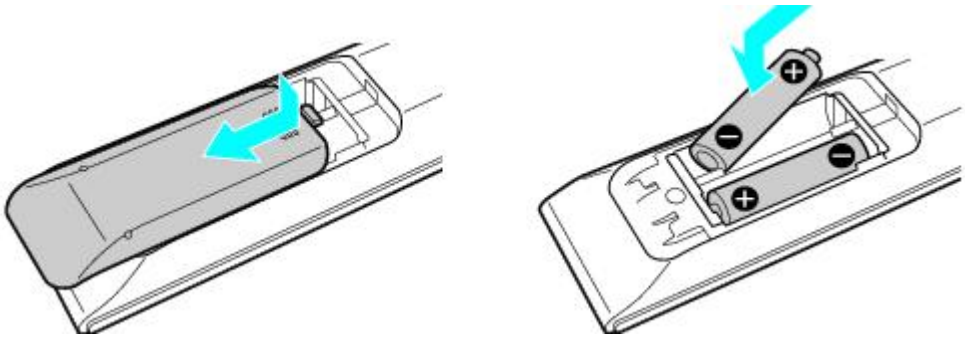

If your remote control does not operate properly, the batteries may need to be replaced. When your remote control is not being used for extended periods of time, remove the batteries to avoid possible damage from battery leakage.

[1] See the online specifications sheet for information about your computer's hardware configuration.

About the i.LINK Port

Your VAIO® computer is equipped with a 4-pin and a 6-pin i.LINK® port. A 4-pin i.LINK port cannot supply power to a connected i.LINK device. A 6-pin i.LINK port can supply power (10V to 12V) to a connected i.LINK device, if the device is equipped with a 6-pin connector.

The total power supplied by the 6-pin i.LINK port does not exceed 6 watts.

Connecting an i.LINK (IEEE 1394) device

1. Use the symbol to locate the i.LINK port on your compatible i.LINK device and on your computer. Plug the i.LINK cable connector into this port.
2. Plug the other end of the cable into the corresponding 4- or 6-pin i.LINK port on your computer.

See the instructions supplied with your i.LINK device for more information on installation and use.

Setting Up Your Computer

Your computer may not be equipped with all of the hardware features described in the section. The location of the controls, ports, and jacks may vary from the illustrations shown. See the specifications sheet for your computer on the Sony online support Web site at http://www.sony.com/pcsupport for details on your computer's hardware configuration.

- Connecting a Display (Monitor)
- Connecting the Speakers
- Connecting the Keyboard and Mouse
- Connecting the Telephone and Modem
- Connecting the Power Cords
- Turning On your Computer
- Registering Your Computer
- Turning Off Your Computer

Connecting a Display (Monitor)

1. Plug the display's cable into the appropriate monitor port.
2. If necessary, plug the display's cable into the back of the display.

To connect a display

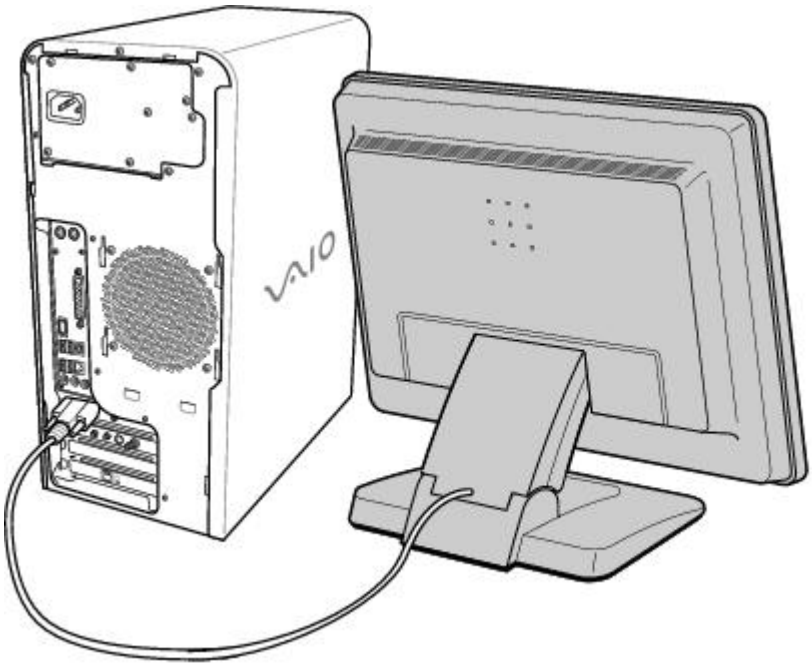

To connect a DVI display

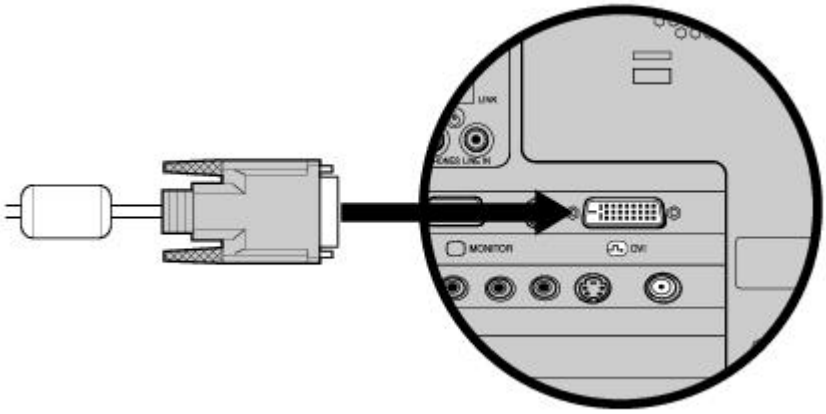

✍ Install your equipment so you can easily reach the power outlet in the event of an emergency.

Connecting the Speakers

The right and left speakers are attached. The right speaker has a speaker wire with a jack connector and an AC power cord that supplies power to both speakers.

1. From the right speaker, plug the jack connector into the Headphones jack located on the back panel of your computer.

2. From the right speaker, plug the AC power cord into a grounded AC wall outlet or surge suppressor.

To connect the speakers

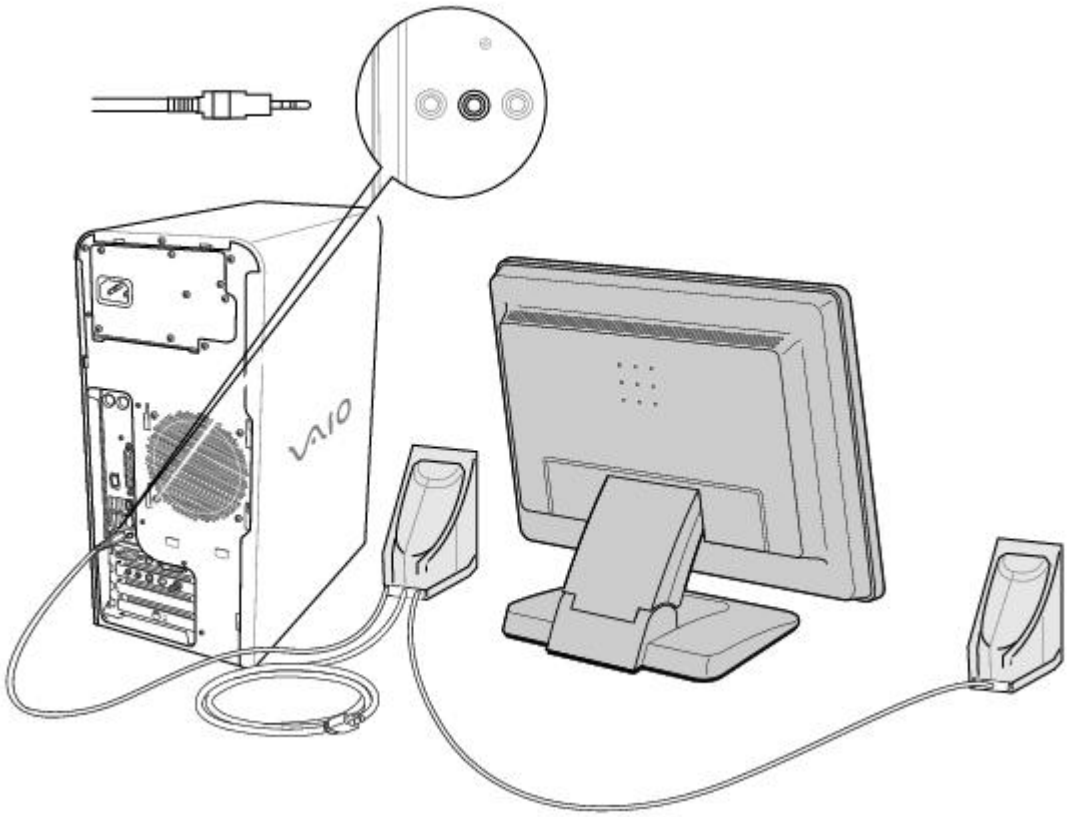

Connecting the Keyboard and Mouse

1. Plug the keyboard cable into the keyboard port on the back of the computer.
2. Plug the mouse cable into the mouse port on the back of the computer.

To connect the keyboard and mouse

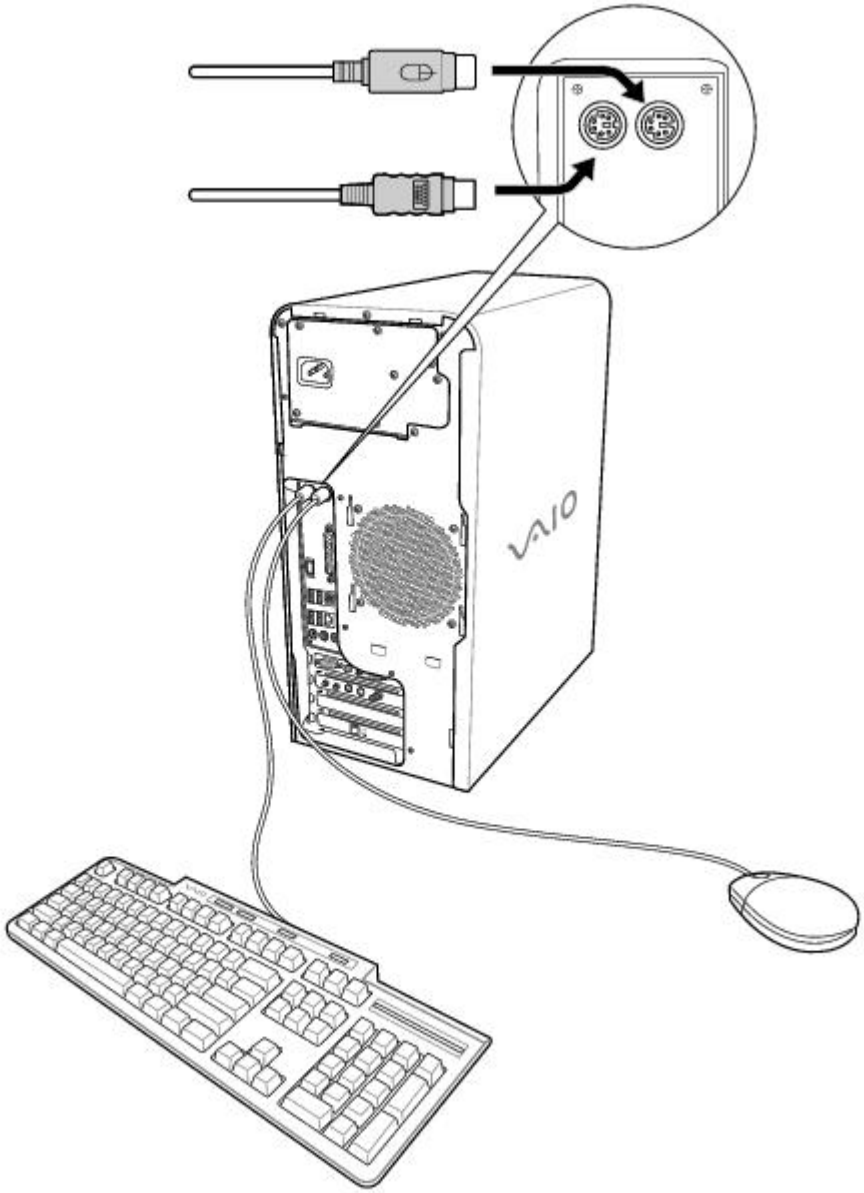

Connecting the Telephone and Modem

Your computer is equipped with a single modem line jack to connect your installed modem with your telephone wall jack. To use your wall jack for both your telephone and modem lines, purchase an additional RJ-11 telephone cable and a "1-to-2" jack adapter device (splitter).

To connect the modem

1. Unplug your telephone from the wall jack.
2. Plug another telephone cable (optional) into the modem line jack located on the back panel of your computer
3. Plug the other end of the cable into the wall jack.

To connect the telephone and modem

1. Unplug your telephone cable from the wall jack.
2. Insert the telephone's cable into one of the jacks on an optional "1-to-2" jack adapter device (splitter).
3. Insert one end of a second telephone cable (optional) into the other jack on the splitter device.
4. Insert the plug end of the splitter device into the wall jack.
5. Plug the second telephone cable into the modem line jack located on the back panel of the computer.

To connect the telephone and modem

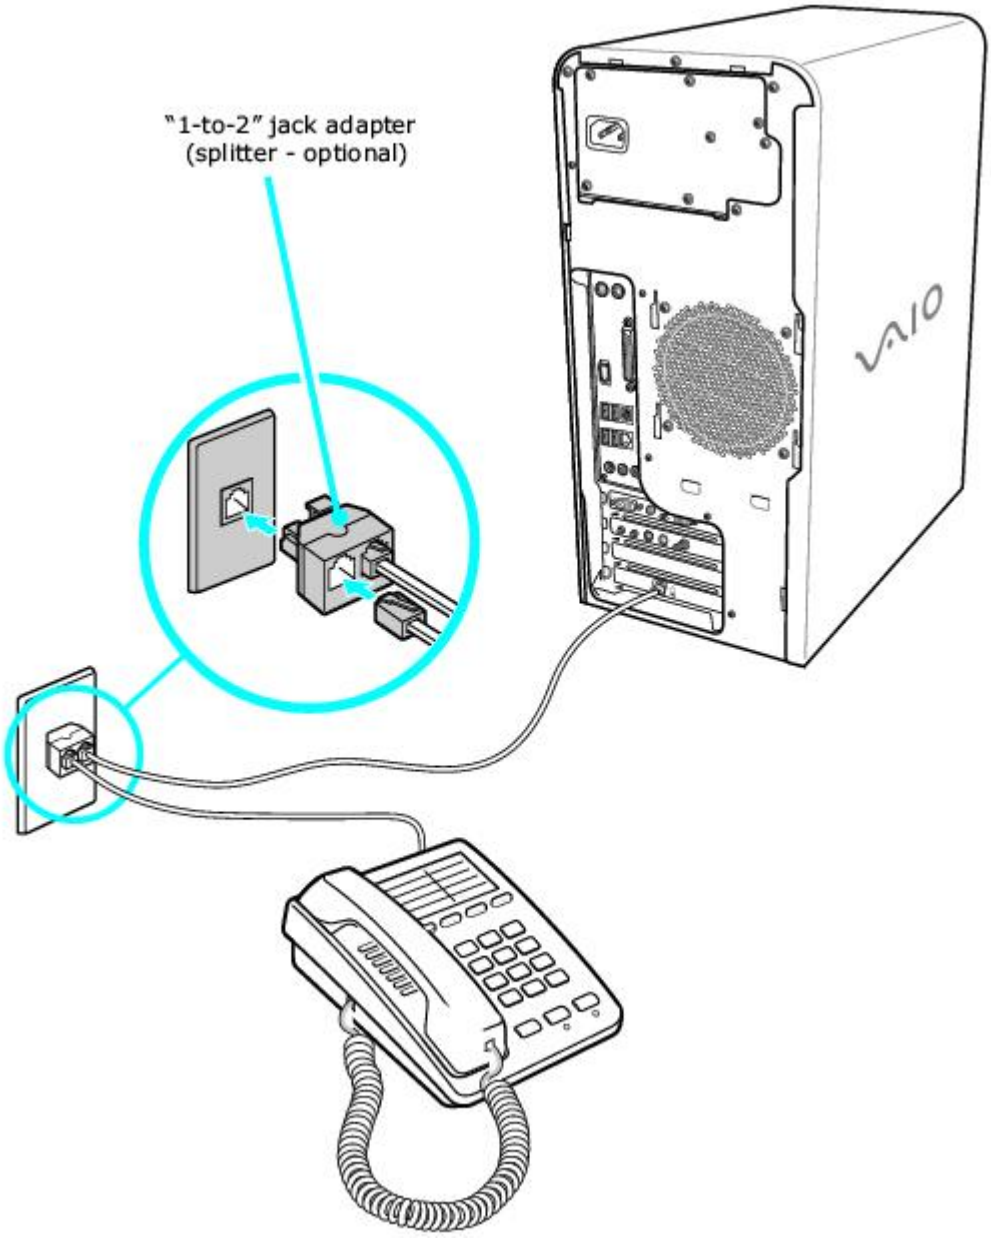

Your computer has a protective sticker covering the Ethernet port located on the rear panel. Connect only 10BASE-T and 100BASE-TX cables to the Ethernet port. Using other cables or a telephone cable may result in an electric current overload that can cause a malfunction, excessive heat, or fire in the Ethernet port. For help on connecting to a network, see your network administrator.

Connecting the Power Cords

1. Plug the power cord into the AC Input port, located on the back panel of the computer.
2. Plug both the display and computer power cords into a grounded AC wall outlet or a power strip.

To connect the power cords

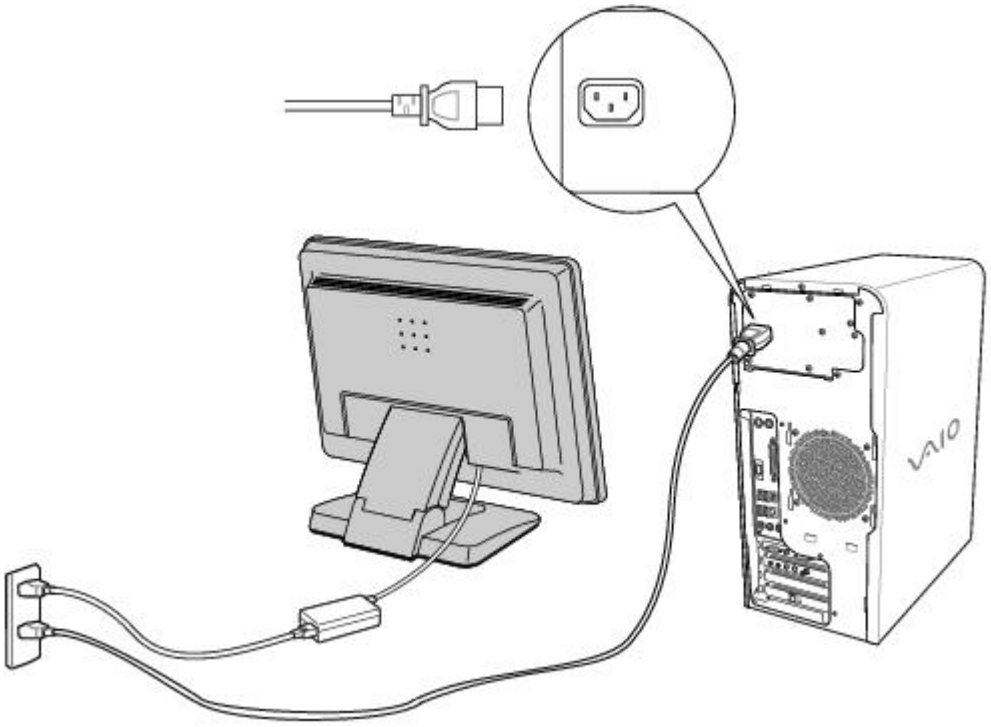

Turning On your Computer

When you start your system for the first time, your computer may detect new equipment and display a dialog box that prompts you to restart your computer. Respond to this prompt immediately.

1. Press the power button on the computer to turn on the power.
2. Press the power button on the display to turn on the power.
3. Press the power button, located on the side of the right speaker, to turn on the power.

To turn on your computer

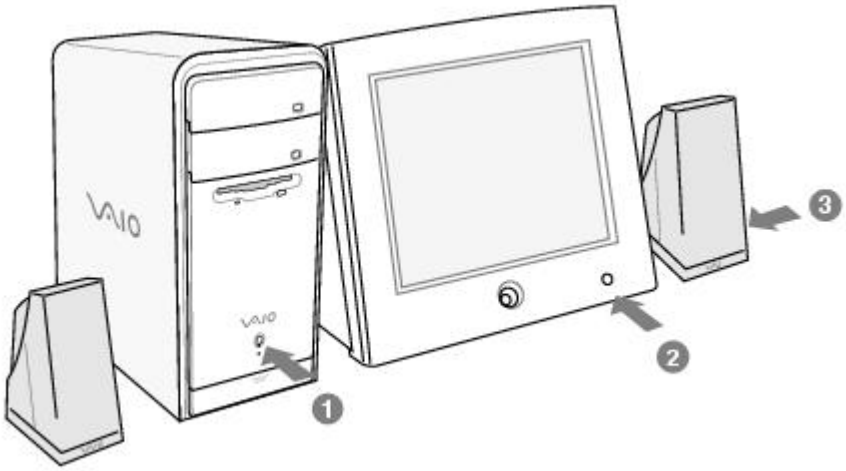

Registering Your Computer

Register your computer and take advantage of Sony's commitment to quality customer support and other benefits.

- **Sony Customer Support —** Communicate with a Support Representative to troubleshoot problems you may be having with your computer.
- **Limited warranty —** Protect your investment. See the Limited Warranty Card for more details.

You are prompted to register your computer the first time you turn on the computer. Follow the on-screen instructions to complete the registration process. If you are not able to register your computer during the first session, you can register your computer online at the Sony VAIO PC Registration Web site. Go to http://www.sony.com/vaioregistration.

Turning Off Your Computer

Follow these steps when you are ready to turn off your computer for an extended period of time.

To avoid loss of data, do not use the Power button to turn off the computer.

To turn off your computer

1. Click **Start** in the Windows® taskbar, then select **Turn Off Computer**.

   The **Turn Off Computer** dialog box appears.

2. Select the **Turn Off** option.

   Respond to any prompts about saving your documents.

3. Wait for your computer to turn off automatically—the power indicator light turns off.

4. Turn off any peripheral devices connected to your computer.

   If you plan to stop using your computer for a short period of time, use Stand by mode.

About the power button

If your computer stops responding, press and hold the Power button for more than six seconds to force your system to shut down. You may need to repeat this procedure if your computer does not shut down on the first attempt.

Giga Pocket Personal Video Recorder

Giga Pocket® Personal Video Recorder is a suite of interactive Sony audio and video components that are designed to create, capture, and play back video files derived from television and your personal videos.[1]

Giga Pocket Personal Video Recorder hardware and software applications are not available on all VAIO® computers. See your computer's online specifications sheet for details on your system configuration.

- About Giga Pocket Personal Video Recorder
- Setting Up Giga Pocket Personal Video Recorder
- Setting Up Giga Pocket Software
- Giga Pocket
- Timer Recording Wizard
- Timer Recording Manager
- Giga Pocket Explorer
- CLIÉ Converter
- Glossary
- Internet Electronic Program Guide Service

[1] Unauthorized duplication of audio or video files is a violation of applicable laws.

About Giga Pocket Personal Video Recorder

Giga Pocket Personal Video Recorder is a unique set of tools that enhance your VAIO® computer's capabilities. Giga Pocket gives you a wide range of video viewing, recording, and playback capabilities, such as:

- Watching and recording television programs from your computer.
- Viewing and recording TV programming simultaneously.
- Setting and managing daily/weekly timer recording schedules.
- Managing Video Capsules (recorded video contents) on your computer.
- Recording personal video content from a videotape.
- Playing your Video Capsules on other computers.
- Operating Giga Pocket functions with a remote control device.
- Sharing Giga Pocket features and functions with other computers on a network.
- Transforming Video Capsules into gMovie format for viewing on your CLIÉ handheld.

For an explanation of Giga Pocket terms, see the Glossary.

Giga Pocket Personal Video Recorder includes:

- **Giga Pocket —** This application enables you to watch TV programs on your computer's display and record them onto the hard disk drive as Video Capsules for later playback.
- **Timer Recording Manager** — The Timer Recording Manager keeps track of all TV program recordings you have scheduled. This program also enables you to modify timer recordings.
- **Timer Recording Wizard** — The Wizard interface guides you through setting up a timer recording schedule. You can program one-time recordings and set up daily or weekly recurring recording schedules.
- **Giga Pocket Explorer** — The Giga Pocket Explorer program functions as your video file management system, and stores recorded Video Capsules as well as modified Playlists. Giga Pocket Explorer contains export/import functions for file format conversions.
- **Giga Pocket Server** — The Giga Pocket Server enables multiple computers on a network to use certain Giga Pocket software functions.
- **CLIÉ Converter** — The CLIÉ Converter is a plug-in application that enables the conversion of Video Capsules into gMovie format. You can change the format your Giga Pocket® contents and transfer them onto a Memory Stick® media for viewing with your Sony CLIÉ Handheld.

Accessing the Giga Pocket Help

For more information about Giga Pocket Personal Video Recorder, follow these steps:

1. Click **Start** in the Windows® taskbar and select **All Programs**.
2. Select **Giga Pocket**, **Help**, and click **Giga Pocket Help**.

Giga Pocket Personal Video Recorder maintains information about the software and Video Capsules on your computer's hard drive, in a folder named Giga Pocket V5. This folder and its contents are not intended for your direct maintenance. Please do not move, modify or delete this Giga Pocket Folder or any of its contents. Any alteration to this folder or its contents may cause your Giga Pocket software and Video Capsules to stop working properly.

Setting Up Giga Pocket Personal Video Recorder

This section illustrates how to set up the cables and connections for your Giga Pocket® Personal Video Recorder system.

✍ The hardware configuration of your computer may vary from the illustrations shown. See the specifications sheet for your computer on the Sony online support Web site at http://www.sony.com/pcsupport.

To set up TV connections

The best method of connecting your computer system, TV monitor or display, and cable service access, depends on the type of cable connection available in your home.

Your VAIO® computer is supplied with an antenna cable. Depending on your in-home cable access, you may require extra cables, adapters or connection equipment not supplied with your computer.

Connecting to standard cable access (CATV)

Option 1

1. Connect one end of the TV coaxial cable (supplied) to your cable service access.
2. Connect the other end of the TV coaxial cable to the VHF/UHF port on the back panel of your computer.

To connect in CATV mode (Option 1)

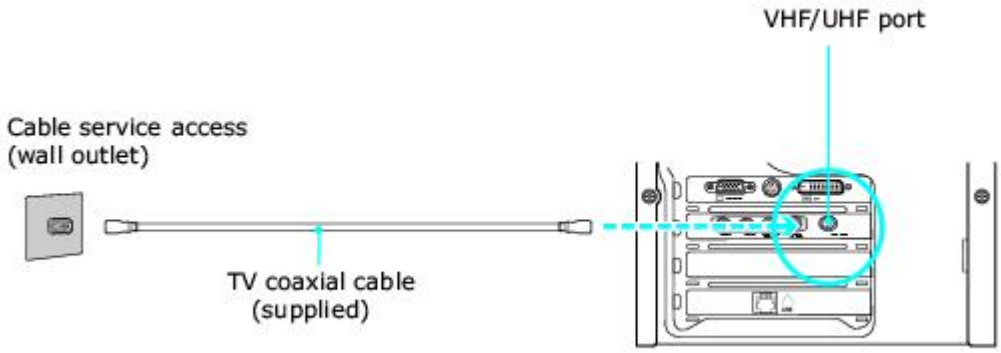

Option 2

1. Connect one end of a TV coaxial cable (optional) to your cable service access. Connect the other end to the single-connection end of a splitter adapter.
2. Connect the TV coaxial cable (supplied) to the double-connection end of the splitter adapter. Connect the other end to the VHF/UHF port on the back panel of your computer.
3. Connect a third TV coaxial cable (optional) to the double-connection end of the splitter adapter. Connect the other end to the VHF/UHF port on the rear of your TV monitor or display.

To connect in CATV mode (Option 2)

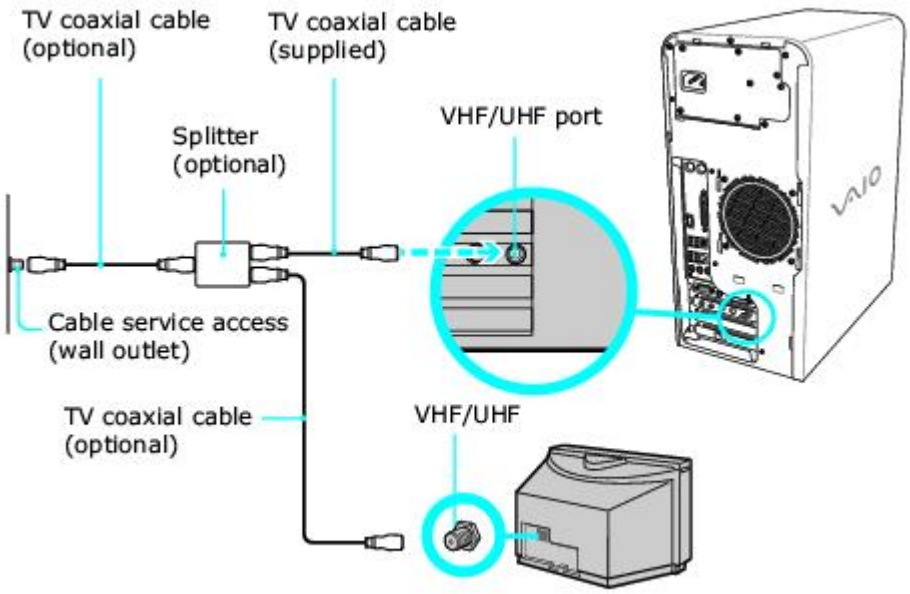

Connecting to a standard antenna (air)

You can connect your Giga Pocket system to an indoor/outdoor antenna system, using Option 1 or 2 from the previous section, Connecting to standard cable access (CATV). Depending on the type of antenna system in your home, your connection may require a VHF/UHF RF combiner/transformer (optional) to connect your computer and the indoor/outdoor antenna system.

If you are connecting to an indoor/outdoor antenna, you may need to reorient the antenna for best reception.

Option 1

1. Connect one end of a TV coaxial cable (optional) to your antenna outlet. Connect the other end to a VHF/UHF RF combiner/transformer (optional).
2. Connect the TV coaxial cable (supplied) from the combiner/transformer to the VHF/UHF port on the back panel of your computer.

Option 2

1. Connect both ends of the antenna's twin lead cable to the screw-type grips on the combiner/transformer.
2. Connect the TV coaxial cable (supplied) from the combiner/transformer to the VHF/UHF port on the back panel of your computer.

To connect in standard antenna mode (air)

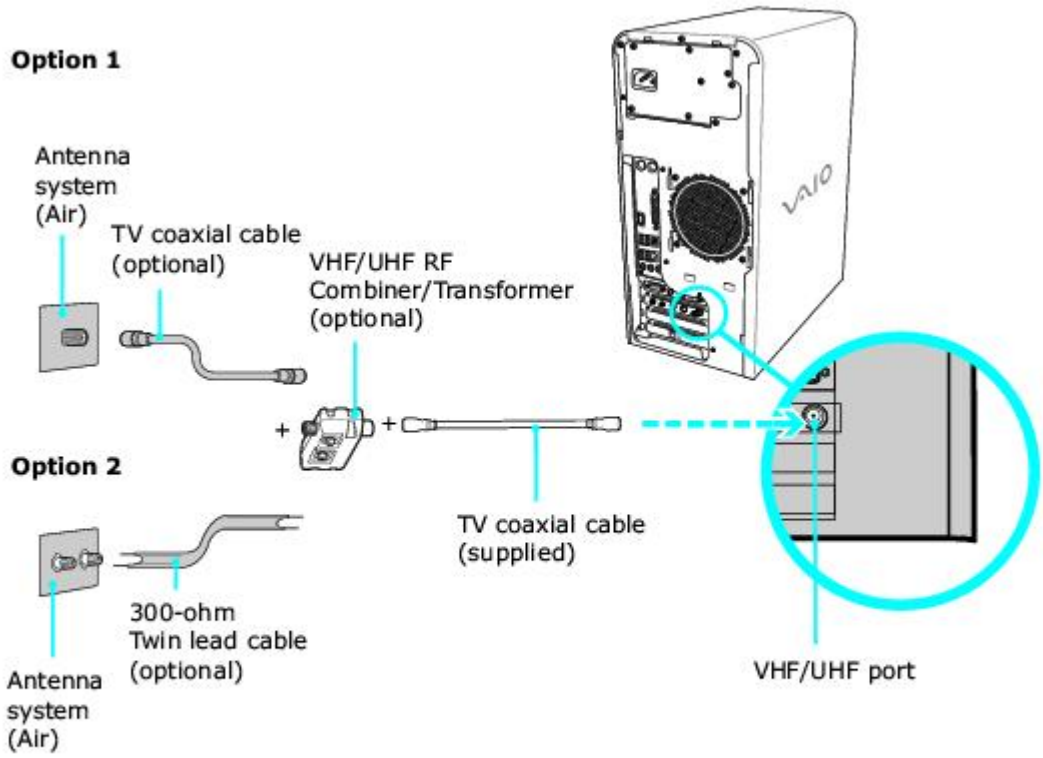

Your VAIO® computer is supplied with an certain cables. Depending on your in-home cable access, you may require extra cables, adapters or connection equipment not supplied with your computer.

Connecting with a cable or satellite set-top box (STB)

You can connect your Giga Pocket® system to cable service access that uses a set-top box (cable or satellite). When using the set-top box (STB) setup, you can only change channels through the STB, using its controls or supplied remote control.

When using the STB setup:

- The Giga Pocket remote control cannot be used to change TV channels. You can use the Giga Pocket remote control to set Giga Pocket software to the appropriate channel-out number (channel 3, 4, etc.) or to the direct video input specified by your cable or satellite service provider.
- A standard TV remote control cannot be used to change TV channels. You can use your TV remote control to set the TV to the channel-out number (channel 3, 4, etc.) or direct video input specified by your cable or satellite service provider.

- You may be able to use a universal remote control or commander to change TV channels, if the device is able to control the STB.

Cable/satellite service, equipment, and features, may vary between service providers. Contact your cable or satellite service provider for details on using STB equipment and accessories.

Option 1

1. Connect one end of a TV coaxial cable (optional) to your cable service access. Connect the other end to the In jack on the back panel of your set-top box (STB).
2. Connect a second TV coaxial cable (optional) to the Out jack on your STB. Connect the other end to the single-connection end of a splitter adapter (optional).
3. Connect a third TV coaxial cable (supplied) to the double-connection end of the splitter adapter. Connect the other end to the VHF/UHF port on the back panel of your computer.
4. Connect a fourth TV coaxial cable (optional) to the double-connection end of the splitter adapter. Connect the other end to the VHF/UHF port on the rear of your TV monitor or display.

To connect in STB mode (Option 1)

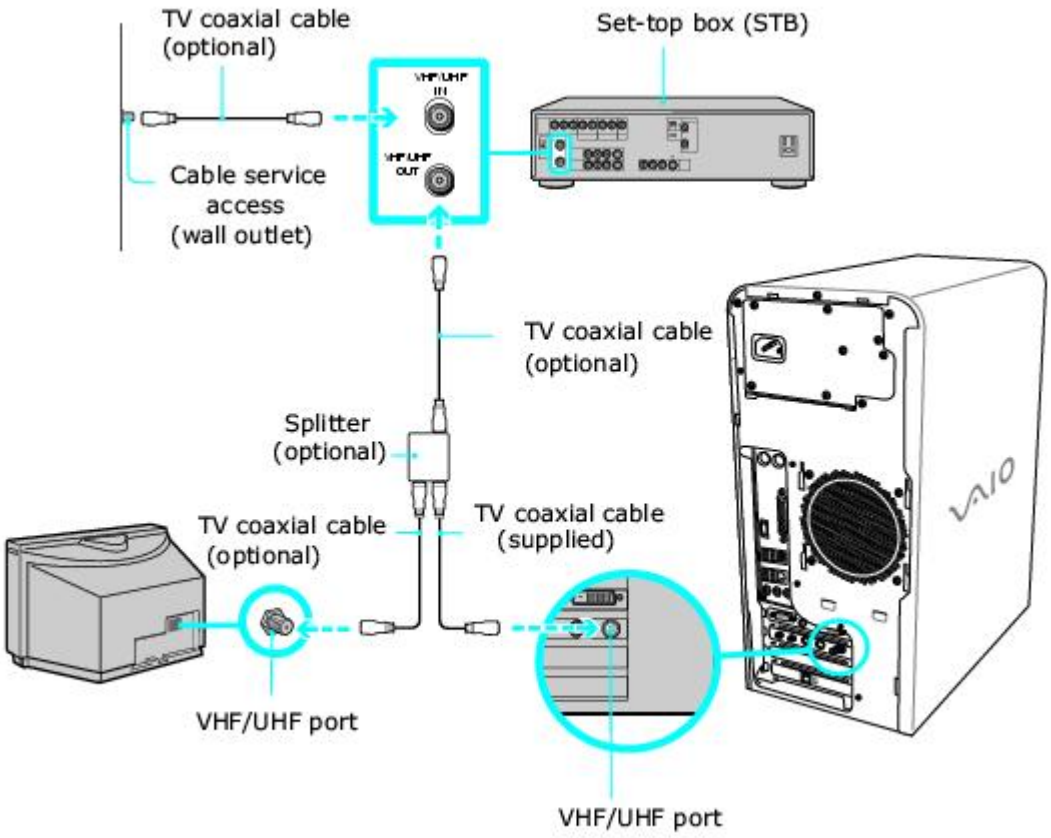

Option 2

1. Connect one end of the TV coaxial cable (supplied) to your cable service access. Connect the other end to the In jack on the back panel of your set-top box (STB).
2. Connect a second TV coaxial cable (optional) to the Out jack on your STB unit. Connect the other end to the VHF/UHF port on the rear of your TV monitor or display.
3. Connect one end of the stereo A/V dubbing cables with triple RCA jacks (optional) to the Video Out and Audio-OUT (L/R) jacks on the back panel of your STB unit, matching the plug and jack colors.
4. Connect the other RCA jacks of the stereo A/V dubbing cable into the Audio-R (IN), Audio-L (IN), and Composite video (IN) jacks on the back panel of your computer, matching the plug and jack colors.

To connect in STB mode (Option 2)

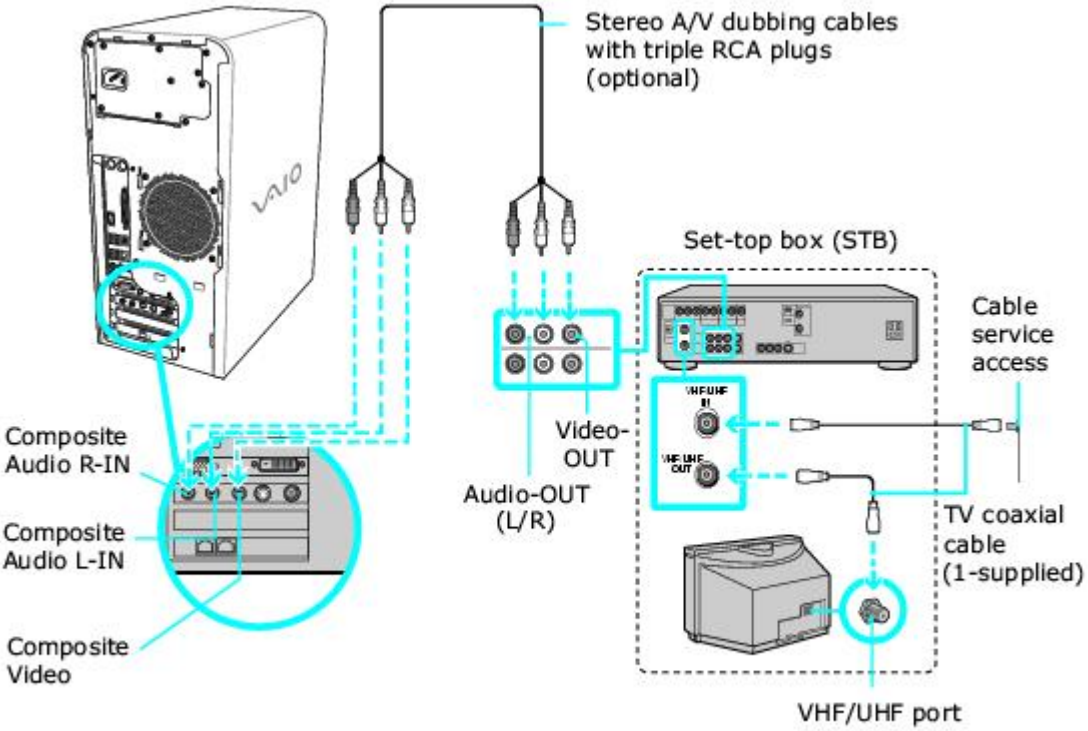
Stereo A/V dubbing cables
with triple RCA plugs
(optional)
Set-top box (STB)
Cable
service
access
Video-
OUT
Audio-OUT
(L/R)
Composite
Audio R-IN
Composite
Audio L-IN
Composite
Video
TV coaxial
cable
(1-supplied)
VHF/UHF port

Setting up additional equipment

This section illustrates how to set up additional equipment with the Giga Pocket® Personal Video Recorder System.

Your VAIO® computer has both audio and video connection capability. The connections are located behind the bottom panel on the front of the system unit. You can connect a compatible VCR, camcorder or other digital video device, using the audio jacks and video ports.

Connecting a device using an audio cable

1. Connect a dual audio cable (optional) to the composite audio L and R jacks, located on the either the front or back panels of your computer.
2. Connect the other ends of the dual audio cable to your device.

Connecting a device using an S-video or video cable

Your device may have either standard video or S-video connection capability.

Option 1

1. Connect an S-video cable (optional) directly into the S-video jack on either the front or back panel of your computer.
2. Connect the other end of the S-video cable into the appropriate port on your compatible device.
3. Connect an audio cable with double RCA plugs at each end (optional) into the composite audio L and R jacks.

Option 2

1. Connect a stereo A/V dubbing cable with triple RCA plugs at each end (optional) directly into the composite video port, composite audio L and R jacks, located on either the front or back panel of your computer.
2. Connect the other ends of the stereo A/V dubbing cable into the appropriate jacks on your compatible device.

To connect a VCR or camcorder (Option 1)

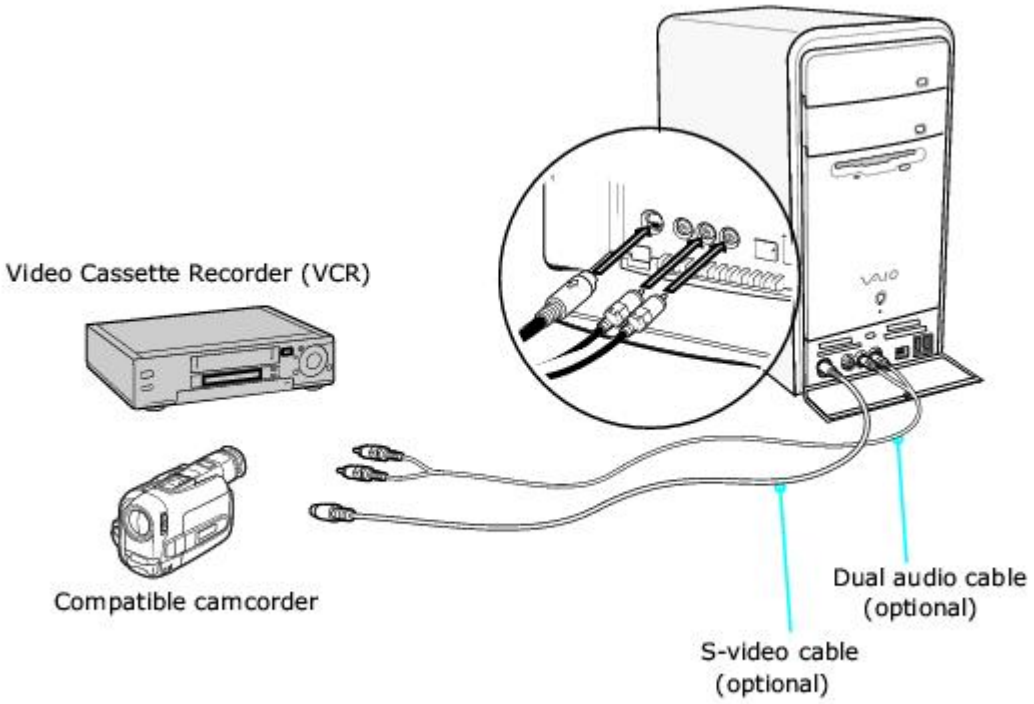

Connecting the infrared receiver

1. Connect the infrared receiver cable to a USB port located on either the front or back panel of your computer. Place the infrared receiver unit in a position that enables it to communicate with your remote control.

The infrared receiver must be visible in a line-of-sight with your remote control in order to function properly.

Connecting the infrared receiver (back panel)

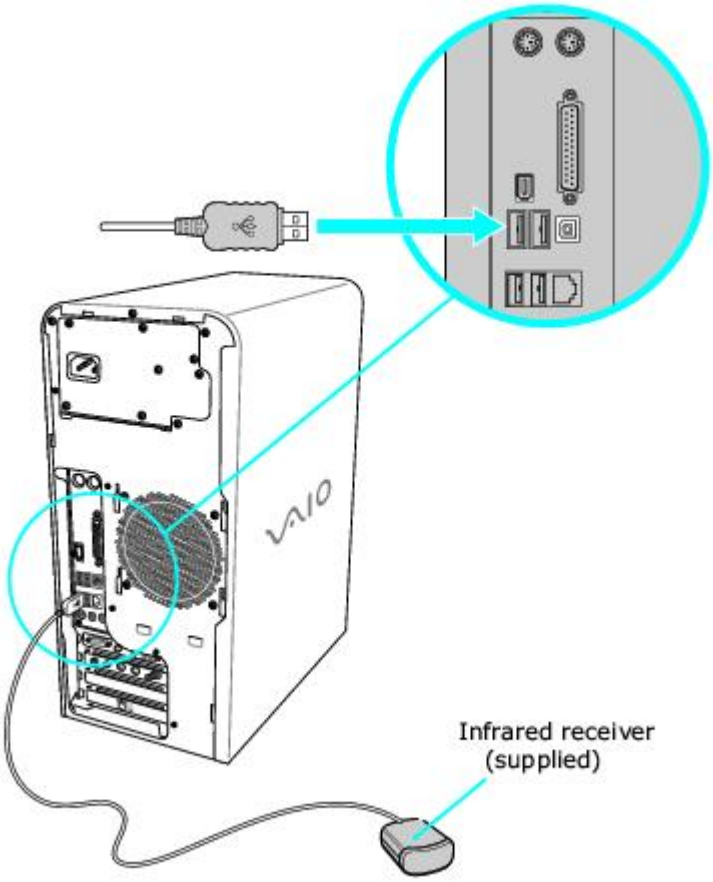

Setting Up Giga Pocket Software

Giga Pocket® Personal Video Recorder software features and functions are detailed in this section, enabling you to begin viewing or recording TV programs.

To set up TV viewing

When you start Giga Pocket Personal Video Recorder for the first time, you are automatically prompted to set the video input source for watching TV or cable TV (CATV) programs on your computer.

Setting Up Giga Pocket Software

Giga Pocket® Personal Video Recorder software features and functions are detailed in this section, enabling you to begin viewing or recording TV programs.

To set up TV viewing

When you start Giga Pocket Personal Video Recorder for the first time, you are automatically prompted to set the video input source for watching TV or cable TV (CATV) programs on your computer.

Starting Giga Pocket for TV Setup (For first time setup)

1. Verify that the computer time and date settings as displayed in the taskbar are correct.

   To adjust these settings:

   1. Right-click on the time clock shown in the taskbar notification area. A shortcut menu appears.
   2. Select **Adjust Date/Time**, and a dialog box appears.
   3. Correct the date and time, if necessary, and then click **Apply**.
   4. Click **OK** to close the dialog box.

2. Click **Start** in the Windows taskbar, point to **All Programs**, point to **Giga Pocket**, point to **All Software**, and then click **TV Setup**.

   The **TV Setup Wizard** appears.

TV Setup Wizard

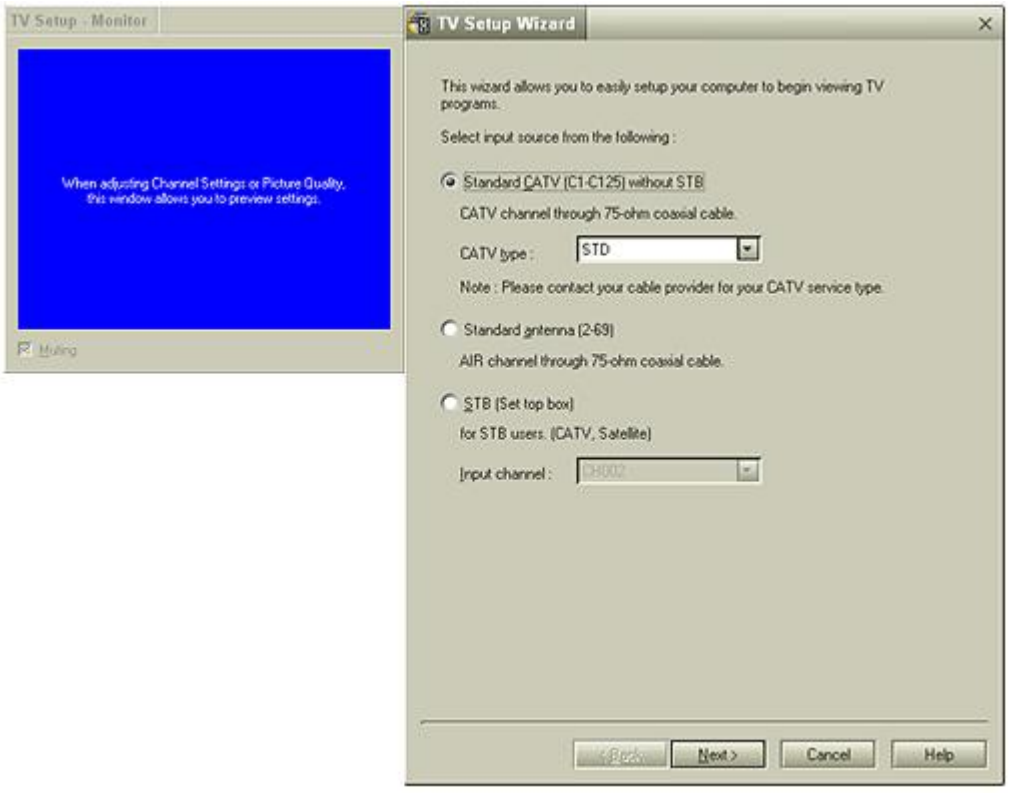
TV Setup - Monitor
When adjusting Channel Settings or Picture Quality, this window allows you to preview settings.
Muting
TV Setup Wizard
This wizard allows you to easily setup your computer to begin viewing TV programs.
Select input source from the following :
Standard CATV (C1-C125) without STB
CATV channel through 75-ohm coaxial cable.
CATV type :
STD
Note : Please contact your cable provider for your CATV service type.
Standard antenna (2-69)
AIR channel through 75-ohm coaxial cable.
STB (Set top box)
for STB users. (CATV, Satellite)
Input channel :
< Back
Next >
Cancel
Help

3. Depending on your cable service access, select **Standard CATV**, **Standard antenna**, or **set-top box (STB)**.

   1. **Standard CATV (C1-C125) without STB** — For this connection, you must use a coaxial cable directly (without an STB) to your computer. The default setting for this connection option is STD. Depending on your local connection requirements, HRC and IRC are also available.
   2. **Standard antenna (2-69)** — Select this option if you connect an aerial antenna's coaxial cable directly to your computer for watching TV programs.
   3. **STB (Set top box)** — Select this option if the broadcast signal is received from a set top box (STB) such as a digital cable or satellite box. Make sure that the Input channel on your STB (Ch. 3, Ch. 4, etc.) matches the Input channel listed in the Giga Pocket TV Setup dialog box.

   ✍ If you are not sure of the type of cable connection to use (Standard, HRC, or IRC), contact your cable provider for information.

4. Click **Next**. The wizard displays a dialog box that enables you to customize the channel listings.

5. Click **Auto Scan**.

   You can view the channel reception in the pop-up **TV Setup - Monitor** window.

TV Setup Wizard - Auto Scan

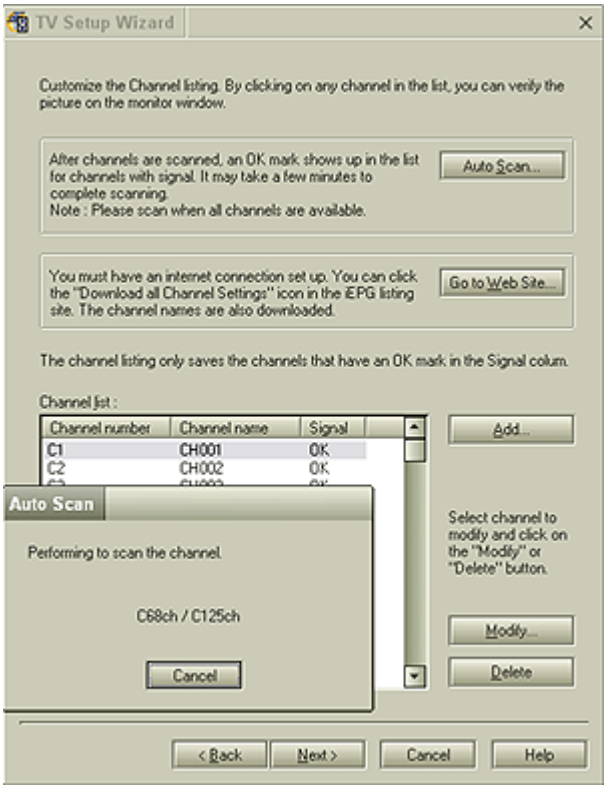
TV Setup Wizard
Customize the Channel listing. By clicking on any channel in the list, you can verify the picture on the monitor window.
After channels are scanned, an OK mark shows up in the list for channels with signal. It may take a few minutes to complete scanning.
Note : Please scan when all channels are available.
Auto Scan...
You must have an internet connection set up. You can click the "Download all Channel Settings" icon in the iEPG listing site. The channel names are also downloaded.
Go to Web Site...
The channel listing only saves the channels that have an OK mark in the Signal colum.
Channel list :
Channel number
Channel name
Signal
C1
CH001
OK
C2
CH002
OK
Add...
Auto Scan
Performing to scan the channel.
C68ch / C125ch
Cancel
Select channel to modify and click on the "Modify" or "Delete" button.
Modify...
Delete
< Back
Next >
Cancel
Help

If your computer is connected to the Internet, you can click **Go to Web site...** and download channel listings from the iEPG listing site.

6. Connect to the Internet.

7. Click **Go to Web site...** and download channel listings by clicking **Download all Channel Settings**.

8. Click **Next**. For the first time setup, you are prompted to set your Giga Pocket Server password.

TV Setup Wizard - Giga Pocket Server password

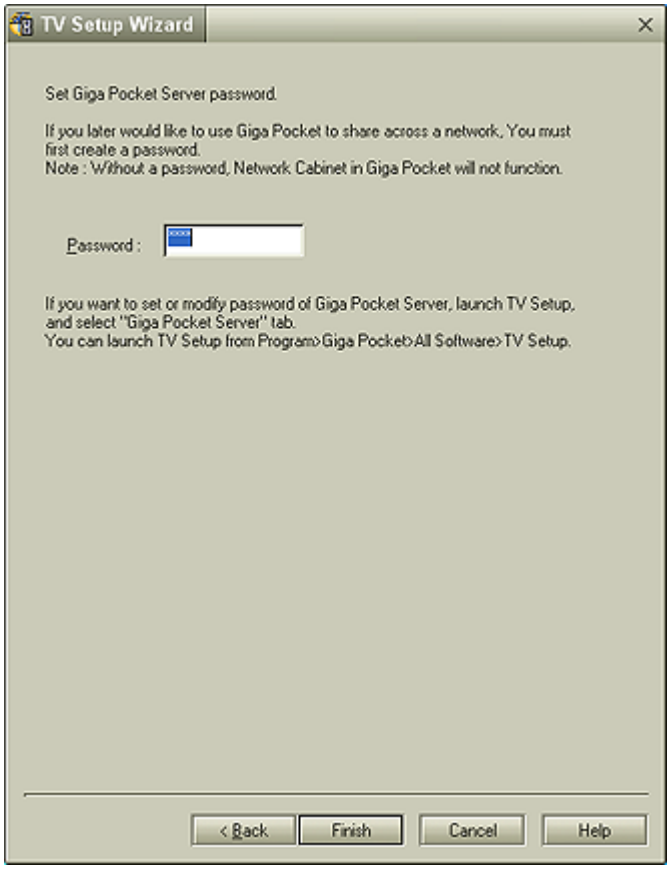
TV Setup Wizard
Set Giga Pocket Server password.
If you later would like to use Giga Pocket to share across a network, You must first create a password.
Note : Without a password, Network Cabinet in Giga Pocket will not function.
Password :
If you want to set or modify password of Giga Pocket Server, launch TV Setup, and select "Giga Pocket Server" tab.
You can launch TV Setup from Program>Giga Pocket>All Software>TV Setup.
< Back
Finish
Cancel
Help

9. Type in a password and click **Finish**.

Setting up your display (monitor)

When using Giga Pocket® Personal Video Recorder, set your display settings as follows:

- **Colors** — Use the default factory settings (32-bit).
- **Screen area** — Use the default video resolution.

If you change the default settings, you may experience poor image quality on your display.

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time. Even if a different user logs on using the fast switch feature, Giga Pocket is not available to any other user account. For more information, see Giga Pocket Help.

Giga Pocket

Giga Pocket® enables you to watch a TV program on your computer display while recording it onto your hard disk drive. Using the Giga Pocket Slip Play feature, you can view a program from the beginning even while it is being recorded.

Starting Giga Pocket

1. Click **Start** in the Windows® taskbar, point to **All Programs**, point to **Giga Pocket**, then click **Giga Pocket**. The **Giga Pocket** window appears.

Giga Pocket window

The current television broadcast is displayed, based on the selected channel.

Using the TV/Recording deck and Playback deck

Giga Pocket® features two decks on the main interface window: the TV/Recording deck and the Playback deck.

TV/Recording deck (detail)

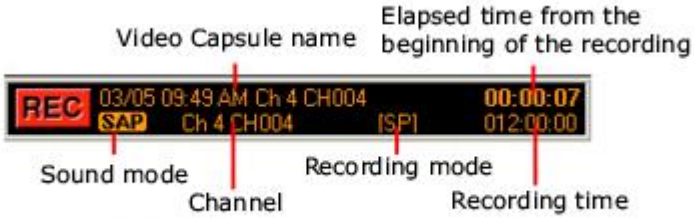

Use the TV/Recording deck to view programs and record Video Capsules. You can use the Playback deck of your Giga Pocket to play back a prerecorded Video Capsule.

Playback deck (detail)

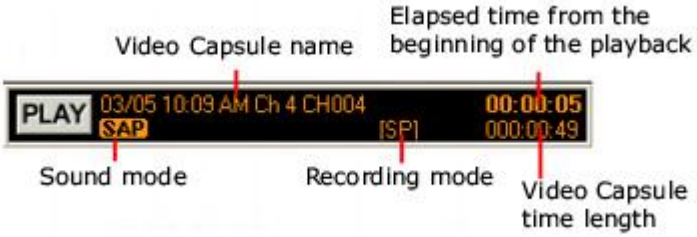

Recording a Video Capsule

Giga Pocket stores recorded images as Video Capsules. The Video Capsules provide file recording information, which can be viewed through Giga Pocket Explorer. Manage your Video Capsules with Giga Pocket Explorer.

✍ You cannot record a program into a previously recorded Video Capsule. All new content is recorded into a new Video Capsule.

1. Select your program by switching to the appropriate channel. Use the channel buttons located at the bottom of the Giga Pocket window, or use the right and left direction arrows on your keyboard.
2. Click **Record** , located at the bottom of the window, to begin recording your Video Capsule.
3. When your program has completed or you wish to end the Video Capsule, click **Stop** .

✍ To pause your recording session, click **Pause** . Click on it again to resume recording.

Using the Slip Play feature

While a program is being recorded on the TV/Recording deck, you can watch that same program from the beginning, using the Playback deck. You can begin using Slip Play to view your recording, beginning approximately ten seconds after your recording session begins.

1. From the menu bar, click **Functions**.
2. Select **Start Slip Play**.

Additional information about Giga Pocket

- Giga Pocket® can be used for external video recording. Depending on conditions, not all video images can be recorded or displayed.
- Video input from game consoles may not be recorded or displayed in Giga Pocket.
- When you input an image from a video player device, such as a VCR that is connected to your computer, the following images may not record or display:
  - The still images of a paused playback screen.
  - A screen without images, such as a blue screen.
  - The menu screens of the attached video player device.
- The Giga Pocket software's displayed image or images from a prerecorded Video Capsule may be interrupted or distorted under the following circumstances:
  - If you change the channel on an attached video player device.
  - If you switch input during the analog input from an attached video player device.
  - If you attempt to play back a damaged video tape.
  - If you press Pause during the recording process.
- When you play a Video Capsule for a few seconds from the end of the film roll using the scroll bar, you may not be able to see a displayed image.
- The computer's response may decrease when you attempt to play a Video Capsule while recording a TV program using Giga Pocket.

  Giga Pocket may interrupt or stop playback to allocate system resources for the timer recording event, if there are other applications running simultaneously. If this occurs, wait until Giga Pocket finishes recording before playing the Video Capsule.
- The timer recording may fail due to an "Event buffer of audio overflow" error in the following circumstances:
  - The input cable (coaxial or video cable) is disconnected after recording starts.
  - You record a TV channel that has no broadcast content.
  - You record video content from an old video tape with poor signal quality.
- The on-screen display may shift and split under some circumstances. If this occurs, switch the TV/Recording deck and the playback deck, or switch the channel. The recording proceeds even if the on-screen display shifts.
- Giga Pocket® software does not operate properly if used concurrently with other video applications, such as DVgate Plus or Click to DVD software programs.

Using the TV Program Web site

Click **Start** in the Windows taskbar, point to **All Programs**, point to **Giga Pocket,** and then select **Zap2it**.

You can also go directly to the Web site at http://www.sony.com/vaiotv.

Timer recording using the Internet Electronic Program Guide service requires an Internet connection. See the section, Setting up your Internet Electronic Program Guide service, for information on using this service.

Internet Electronic Program Guide (iEPG) Web site

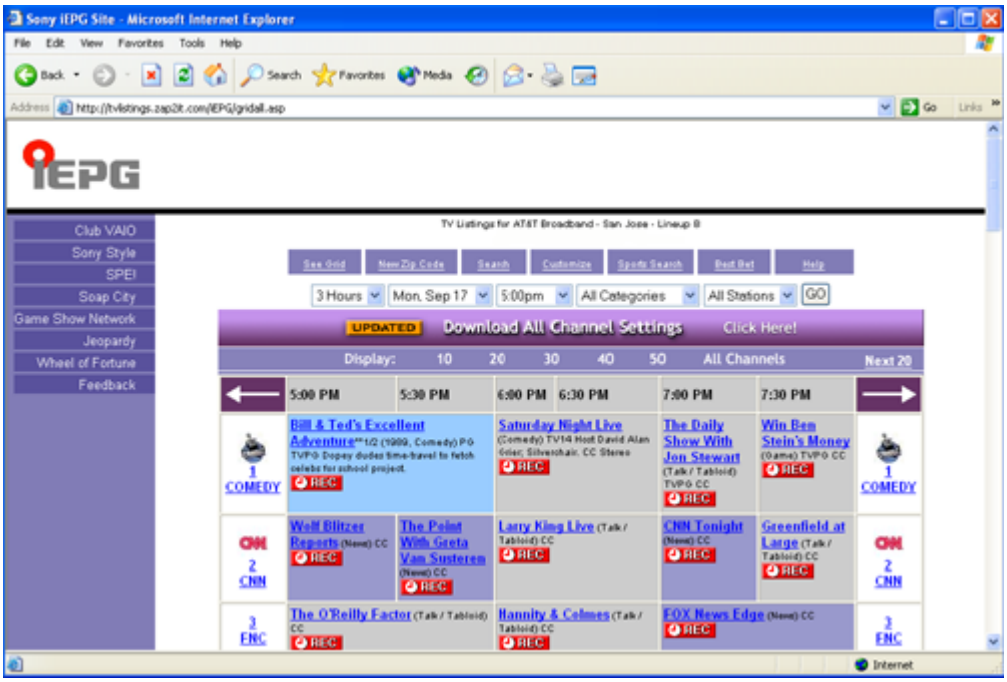

The appearance of the online channel guide Web site, its contents, and the accuracy of the TV listings are controlled by the TV listing provider and may change without notice. Pay-per-view channels can be accessed when making payments directly to the appropriate TV program provider.

You can schedule up to 100 timer recordings using Giga Pocket® Personal Video Recorder.

From the online channel guide, click on the **REC** icon REC to select the program you wish to record. The Timer Recording Wizard begins and the **New Timer Recording - Set Channel and Start Date and Time** window appears.

Timer recordings create virtual containers for the recorded content that are called Video Capsules.

Accessing Giga Pocket Help

For more information about Giga Pocket Personal Video Recorder, follow these steps:

1. Click **Start** in the Windows® taskbar and select **All Programs**.
2. Select **Giga Pocket**, **Help**, and click **Giga Pocket Help**.

Timer Recording Wizard

With the Timer Recording Wizard, you can set, adjust, and cancel the timer recording settings.

Using the Timer Recording Wizard

1. Click **Start** in the Windows taskbar, select **All Programs**, then select **Giga Pocket**.
2. Select **Timer Recording Wizard**. The **Timer Recording Wizard** dialog box appears.

Timer Recording Wizard

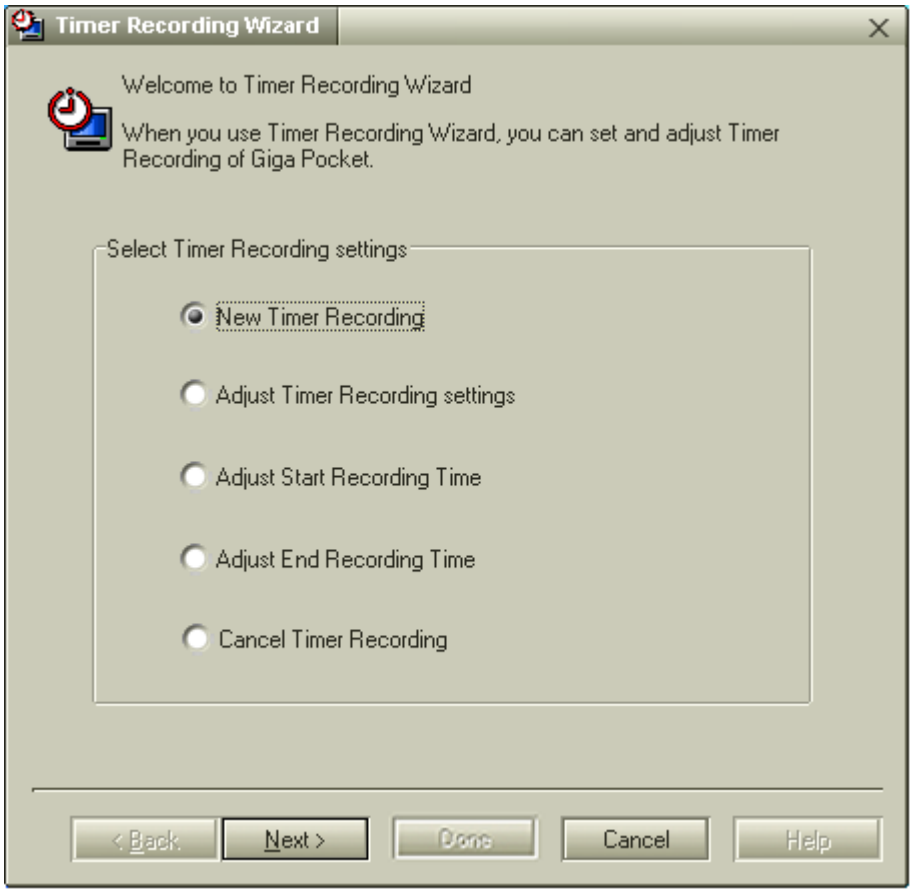
Timer Recording Wizard
Welcome to Timer Recording Wizard
When you use Timer Recording Wizard, you can set and adjust Timer Recording of Giga Pocket.
Select Timer Recording settings
New Timer Recording
Adjust Timer Recording settings
Adjust Start Recording Time
Adjust End Recording Time
Cancel Timer Recording
< Back
Next >
Done
Cancel
Help

3. Select the desired option from the **Select Timer Recording Settings** menu and click **Next**. Follow the on-screen instructions. Click **Help** if you need more information about selecting timer recording settings.

New Timer Recording - Set Channel, Start Date and Time

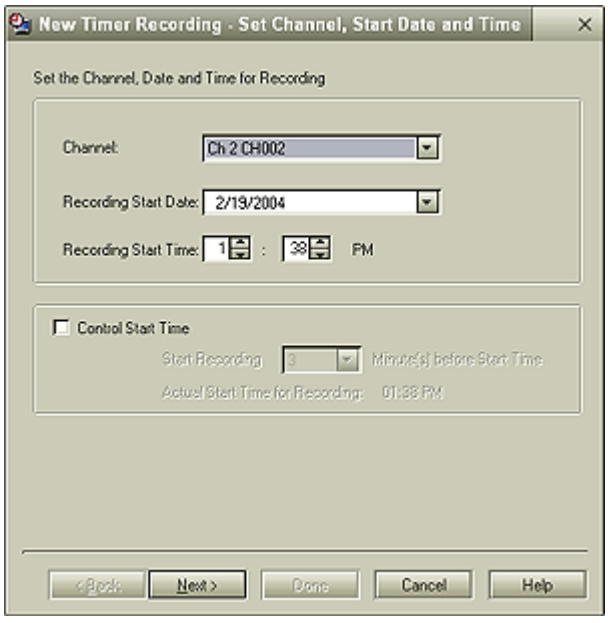

4. Verify that the information is correct and click **Next**. The programming station and time information is automatically programmed into the appropriate Timer Recording Wizard fields.
5. You can set the stop time for your timer recording and select the recording mode. The stop time is automatically programmed into the Timer Recording Wizard. Verify the stop time, choose a recording mode, and then click **Next** .

Recording Mode	Description

Standard Play (SP) Standard recording mode (MPEG-2).

High Quality (HQ) Image quality is improved, but recording requires more space on the hard disk drive as compared to using SP or LP recording modes (MPEG-2).

Long Play (LP) Image quality is reduced, but recording requires less space on the hard disk drive as compared to using HQ recording mode (MPEG-1).

New Timer Recording - Set Stop Time and Recording Mode

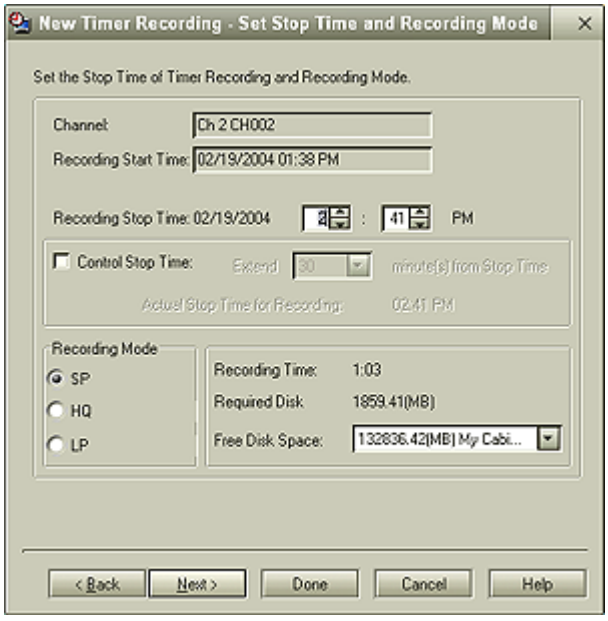

6. From the **New Timer Recording - Set Details** dialog box, you can customize the timer recording schedule. Select how often you want to record the program.

New Timer Recording - Set Details

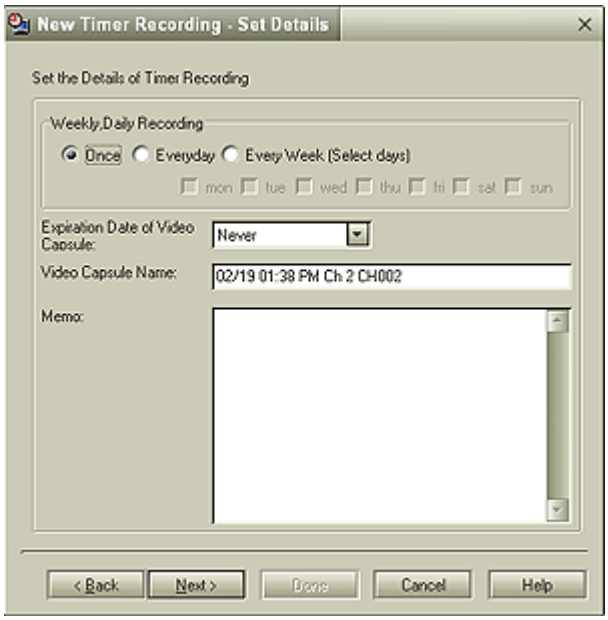

7. Select a date for the recorded program to be automatically deleted from your hard disk drive, using the **Expiration date of Video Capsule** drop-down list.

To maintain adequate space on your hard disk drive, Giga Pocket® Personal Video Recorder enables you to set an expiration date for your Video Capsules to be automatically deleted.

8. Click **Done** to review your setting preferences. The **New Timer Recording - Confirm** dialog box appears. Click **Next**.

New Timer Recording - Confirm

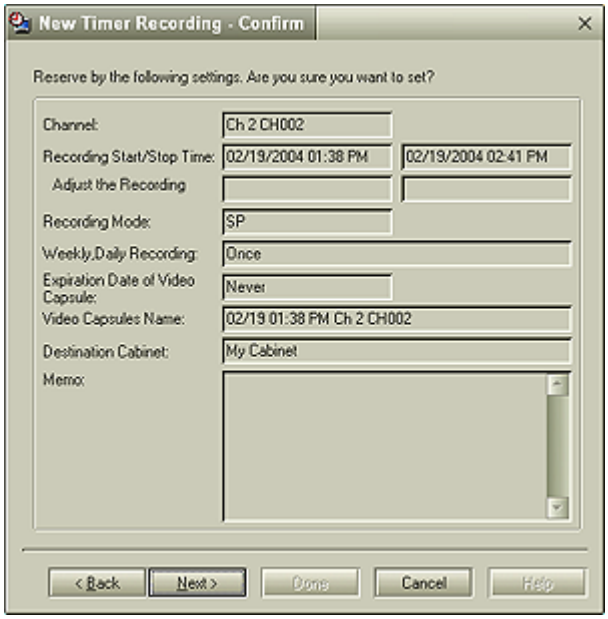

9. The **New Timer Recording - Completed** dialog box appears. Click **Finish**.

New Timer Recording - Completed

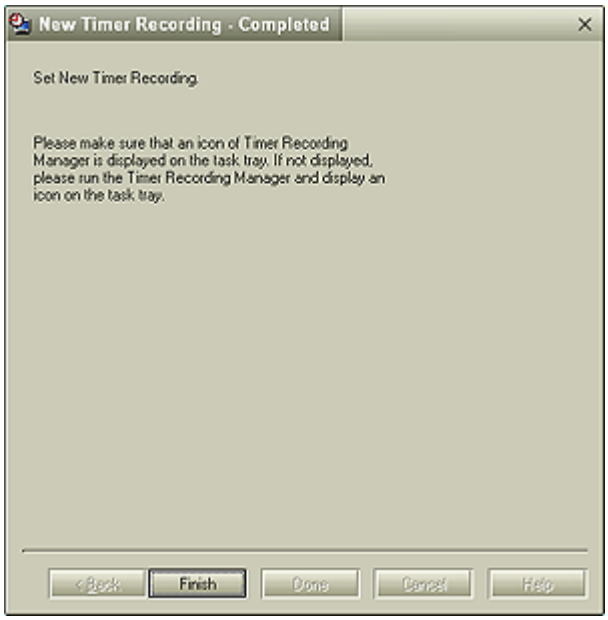
New Timer Recording - Completed
Set New Timer Recording
Please make sure that an icon of Timer Recording Manager is displayed on the task tray. If not displayed, please run the Timer Recording Manager and display an icon on the task tray.
< Back
Finish
Done
Cancel
Help

Additional information about the Timer Recording Wizard

- Timer recording requires approximately 30 seconds (pre-recording) preparation time prior to beginning each recording session. Please keep this in mind when setting up multiple, back-to-back recording sessions. Giga Pocket software stops the current timer recording, pauses to prepare, and then begins the next timer recording according to the set start time. The length of your first Video Capsule is approximately 30 seconds shorter than the actual time set.

  You may experience some timing problems with multiple recording sessions when the second timer recording is preset as a daily or weekly recorded event. The first timer recording may end as early as 60 seconds sooner than the set stop time.

- Scheduled daily or weekly timer recording sessions do not occur if your hard disk drive does not have sufficient space. Giga Pocket software does not allow a new Video Capsule to be created if there is less than 100 MB of free space on the hard disk drive. These scheduled events resume at their scheduled time, as hard disk drive space becomes available.

- Approximately three minutes before Giga Pocket begins a timer recording and during a timer recording, you must avoid:

  - Starting up or using other software applications.

  - Setting up, changing, or deleting timer recordings.

  - All activities that may access the hard disk drive, such as copying files.

Accessing Giga Pocket Help

For more information about Giga Pocket Personal Video Recorder, follow these steps:

1. Click **Start** in the Windows® taskbar and select **All Programs**.

2. Select **Giga Pocket**, **Help**, and click **Giga Pocket Help**.

Timer Recording Manager

The Timer Recording Manager keeps track of all scheduled TV recordings. Your computer settings, by default, are set to start Timer Recording Manager automatically when the computer is turned on.

Timer recordings are being performed when the icon (Timer Recording Manager) is visible in the Windows taskbar. The timer recording does not start unless the Timer Recording Manager application is available. For the Timer Recorder Manager application to be available, your computer should be in Stand by or Hibernate mode, if the system is not in active use. You can schedule up to 100 programs at a time, for timer recording with the Timer Recording Manager.

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time. If a different user logs on using the fast switch feature, the Timer Recording feature is not available to another user account. The Timer Recording Manager icon appears in the taskbar of the first user to log on.

Using the Timer Recording Manager

1. Click **Start** in the Windows® taskbar, select **All Programs**, select **Giga Pocket**, and then click **All Software**.
2. Click **Timer Recording Manager**.

   The T**imer Recording Manager** window appears.

Timer Recording Manager

- **Windows Stand by** — Places the Windows operating system into Stand by mode until the preset timer recording is set to begin, or if a Video Capsule is set to expire. Windows automatically starts and performs the appropriate action.
- **Interrupt Current Recording** — Stops the current timer recording. Use this option when you wish to end the current recording session.
- **Timer Recording List** — Displays a list of timer recordings that have been performed, as well as pending timer recordings. If a daily/weekly timer recording is set, only the current recording session is shown.

✍ The total number of timer recordings displayed does not exceed 100.

Double-click on a recorded timer recording to start playback in Giga Pocket.

3. Click **Hide** to restore **Timer Recording Manager** to the taskbar.

✍ If you turn off your computer, the timer recording function is disabled.

Viewing your selected program recording schedule

You can easily view the programs you have selected to record, using Giga Pocket® Personal Video Recorder. The Timer Recording Manager feature enables you to change or cancel your timer recording at any time.

To view your scheduled timer recordings, follow these steps:

1. Double-click on the **Timer Recording Manager** icon , located in the Windows® taskbar.

   Review your scheduled timer recordings and make any desired changes or cancellations.

2. Click **Hide** to return the icon to the taskbar.

You do not have to be connected to the Internet to use the Timer Recording Manager feature.

Additional information about the Timer Recording Manager

- When creating a timer recording, it is important to remember the following information:
  - The timer recording function is disabled if you turn your computer off.
  - Your computer should be in Stand by or Hibernate mode, if the system is not in active use.
  - Disable screensavers and any other applications that may access your computer's hard disk drive during the timer recording.
  - If you are using a set-top box (STB), make sure it is turned on and set to the channel you want to record.
- When you set up a timer recording using Giga Pocket software, always use the Timer Recording Manager. If the Timer Recording Manager is not set up, the recording does not start, even if you set the timer recording settings with the Timer Recording Wizard.

  Your computer's default setting enables Timer Recording Manager to start automatically when the computer is started.
- The timer recording starts a few seconds earlier than the specified recording start time.
- Under certain circumstances, a daily or weekly timer recording may not be executed the second and subsequent times.
- A timer recording may fail if the computer's clock setting is changed right before the preset recording time. Before changing the computer's clock setting, verify that there are no timer recordings set to begin.

  Close the Time Recording Manager before changing the computer's clock setting. Restart Timer Recording Manager after you have changed the time setting.
- If a different user logs on, using the Fast User Switch feature, the Timer Recording feature is not available to other user accounts. The Timer Recording Manager icon appears in the taskbar notification area for the first user to log on.

Accessing Giga Pocket Help

For more information about Giga Pocket Personal Video Recorder, follow these steps:

1. Click **Start** in the Windows® taskbar and select **All Programs**.
2. Select **Giga Pocket**, **Help**, and click **Giga Pocket Help**.

Giga Pocket Explorer

The Giga Pocket Explorer application serves as a file manager for your Video Capsules. Video Capsules are managed in Cabinets.

Giga Pocket Explorer enables you to play back Video Capsules using Giga Pocket. You can import MPEG files, that were created with compatible Sony applications, and export Video Capsules as AVI or MPEG files.

Using Giga Pocket Explorer

1. Click **Start** in the Windows taskbar, point to **All Programs**, point to **Giga Pocket**, point to **Giga Pocket Explorer**.

   The **Giga Pocket Explorer** main window appears.

2. Click on the desired Cabinet to see a list of saved Video Capsules.

Giga Pocket Explorer

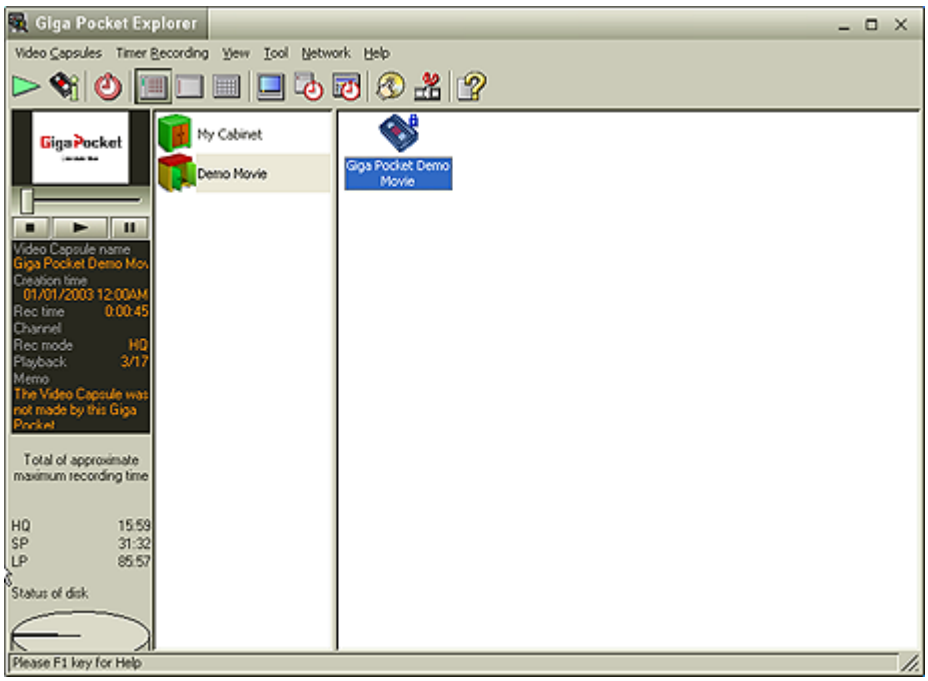

Using the Giga Pocket Explorer Toolbar functions

From the Giga Pocket Explorer toolbar, you can:

- Begin playing a Video Capsule.
- Display information about a Video Capsule.
- Set a new timer recording.
- Change the display views for your video contents.
  - Icon view.
  - List view.
  - Calendar view.
- Start Giga Pocket to play a selected Video Capsule.
- Start Timer Recording Wizard to set up timer recordings.
- Access the Internet Electronic Program Guide Web site.
- Start Click to DVD software to burn Video Capsules to DVD recordable media. See Click to DVD software Help for more details.
- Start DVgate Plus software to edit your Video Capsules.
- Start Giga Pocket Help to obtain further assistance.

Accessing Click to DVD Help

For additional information about using Click to DVD software features, follow these steps to access the Help.

1. Click **Start** in the Windows® taskbar and point to **All Programs**.
2. Point to **Click to DVD** and click **Click to DVD Help**.

Accessing DVgate Plus Help

For additional information about using DVgate Plus software features, follow these steps to access the Help.

1. Click **Start** in the Windows taskbar and point to **All Programs**.
2. Point to **DVgate Plus** and click **DVgate Plus Help**.

Recording Video Capsules onto recordable DVD media

You can record Video Capsules to recordable DVD media with the Make DVD feature.

The Click to DVD software must be installed in order to burn Video Capsules to recordable DVD media.

1. From the **Giga Pocket Explorer** main window, select the Video Capsules you want to burn onto a recordable DVD.
2. On the Giga Pocket Explorer Toolbar, click .
3. The Click to DVD software program starts. Follow the on-screen instructions.

Exporting Video Capsules

You can export your Video Capsules as MPEG-1, MPEG-2, or AVI file formats for viewing on external media.

1. In the list area, right-click the Video Capsule you want to export. A shortcut menu appears.
2. Select **Export**. The **Export** dialog box appears.

Export

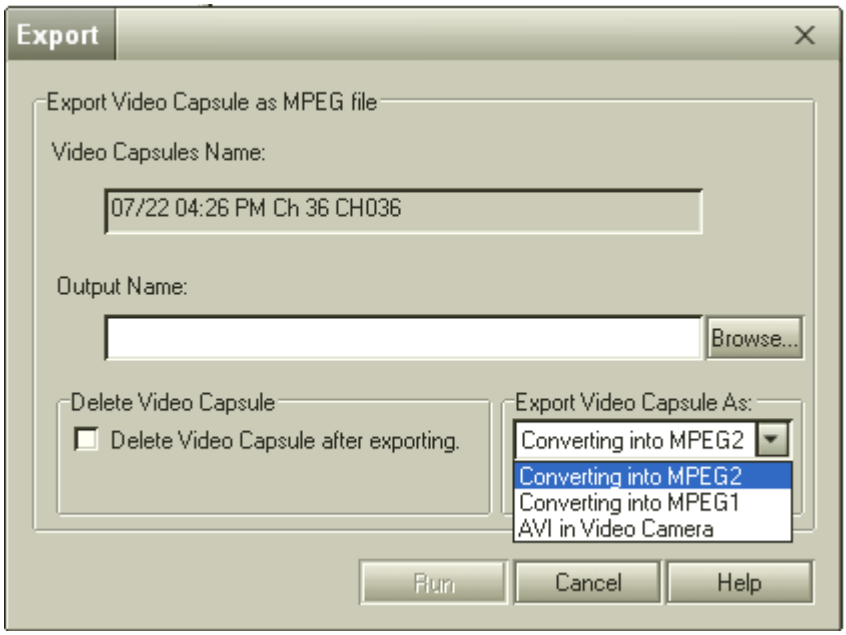

3. Enter an output name for the file you want to export and specify the location for the exported file.

   You can select the option, **Delete Video Capsule after export**. If you do not want to delete the Video Capsule after export, leave the option disabled.

4. In the section, **Export Video Capsule As:**, select to convert to an AVI, MPEG-1, or MPEG-2 format.
5. Click **Run** to begin exporting.

Some conversion formats may not be available, depending on the recording mode that was used to create the Video Capsule.

Additional information about using Giga Pocket Explorer

- Video Capsules that are recorded using High Quality (HQ) or Standard Play (SP) mode can be converted and exported as MPEG-1, MPEG-2, and AVI files. If you wish to play your Video Capsule in a different system environment, you can convert and export your Video Capsule using MPEG- 1 format.

- Video Capsules that are recorded using Long Play (LP) mode can be converted and exported as MPEG-1 files.

- You can convert an imported MPEG file into a Video Capsule, only if the file was created using DVgate Plus or other VAIO AV software programs.

Using Network Cabinets

Giga Pocket Explorer enables you to connect to Video Capsules in network cabinets located on other computers in a network. These network cabinets can be accessed through the Giga Pocket Explorer main window when you are connected to the network.

Connecting to Network Cabinets

1. On the Giga Pocket Explorer menu, select **Network,** and then **Connect/Disconnect**. The **Connect/Disconnect Server** dialog box appears.

Connect/Disconnect Server

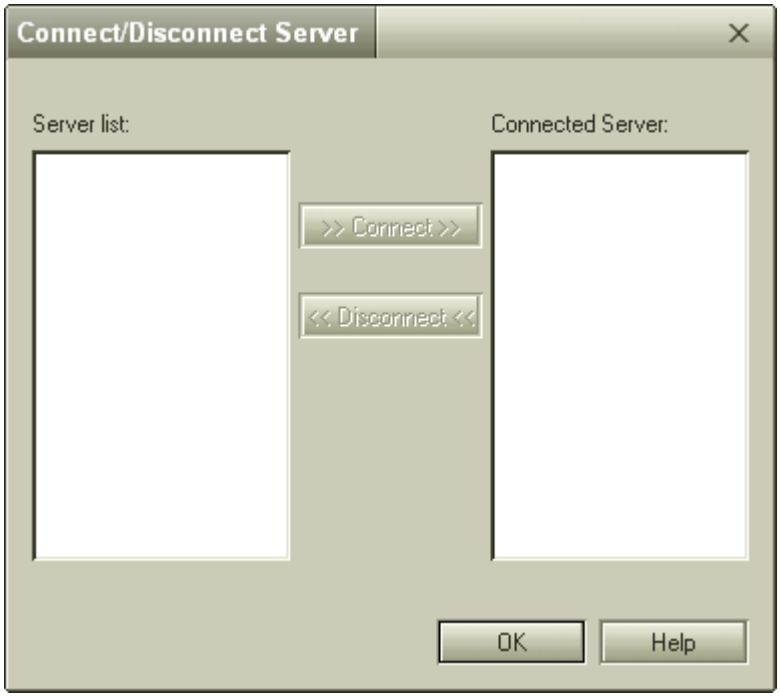

2. Select the server you want to connect to from the **Server list**.
3. Click **Connect** to add the selected server to the **Connected Server** list, then click **OK**. The server is connected.
4. To disconnect, repeat step 1, then select the server you want to disconnect from the **Connected Server** list.
5. Click **Disconnect**, then click **OK**. The server is disconnected.

Accessing Giga Pocket Help

For more information about Giga Pocket Personal Video Recorder, follow these steps:

1. Click **Start** in the Windows® taskbar and select **All Programs**.
2. Select **Giga Pocket**, **Help**, and click **Giga Pocket Help**.

CLIÉ Converter

The CLIÉ® Converter is a plug-in application that enables the conversion of Video Capsules. You can convert your Giga Pocket® Video Capsules and save to a Memory Stick® media, or HotSync® directly to your Sony® CLIÉ® Handheld. In order to use the CLIÉ Converter plug-in application, make sure you have installed all required software for the CLIÉ handheld.

✍ The Sony CLIÉ Handheld personal entertainment organizers provide a rich and compelling handheld computing experience. Powered by the Palm operating system, the CLIÉ handheld is ready to deliver music and video with amazing clarity. For more information on this exciting device, go to the Sony Style Web site at http://sonystyle.com/vaio/clie.

Starting CLIÉ Converter

1. Click **Start** in the Windows taskbar and point to **All Programs**.

2. Point to **Giga Pocket**, point to **Plug-ins**, and then click **CLIÉ Converter**. The **Giga Pocket -> CLIÉ Converter** main window appears.

Giga Pocket -> CLIÉ Converter

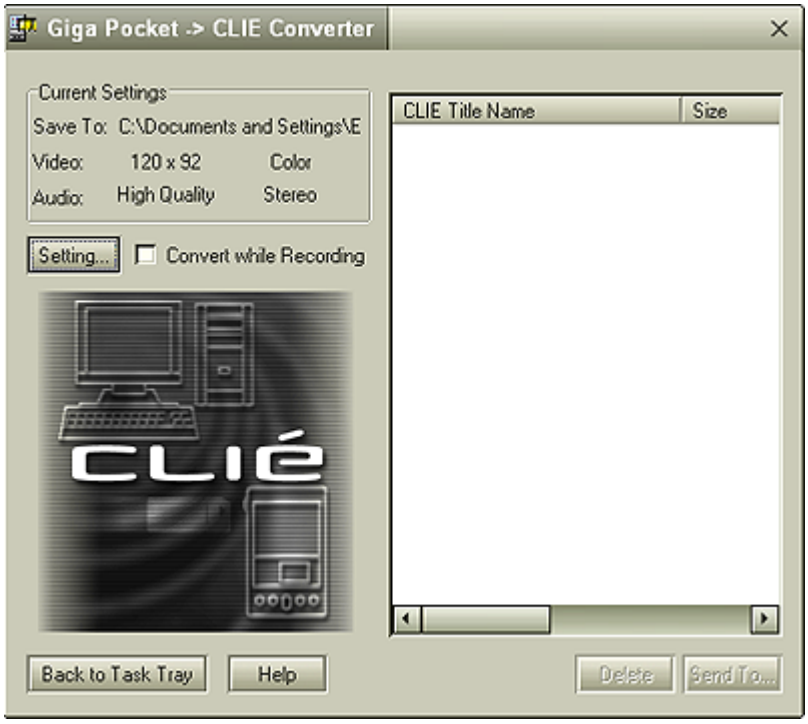

Converting Video Capsules

1. From the **Giga Pocket -> CLIÉ Converter** window, click the **Setting...** button. The Settings dialog box appears. Enter your desired settings and click **OK**.

2. Start Giga Pocket Explorer as follows:

    1. Click **Start** in the Windows taskbar, and then select **All Programs**.

    2. Select **Giga Pocket**, and then click **Giga Pocket Explorer**.

    3. Resize the **Giga Pocket Explorer** window so that the **Giga Pocket -> CLIÉ Converter** window is visible.

    4. Click on the **Cabinet** icon to display the contents in the list area.

    5. Drag the Video Capsule from the **Giga Pocket Explorer** window and drop it in the list area of the **Giga Pocket -> CLIÉ Converter** window. The Video Capsule automatically converts into a video file.

        During conversion, the **Convert to CLIÉ** window appears, displaying the conversion status. When conversion is complete, the window automatically closes.

        To convert multiple Video Capsules:

        1. Hold down the **Ctrl** key while selecting Video Capsules in Giga Pocket Explorer.

        2. Drag all selected Video Capsules to the **Giga Pocket -> CLIÉ Converter** window.

The conversion process may take time, depending on the settings selected.

Transferring converted video files to a Memory Stick media

1. Insert a Memory Stick® media into the Memory Stick media slot on your computer.
2. From the **Giga Pocket -> CLIÉ Converter** main window, click to select the videos you want to transfer to the Memory Stick media.
3. Click **Send To**. The **Send To** dialog box appears.
4. Select **Using Memory Stick** as the transfer destination. Click **OK**.

   During transfer, the **Forwarding** dialog box appears, displaying the transfer status.
5. When transfer is complete, click **OK**.

Your converted video files can be played back on CLIÉ Handhelds that support the use of a Memory Stick media.

Transferring converted video files using the HotSync operation

You can transfer your converted video files directly to your CLIÉ Handheld, when you start a HotSync® operation.

1. From the **Giga Pocket -> CLIÉ Converter** main window, click to select the videos you want to transfer using the HotSync operation.
2. Click **Send To**. The **Send To** dialog box appears.
3. Select **Using HotSync** as the transfer destination. Designate a user name, if applicable to your handheld's configuration. Click **OK**.
4. The **Send to HotSync** dialog box appears. Follow the on-screen instructions and click **OK**.

For more information about the HotSync operation, see the information supplied with your CLIÉ Handheld.

Accessing CLIÉ Converter Help

For more information about using the CLIÉ Converter plug-in application, follow these steps:

1. Click **Start** in the Windows taskbar and point to **All Programs**.
2. Point to **Giga Pocket**, point to **Help**, and then click **CLIÉ Converter Help**.

Glossary

The most common terms for Giga Pocket Personal Video Recorder software are defined below.

Cabinet A cabinet acts as a container for Video Capsules in Giga Pocket Explorer. A network cabinet is located on other computers in a network environment.

CATV Refers to Community Access Television, otherwise known as cable television.

Clip A clip is a movie or image that serves as video content material.

Expiration date A Video Capsule is stored on the hard disk drive for a preset period of time. When this time has expired, the Video Capsule is automatically deleted.

Film roll During Video Capsule playback, a snapshot view of the scenes are captured on a film roll. You can scroll freely through the film roll to view different scenes.

HotSync® Registered trade name for the method of linking between a handheld device and a larger computer, such as a desktop or notebook computer.

Management information Management information contains the creation date of Video Capsules and their thumbnails. This information is required for preview.

MPEG file A file that contains compressed moving pictures using the MPEG standard, with.mpg as the file name extension.

Safety Tab Removing the safety tab from a Video Capsule prevents accidental erasing of your video data.

Slip play This feature allows you to view delayed video playback. While your recording is in progress, you are able to view the recording from the beginning.

Snapshot A snapshot is a miniature view displayed on the film roll in Giga Pocket® and the preview monitor in Giga Pocket Explorer.

Stand by mode Stand by mode is a power saving mode that is set up by using the Windows® operating system. Your computer stays in this power saving mode until approximately 5 minutes before the timer recording is due to begin.

STB Refers to set-top box, also known as a cable or satellite box.

Thumbnail A thumbnail is a miniature view on recorded Video Capsules or in playback by Giga Pocket. The main thumbnail is displayed in calendar view or in the Giga Pocket Explorer list area.

Timer recording A timer recording is a preset video recording event.

Video Capsule A Video Capsule is a virtual container that holds the video images recorded with Giga Pocket Recorder. A Video Capsule is created on your computer hard disk drive and managed with Giga Pocket Explorer.

Accessing Giga Pocket Help

For more information about Giga Pocket, follow these steps:

1. Click **Start** in the Windows taskbar and point to **All Programs**.
2. Point to **Giga Pocket**, point to **Help**, and then select **Giga Pocket Help**.

Internet Electronic Program Guide Service

Internet Electronic Program Guide is a free, online service that enables quick and easy access to your local TV listings. You can use the Internet Electronic Program Guide service with your Giga Pocket® Personal Video Recorder for a "one-click" set up of timer recordings and record your favorite TV programs[1].

Giga Pocket Personal Video Recorder must be set up and configured correctly before you can use the Internet Electronic Program Guide service.

You must read and accept the User Agreement before accessing the Internet Electronic Program Guide Web site (first time only). The Internet Electronic Program Guide service is available only to users in the United States.

[1] Unauthorized duplication of audio or video files is a violation of applicable laws.

Setting up your Internet Electronic Program Guide service

You must be connected to the Internet, before setting up your Internet Electronic Program Guide service.

✍ Sony recommends using Microsoft® Internet Explorer as your Web browser to access the Internet Electronic Program Guide service.

To set up Internet Electronic Program Guide service, follow these steps:

1. Click **Start** in the Windows® taskbar and point to **All Programs**.
2. Point to **Giga Pocket**, then click **TV Program Web site**. Microsoft® Internet Explorer starts, and you are directed to the Internet Electronic Program Guide Web site.
3. The **Terms of Use** window appears. Click **I accept**, to continue.

   The **Welcome and Registration** window appears.

Internet Electronic Program Guide Welcome and Registration

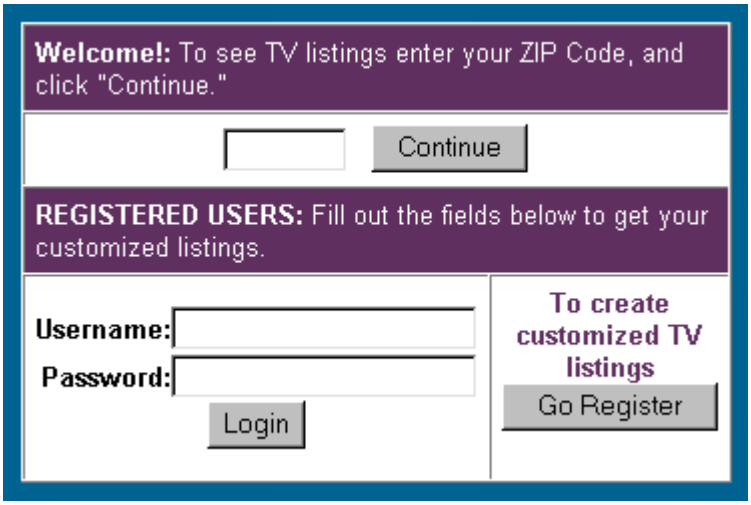
Welcome!: To see TV listings enter your ZIP Code, and click "Continue."
Continue
REGISTERED USERS: Fill out the fields below to get your customized listings.
Username:
Password:
Login
To create customized TV listings
Go Register

4. In the **Welcome!** section, enter your 5-digit zip code and click **Continue**. The **Choose Your Provider** window appears, listing all TV providers or TV services available in your area.
5. Select your TV provider and then click **Confirm Channel Lineup**. The **Confirm Lineup** window appears, listing available channels by number and name.
6. Click **Yes** if the channel lineup is correct. If channel lineup is incorrect, click **No** and repeat steps 3 and 4 until you locate the correct channel lineup.
7. Your TV listings appear in table format, organized by time and channel. Click **Download All Channel Settings** to set your channels. The **TV Setup Wizard** appears, if this is the first time you have used this download feature. Click **OK**.

✍ Close all Giga Pocket® applications before downloading your TV listings.

If you are using set-top box (STB) mode, you do not need to click Download All Channel Settings. Giga Pocket only schedules timer recordings when using STB mode.

8. Verify the channel settings and click **OK**.
9. Your personal channel settings appear whenever you access the Internet Electronic Program Guide Web site.

✍ If your TV provider adds new channels or changes existing channels, an Update icon appears next to Download All Channel Settings. Click **Update** to add the new or updated channels to your personal channel setting.

Using Memory Cards and Memory Card Readers

This section provides basic information about using your computer's installed memory card readers. Your computer may not be equipped with all of the memory card readers described in this section, depending on the computer model or configuration purchased. To view the installed hardware configuration for your computer, see the online Specifications sheet.

- About Your Memory Card Readers
- Inserting a Memory Card
- Removing a Memory Card
- About Memory Stick Media
- Sharing Memory Cards

About Your Memory Card Readers

Your VAIO® computer is equipped with memory card readers[1] that are compatible with many popular types of memory cards. You can use your computer's memory card readers to transfer data between digital cameras, camcorders, music players, and other audio/video devices.

Memory cards and your computer's memory card readers

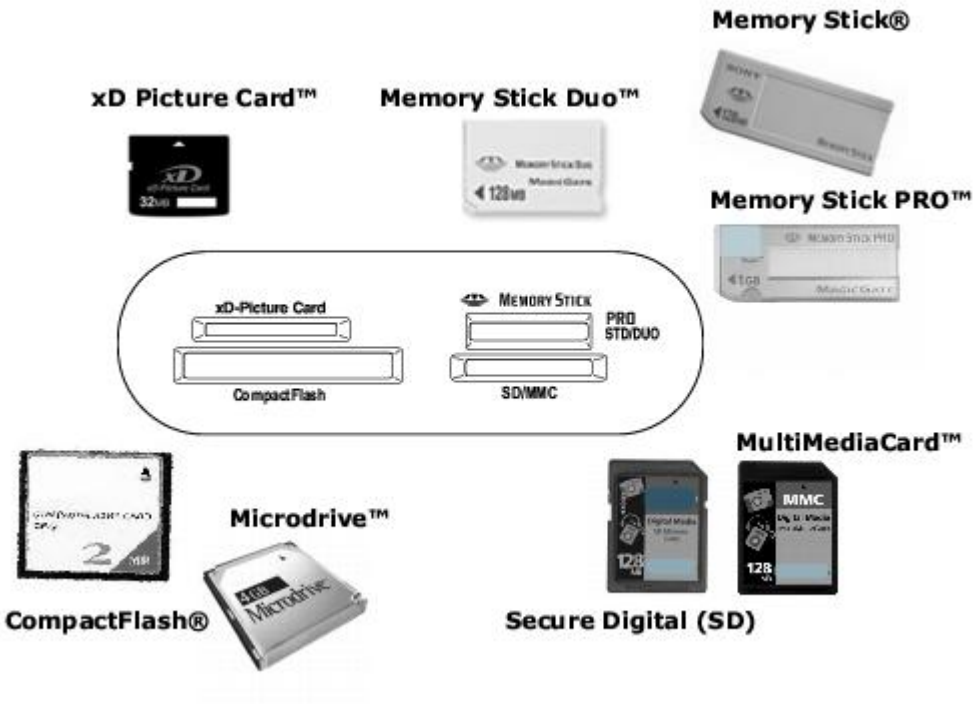

[1] Your computer may not be equipped with the memory card readers shown here. To view the installed memory card readers for your computer, see the online specifications sheet.

Inserting a Memory Card

The memory card readers are located on the front of your computer, behind a protective panel.

Opening the front panel cover

Flip a lower front panel cover down, using your fingertip.

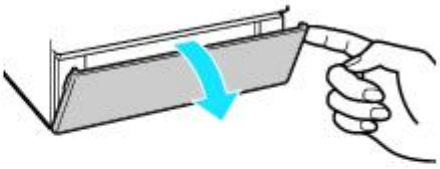

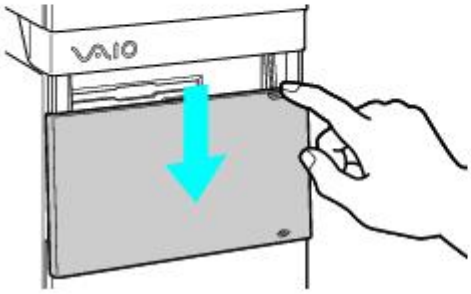

Slide an upper front panel cover down, using your fingertip. Do not use force to open the panel cover.

1. Locate the appropriate drive for the memory card you want to use.
2. Insert the memory card into the drive, in the direction of the arrow on the media. Do not force the card into the drive.

✍ If the memory card does not go into the drive easily, remove it and verify you are inserting it in the proper direction.

Removing a Memory Card

The correct way to remove a memory card from a memory card reader varies, depending upon the card in use. Use care when removing a memory card to avoid damage to the reader or card.

Do not remove a memory card while the media access indicator light is on. The card or its data may become damaged.

- **To remove a Secure Digital (SD), MultiMediaCard , or xD Picture Card media** — Press the extended portion of the memory card to release it from the drive. When the card extends, carefully remove it.
- **To remove a CompactFlash or Memory Stick® media** — Firmly grasp the extended part of the memory card and remove from the drive.

About Memory Stick Media

Memory Stick® media are a compact, portable, and versatile data storage media designed for exchanging and sharing digital data with compatible devices. The following types of Memory Stick media are available, but compatibility with your computer can vary.

- **MagicGate Memory Stick® media** — Provides copyright protection with authentication and encryption, using Sony® MagicGate technology. Authentication ensures that protected content is only transferred between compliant devices and media. Protected content can be recorded and transferred in an encrypted format that prevents unauthorized duplication or playback. You can store different data formats on a single Memory Stick media.
- **Memory Stick PRO media** — Provides MagicGate copyright protection and high-speed data transfer features when used with compatible Memory Stick PRO devices. VAIO® computers support Memory Stick PRO media for data storage purposes only. High-speed data transfer and MagicGate technology features, such as authentication and encryption, may not be available. You can store different data formats on a single Memory Stick media.
- **Memory Stick PRO Duo media** — Provides the same features and benefits of Memory Stick PRO media, in a form that is 1/3 smaller in size.
- **Memory Stick® media** — Provides data storage only. The Memory Stick media does not provide MagicGate technology or high-speed data transfer. You can store different data formats on a single Memory Stick media.
- **Memory Stick Duo media** — Provides the same features and benefits of MagicGate Memory Stick media, in a form that is 1/3 smaller in size.

Compatibility between software programs and Memory Stick media formats may vary. At this time, Sony suggests using only MagicGate Memory Stick media to store and transfer any data created with SonicStage or OpenMG software.

Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on Memory Stick® media.

Memory Stick media do not support AVI file playback directly from the media. Copy the video file to your hard disk drive and then play back the file.

To protect data on Memory Stick media

Some Memory Stick media are equipped with a write-protect tab[1]. The write-protect tab prevents accidental changes to information recorded on your Memory Stick media. When you slide the write-protect tab to the LOCK position, your Memory Stick media is write-protected. You cannot delete, copy, or save information on the media while the write-protect tab in the LOCK position. When you slide the tab to the un-LOCK position, you can write to or modify your Memory Stick media's contents.

Locking the Memory Stick Media

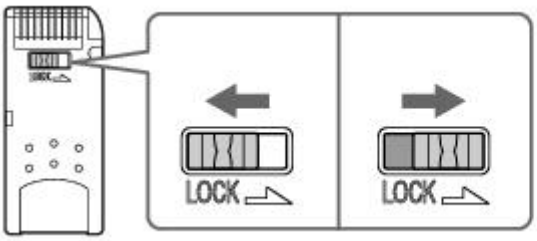

If your computer stops recognizing your Memory Stick® media, you may have removed the media from the Memory Stick drive before the data access process completed.

If this occurs, follow these steps:

1. Remove the Memory Stick media from the slot.
2. Shut down your computer, closing any open software programs, and then turn your computer off.
3. Wait approximately 30 seconds, and then restart your computer.

Your computer recognizes the Memory Stick media, when you insert it into the Memory Stick slot again.

[1] Some Memory Stick media do not have a write-protect tab, or the write-protect tab is in a different location. For details about using your Memory Stick media, see the supplied information sheet.

Sharing Memory Cards

If you plan to share your memory card between your VAIO® computer and devices such as a digital camera or music player, the card must be formatted properly.

- Format the memory card by using it in the device first. See the information supplied with the device for details how to format the memory card.
- If your device does not recognize memory card that has been formatted by your computer, follow these steps:

1. Save the card's contents to your hard disk drive.
2. Reformat the memory card using the device, not your computer.

Upgrading and Maintaining your VAIO Computer

In the future you may want to increase the functionality of your VAIO® computer. This section describes how to perform basic upgrades and maintenance on your system.

- Overview
- About Opening the System Unit
- About Add-on Card Installation
- About Installing Memory
- About the Lithium Battery
- About Hard Disk Drive Installation

Overview

The upgrading procedures described in this section assume that you are familiar with the general terminology associated with personal computers, safety practices, required regulatory compliances, and the modification of electronic equipment.

Before upgrading your computer

Disconnect the computer from its power source and from telecommunications links, networks, or modems before you open the unit or follow any procedures described in this section.

⚠ **Failure to disconnect your computer from its power source may result in personal injury or equipment damage. Always turn the power off before you open the computer or connect your computer to peripheral equipment. Otherwise, damage may occur to the integrated circuits.**

Your computer may not be equipped with all of the hardware features mentioned in this section. The interior hardware configuration of your computer may vary from the illustrations, depending on the computer purchased. To view the specific hardware configuration for your computer, see the online specifications sheet.

✍ You may need to temporarily remove add-on cards or other components that may be near the slot cover you plan to remove.

⚠ **Electrostatic discharge (ESD) can damage disk drives, add-on cards, and other components. Follow the procedures described here only at an ESD workstation. If such a station is not available, do not work in a carpeted area and do not handle materials that produce or hold static electricity (for example, cellophane wrappers). Ground yourself by maintaining continuous contact with an unpainted metal portion of the chassis while performing the procedure.**

About Opening the System Unit

Removing the cover

1. Shut down your computer and turn off all peripheral devices, such as your printer.
2. Unplug your computer and disconnect any peripheral devices.
3. Position the system unit so that the back panel is facing you.
4. Unscrew the three cover release screws located on the edges of the back panel and set aside.

Removing the release screws

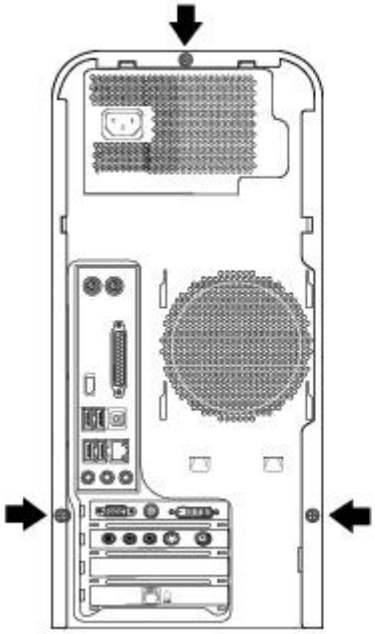

5. When the screws are removed, the cover is released. Slide the cover towards the back of the unit to remove it.

Removing the cover

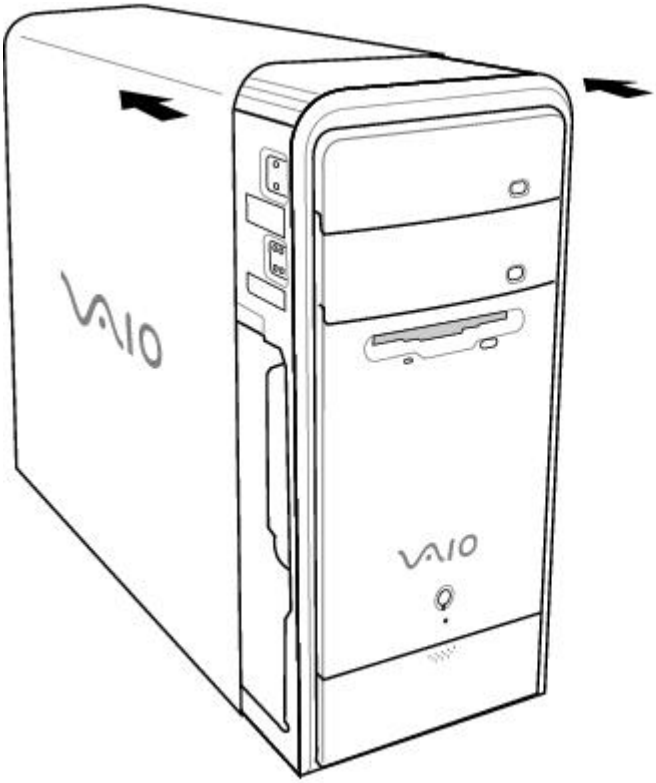

⚠ **If you remove the cover immediately after you shut down your computer, the components may be too hot to touch. Wait until the internal parts of the system unit cool down before you attempt to remove the cover.**

Replacing the cover

1. Carefully align the cover to the chassis frame. The cover should align evenly against the chassis.
2. Slide the cover firmly onto the unit, sliding it forward until the cover snaps into place.
3. Replace the release screws.

Replacing the cover

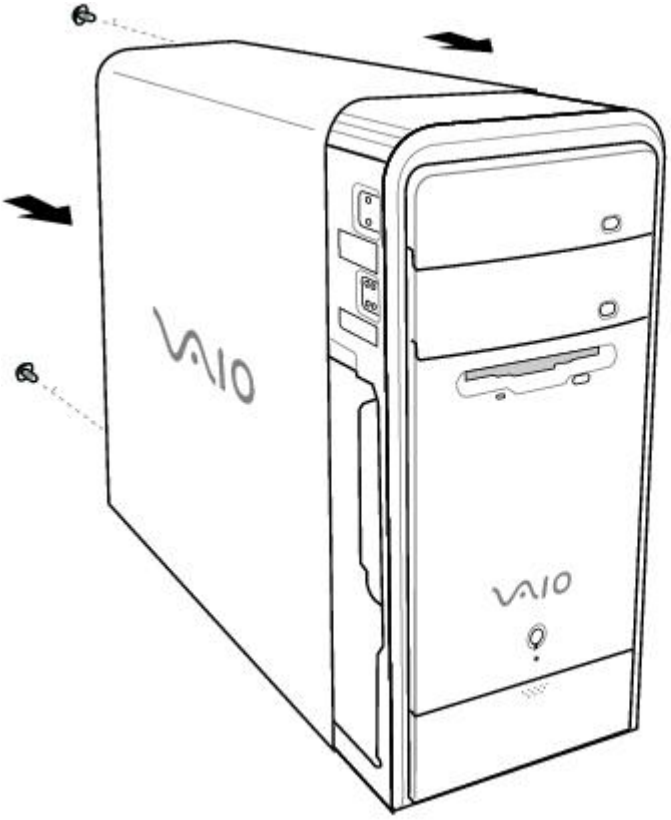

About Add-on Card Installation

Your computer may have one or more open expansion slots, depending on the model configuration. An expansion slot enables you to install add-on cards to expand the functionality of your system. The length of the add-on card should not exceed 9.05 inches.

Add-on card configuration varies by model. Some models, such as Configure-to-Order (CTO) systems, may contain preinstalled add-on cards.

Observe the proper safety precautions when you add cards to your Sony computer. See Before upgrading your computer.

Installing an add-on card

1. Shut down your computer and turn off all peripheral devices, such as your printer.
2. Unplug your computer and any peripheral devices.
3. Remove the cover. See Removing the cover.
4. Locate an available expansion slot. Remove the slot cover's screw, and then remove the slot cover.

When removing a slot cover, be careful not to damage components on the system board or add-on cards. You may need to temporarily remove add-on cards or other components that may be next to the slot cover you want to remove.

Removing/installing the slot cover

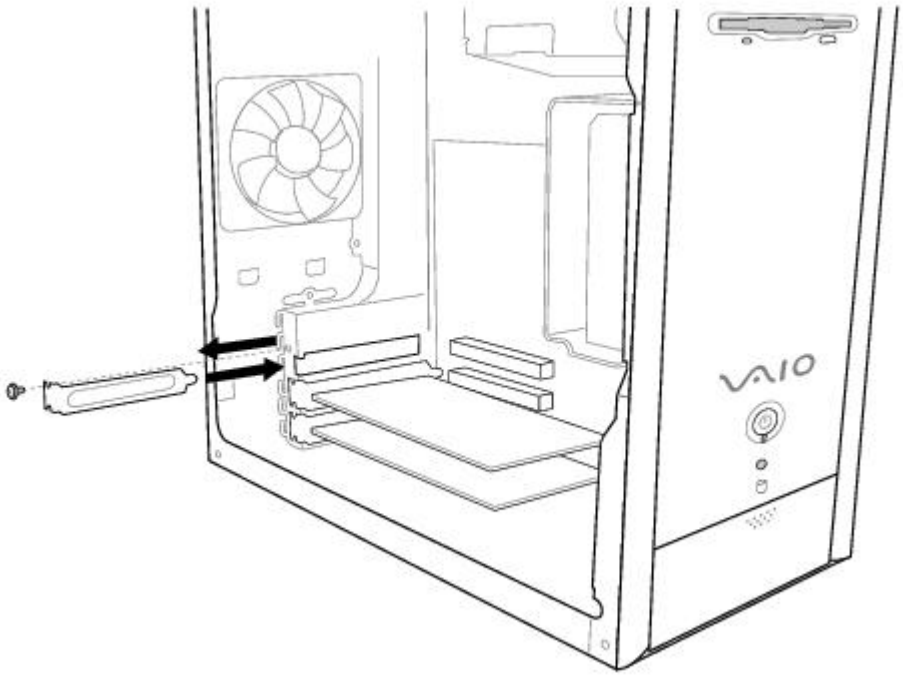

5. Install the add-on card by inserting it into the expansion slot and securing it with the screw from the expansion slot cover.

Installing an add-on card

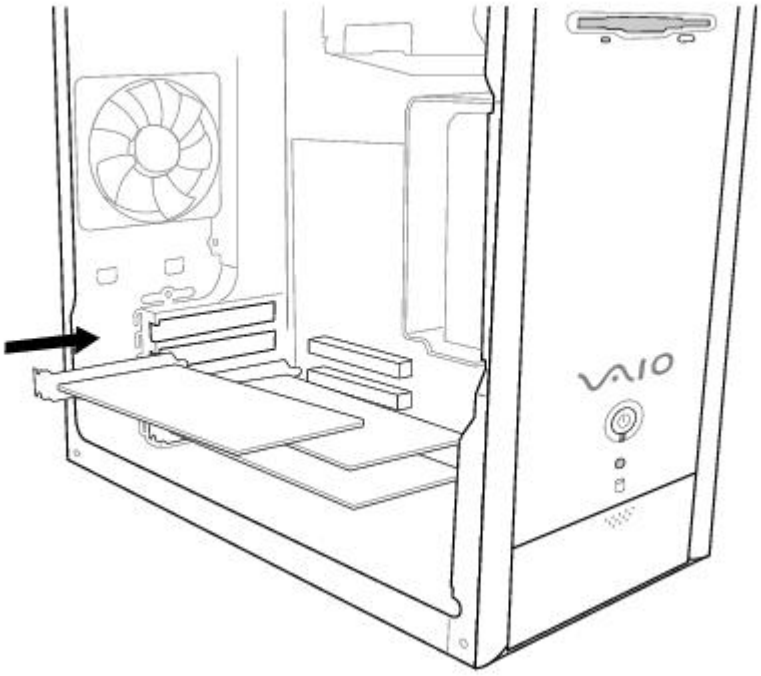

6. Attach any internal cables that the card requires. See the instructions supplied with the add-on card.
7. Replace the cover. See Replacing the cover.
8. Reconnect the power cord and all peripheral devices.
9. Turn on the computer.

About Installing Memory

The amount of preinstalled memory may vary, depending on the system configuration you purchased. Your computer may ship with all available memory slots filled. For memory replacement or upgrades, use the correct memory module for your computer's configuration. See the specifications sheet for your computer on the Sony online support Web site at *http://www.sony.com/pcsupport*, for details about the amount and type of memory installed in your computer.

You can purchase additional memory modules, accessories, and peripheral equipment from your local retailer.

Observe the proper safety precautions when you add or remove the memory in your computer. See Before upgrading your computer.

Removing a memory module

1. Shut down your computer and turn off all peripheral devices, such as your printer.
2. Unplug your computer and any peripheral devices.
3. Remove the cover. See Removing the cover.
4. Gently place the unit on its side. If necessary, remove any cables, add-on cards, or other components to access the memory module slots.
5. Locate the memory module(s) you wish to remove.
6. Push down on the latches, located on both sides of the module, to gently eject it from the slot.
7. Grasp one edge of the module and lift it out. Store the module in an anti-static package.

Removing/Installing memory

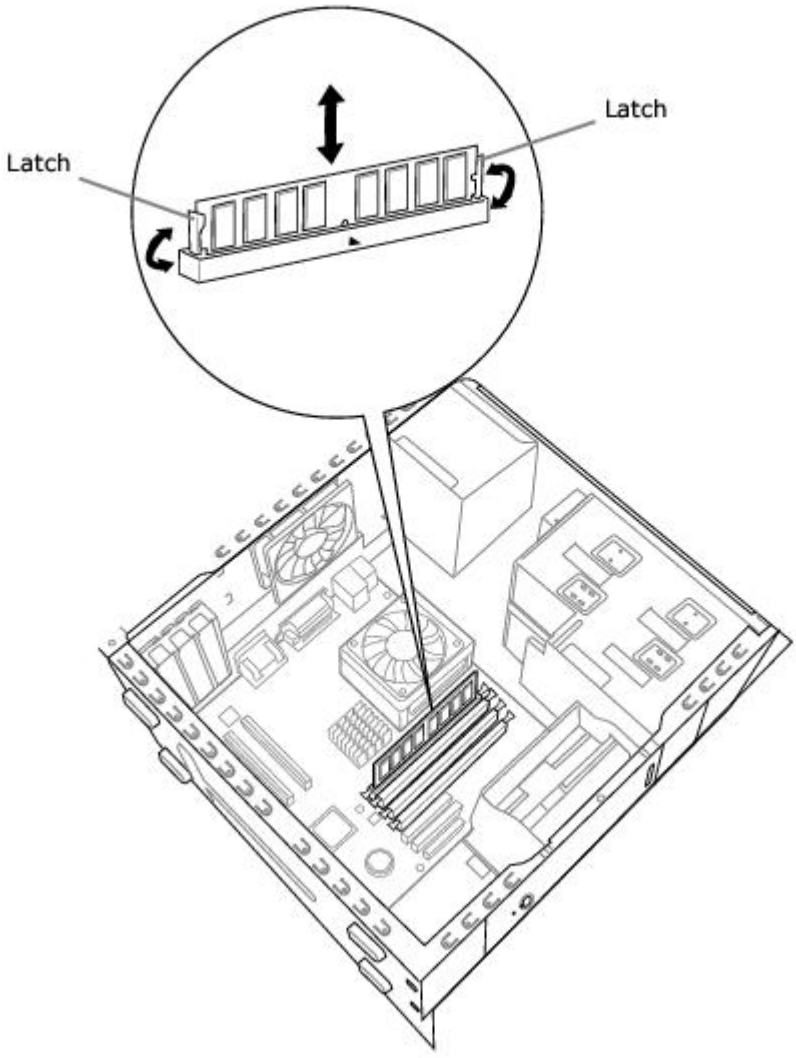

Installing a memory module

1. Shut down your computer and turn off all peripheral devices, such as your printer.
2. Unplug your computer and any peripheral devices.
3. Remove the cover. See Removing the cover.
4. Gently place the unit on its side. If necessary, remove any cables, add-on cards, or other components to access the memory module slots.
5. Remove the memory module from its anti-static package, handling it by the the edges.
6. Locate the notch on the bottom edge of the module to align it over the open memory slot.
7. Firmly insert the bottom edge of the memory module into the slot.
8. Press down evenly against the module's upper corners. The latches snap into position, holding the module in place.

   To avoid damaging a memory module slot, move the end latches slightly outward to relieve pressure. The module clicks into place.
9. Reinstall any components or add-on cards you may have removed.
10. Replace the cover. See Replacing the cover.

About the Lithium Battery

The lithium battery starts to weaken after several years and the system settings, such as the date and time stored in CMOS RAM, may become inaccurate. Replace the lithium battery when this occurs.

There is danger of the battery exploding if it is replaced incorrectly. Replace the battery only with a CR2032-type lithium battery.

Replacing the lithium battery

1. Write down any changes you may have made to the settings in the BIOS Setup utility.
2. Shut down your computer and turn off all peripheral devices, such as your printer.
3. Unplug your computer and any peripheral devices.
4. Remove the cover. See Removing the cover.
5. If necessary, remove any cables, add-on cards, or other components to access the lithium battery.
6. Gently push the battery holder's tab away from the battery and remove the battery from the holder.
7. Install the new battery with the plus (+) side facing the battery holder tab.

Replacing a lithium battery

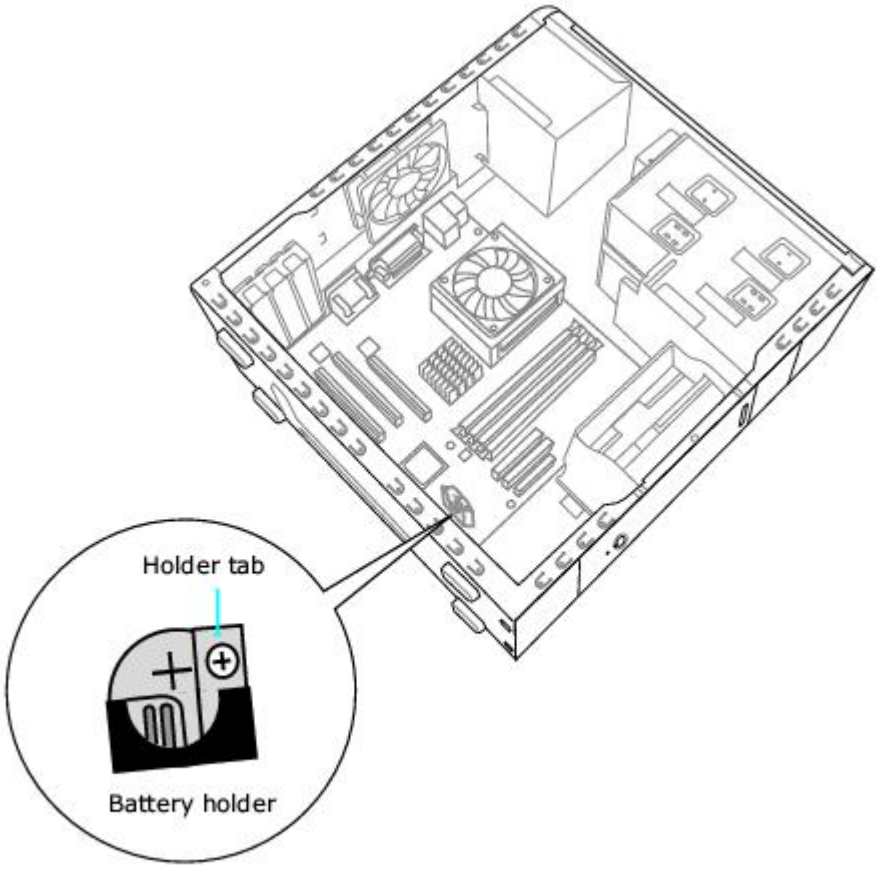

8. Replace the cover. See Replacing the cover.

The values stored in the CMOS memory are now reset to the factory default values. Run the Setup utility to reset the date, time, passwords, and other changes you may have made to the BIOS settings. If you do not wish to customize your BIOS settings, do not run the Setup utility.

Dispose of the lithium battery properly. In some areas, the disposal of lithium batteries in household or business trash may be prohibited. You can return your unwanted lithium batteries to your nearest Sony Service Center or Factory Service Center. To locate a Service Center near you, visit the Sony online support Web site at http://www.sony.com/pcsupport.

Resetting the computer's date and time

1. Double-click on the time readout displayed in the Windows® tasktray. The **Date and Time Properties** window appears.

2. From the **Date & Time** tab, change the settings as desired. Click **Apply**, then click **OK**.

About Hard Disk Drive Installation

Your computer comes with an available internal bay to hold a second standard 3.5-inch hard disk drive. Some models, such as Configure-to-Order (CTO) systems, may already have a second hard disk drive installed. Your system can support ATA-33, ATA-66, or ATA-100 hard disk drives. Sony recommends using an ATA-100 hard disk drive to take full advantage of your system's features.

The hard disk drive access indicator is lit when either internal hard disk drive is active.

Replacing the original hard disk drive

If you replace the original, factory-installed hard disk drive, you may need to correct your drive mapping, create a VAIO Recovery Media Kit, or visit the Sony online support Web site for more information.

Drive Mapping

When a new hard disk drive is installed, the original drive mapping[1] may be changed. The identified drives, including those for removable media[2], may not reflect correct drive/icon associations. For more information on how to correct your drive mapping, visit the Sony online support web site at http://www.sony.com/pcsupport.

Hard disk drive recovery

When you replace the original hard disk drive, the preinstalled VAIO Recovery Wizard utility program cannot restore the drive partitions, operating system, or original software programs. Before replacing the hard disk drive, create a VAIO Recovery Media Kit or purchase a kit from Sony.

Your VAIO® computer is not supplied with System or Application Recovery CDs. Use the VAIO Recovery Wizard utility to recover your computer's operating system and preinstalled software programs.

For more information about the VAIO Recovery Wizard utility program:

1. Click **Start** from the Windows® taskbar, and then click **Help and Support**.
2. From the **VAIO Help and Support Center**, click **VAIO Recovery Options**.

Your computer must have an active Internet connection to access the Sony online support Web site.

Observe the proper safety precautions when you upgrade your Sony computer. See Before upgrading your computer.

Drive letter assignment

When a new hard disk drive is installed, an identifying drive letter is assigned. The drive letter assignment becomes effective after you register for the first time or after recovering your computer with the VAIO® Recovery Wizard utility program.

The Click to DVD software program creates a new folder location on the new hard disk drive. This new folder is the default location to save files created with Click to DVD software.

- If the Microsoft® Windows® operating system identifies the new hard disk drive as drive D, the Click to DVD software program saves its files to a new folder on the new drive D.
- If the Windows operating system assigns another letter to the new hard disk drive, such as drive E or J, the Click to DVD software program creates the new save folder on the new drive.

When you start Click to DVD software for the first time, after recovering the computer or installing a new hard disk drive, the software program automatically creates a new save folder on the new drive.

Installing an additional hard disk drive

1. Shut down your computer and turn off all peripheral devices, such as your printer.
2. Unplug your computer and any peripheral devices.

3. Remove the cover. See Removing the cover.

4. Configure the jumpers on the new drive as a slave. See the configuration instructions supplied with your drive.

5. Detach the power and drive cables from the original hard disk drive that is preinstalled in your computer.

6. Release the drive holder from the chassis by removing the drive holder screw.

7. Slide the drive holder out.

Removing the drive holder

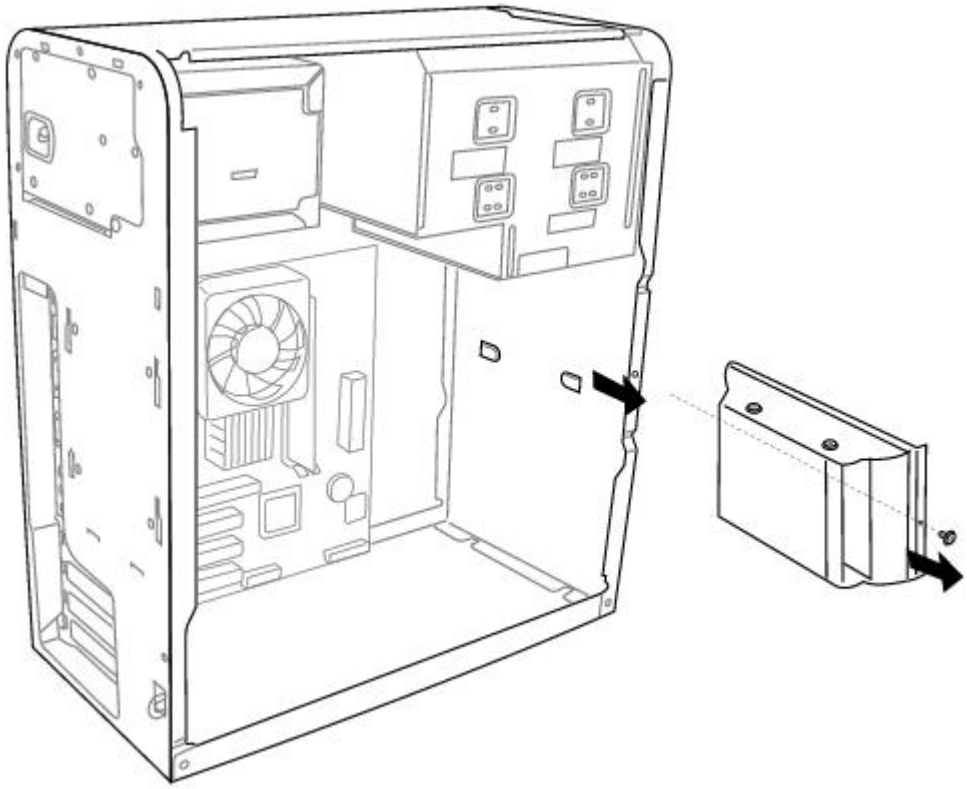

8. Slide the new drive into the drive holder and align the holes on each side of the drive to the holes in the drive holder.

9. Secure the drive to the drive holder with screws, through the holes on each side of the drive holder.

Attaching the drive screws

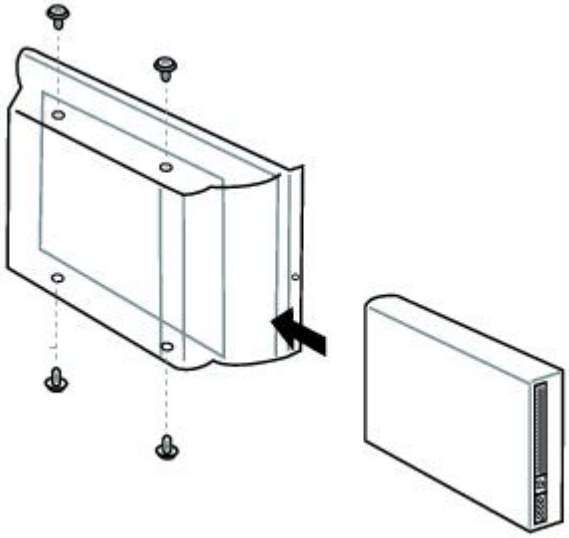

Your new hard disk drive is supplied with the necessary screws. Do not overtighten these screws when securing the new drive to the drive holder.

10. Realign the drive holder with the tracks on the inside of the chassis and slide the drive holder in completely.

11. Reinsert the drive holder screw and tighten to lock the drive holder back into position.

12. Reconnect the IDE and power connectors to the original drive.

13. Connect the second drive connector to the new drive. Orient the connector to align pin 1 on the red side of the ribbon cable with pin 1 on the new drive.

14. Connect the second power connector to the new drive, following the instructions supplied with the drive.

Replacing the drive holder

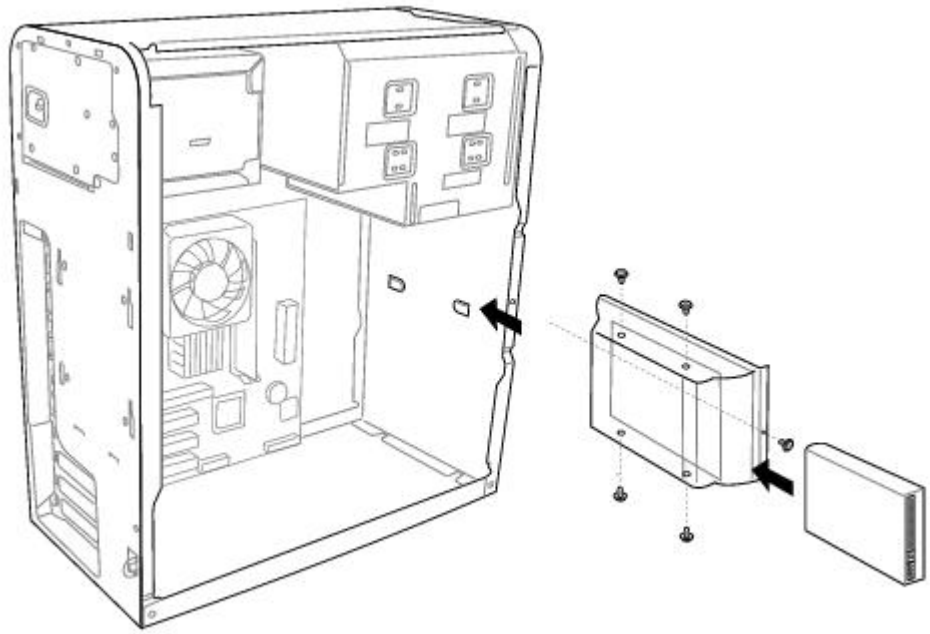

15. Replace the cover. See Replacing the cover.

16. Reconnect the power cord to your computer.

Identifying the additional hard disk space

When you initialize the new hard disk, it must be configured as an extended partition in Windows NT file system (NTFS) format.

1. Log on to Windows® as Administrator.

2. Click **Start** in the Windows taskbar, then right-click **My Computer**. A shortcut menu appears.

3. Select **Manage**. The **Computer Management** window appears.

4. Under the file directory, go to **Storage** and then select **Disk Management**.

5. Right-click on the newly installed, unformatted hard disk (Disk label identified with red marking). From the shortcut menu, select **Initialize Disk**.

6. Click on the **Unallocated** area of the disk and then right-click to display a shortcut menu.

7. Select **New Partition**. The **New Partition** wizard appears.

8. Follow the wizard's on-screen instructions to complete the process.

The Windows® XP operating system recognizes the new hard disk drive and applies the NTFS format.

[1] Drive mapping refers to the assignment of an identifying letter to a specific drive, such as Drive C or Drive D which identify the original hard disk drive.

[2] Your computer may be equipped with memory card readers, such as a Memory Stick®, CompactFlash®, or Microdrive. See the online *Specifications* sheet for more information about your computer's hardware configuration.

Troubleshooting

This section describes how to solve common problems and provides helpful information about using your computer's hardware features and preinstalled software. Your computer may not be equipped with all of the features or software discussed in this section, depending on the computer model or configuration purchased.

- About VAIO Computer Functions
- About System Security
- About Media Center
- About Giga Pocket Personal Video Recorder
- About the Mouse and Keyboard
- About the Modem
- About the Speakers
- About Using a Microphone
- About Using Peripheral Equipment

My computer does not start.

- Verify that the computer is plugged into a power source and that it is turned on. Check that the power indicator is lit on the front panel of the computer.
- Confirm that a disk is not in the floppy disk drive[1] (unless you are using a bootable floppy disk).
- Confirm that a CD or DVD is not in an optical drive (unless you are using bootable media).
- Confirm that the power cord and all cables are connected firmly.
- If you plugged the computer into a power strip or Uninterruptible Power Supply (UPS), make sure the power strip or UPS is turned on and working.
- Verify that the monitor is plugged into a power source and turned on.

  If your computer has a built-in monitor, confirm that it is plugged into an appropriate power source and that the computer is turned on.
- Verify that the brightness or contrast control dials are adjusted correctly. (See the manual supplied with your display for details.)
- Confirm that the computer is not in Stand by mode by pressing any key on the keyboard.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase this equipment separately.

My computer does not start.

- Verify that the computer is plugged into a power source and that it is turned on. Check that the power indicator is lit on the front panel of the computer.
- Confirm that a disk is not in the floppy disk drive[1] (unless you are using a bootable floppy disk).
- Confirm that a CD or DVD is not in an optical drive (unless you are using bootable media).
- Confirm that the power cord and all cables are connected firmly.
- If you plugged the computer into a power strip or Uninterruptible Power Supply (UPS), make sure the power strip or UPS is turned on and working.
- Verify that the monitor is plugged into a power source and turned on.

  If your computer has a built-in monitor, confirm that it is plugged into an appropriate power source and that the computer is turned on.
- Verify that the brightness or contrast control dials are adjusted correctly. (See the manual supplied with your display for details.)
- Confirm that the computer is not in Stand by mode by pressing any key on the keyboard.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase this equipment separately.

What can I do if my computer or software stop responding?

You can try to locate and close the software program that has stopped responding.

1. Press the **Ctrl+Alt+Delete** keys. The **Windows Task Manager** window appears.
2. From the Applications tab, locate the software program that has the status message, "**Not responding**."
3. Select the software program that has a **Not Responding** status and click **End Task**. Windows attempts to close the program.

If your computer does not respond or the software program does not close:

1. Save and close any open files, if possible.
2. Press the **Alt+F4** keys. The **Shut Down Windows**[1] window appears.
3. Click the drop-down list box and select **Restart**.
4. Click **OK**. The computer turns off and restarts.

   If the **Shut Down Windows** window does not appear:

   1. Press **Ctrl+Alt+Delete**. The **Windows Task Manager** window appears.
   2. Click **Shut Down**.
   3. Restart your computer.

If your computer still does not respond and you cannot restart, shut down your computer by pressing and holding the power button for more than six seconds.

If the software program continues to stop responding or causes your computer to stop responding, contact the software publisher or designated technical support provider.

Pressing and holding the power button for more than six seconds may result in the loss of data from files that are currently open.

[1] The window text displayed may vary.

Why does the Windows operating system stop responding during shutdown?

The Windows operating system may not shut down properly for many reasons, including incompatible or conflicting drivers, damaged files, or non-responsive hardware. For troubleshooting information, you can search Windows Help.

1. Click **Start** in the Windows taskbar and select **Help and Support**. The **VAIO Help And Support Center** menu appears.

2. Select **Fixing a Problem** and then select **Startup and Shut Down problems**. A list of specific problem topics appears on the right side of the window.

3. Select **Startup and Shutdown Troubleshooter**. Follow the on-screen instructions according to your specific situation.

Why is my computer running slowly?

- The computer's responsiveness varies depending with the number of software programs that are open and running. Close any programs that you are not currently using.
- Increasing the computer memory may also help. For information on installing memory, please see the online VAIO User Guide.

  To access the online User Guide:

  1. Click **Start** in the Windows taskbar, and then click **Help and Support**.
  2. From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.

How do I change the video resolution of my display?

1. Click **Start** in the Windows taskbar, and then select **Control Panel**.
2. Select **Appearance and Themes**, and then select **Change the screen resolution**.
3. Click the **Settings** tab.
4. Change the Screen resolution and Color quality to the desired levels.
5. Click **Apply** and then click **OK**.

Why doesn't my computer resume normal operation from Stand by mode?

- If your keyboard has a Stand by key , press it briefly to resume normal operation.
- If your keyboard is not equipped with a Stand by key, press any key to resume normal operation.
- For troubleshooting information, you can search Windows Help.

1. Click **Start** in the Windows taskbar and select **Help and Support**. The **VAIO Help And Support Center** menu appears.
2. Select **Fixing a Problem** and then select **Startup and Shut Down problems**. A list of specific problem topics appears on the right side of the window.
3. Select **Startup and Shutdown Troubleshooter**. Follow the on-screen instructions according to your specific situation.

About System Security

This section provides information about keeping your computer operating smoothly and protecting against potential threats to your computer's security.

How can I protect my computer against security threats, such as viruses?

The Microsoft® Windows® operating system is preinstalled on your computer. The best way to protect your computer against security threats, such as viruses, is to download and install the latest Windows updates regularly.

You can get important Windows updates by doing one of the following:

- **The Automatic Updates** feature — This feature automatically searches for and delivers updates directly to your computer whenever you are connected to the Internet.
- **The Windows Updates Web site** — This site enables you to download computer updates without turning on the **Automatic Updates** feature.

Your computer must be connected to the Internet before you can receive updates.

To use the Automatic Updates feature

1. Connect to the Internet.
2. Click the **Automatic Updates** icon in the Taskbar notification area.

   The **Automatic Updates Setup Wizard** appears.
3. Click **Next**, and follow the on-screen instructions to set up automatic or scheduled updates.

To visit the Windows Updates Web site

1. Connect to the Internet.
2. Type http://windowsupdate.microsoft.com/ in the address bar of your browser.

   The **Microsoft Windows Update** and **Security Warning** windows appear.
3. In the **Security Warning** window, click **Yes to install and run Windows Update.**
4. In the **Microsoft Windows Update** window, click **Scan for updates**, and follow the on-screen instructions.

About System Security

This section provides information about keeping your computer operating smoothly and protecting against potential threats to your computer's security.

How can I protect my computer against security threats, such as viruses?

The Microsoft® Windows® operating system is preinstalled on your computer. The best way to protect your computer against security threats, such as viruses, is to download and install the latest Windows updates regularly.

You can get important Windows updates by doing one of the following:

- **The Automatic Updates** feature — This feature automatically searches for and delivers updates directly to your computer whenever you are connected to the Internet.
- **The Windows Updates Web site** — This site enables you to download computer updates without turning on the **Automatic Updates** feature.

Your computer must be connected to the Internet before you can receive updates.

To use the Automatic Updates feature

1. Connect to the Internet.
2. Click the **Automatic Updates** icon in the Taskbar notification area.

   The **Automatic Updates Setup Wizard** appears.
3. Click **Next**, and follow the on-screen instructions to set up automatic or scheduled updates.

To visit the Windows Updates Web site

1. Connect to the Internet.
2. Type http://windowsupdate.microsoft.com/ in the address bar of your browser.

   The **Microsoft Windows Update** and **Security Warning** windows appear.
3. In the **Security Warning** window, click **Yes to install and run Windows Update.**
4. In the **Microsoft Windows Update** window, click **Scan for updates**, and follow the on-screen instructions.

How do I keep my preinstalled antivirus software updated?

You can keep the preinstalled Norton Internet Security software program current with the latest updates from Symantec Corporation.

To download and install the latest security update

1. Double-click the **Norton Internet Security** icon in the Taskbar notification area.

   If you have not previously registered the antivirus software, a series of information wizards appear.

   1. Follow the on-screen instructions to complete each wizard
   2. Double-click the **Norton Internet Security** icon again.

      The **Norton Internet Security** window appears.

      If you have previously registered this antivirus software, the **Norton Internet Security** window automatically appears.

   3. Click **Live Update**, located near the top of the window.
   4. Follow the on-screen instructions to select and download updates.

About Media Center

The Microsoft® Windows® XP Media Center Edition operating system is not installed on all VAIO Digital Studio® computers. See your online specifications sheet for more information about your computer's configuration.

Why doesn't the REW button on the remote control work when I use My Music?

The REW button does not "rewind" music files. Instead, press Replay on your remote control for a similar function.

About Media Center

The Microsoft® Windows® XP Media Center Edition operating system is not installed on all VAIO Digital Studio® computers. See your online specifications sheet for more information about your computer's configuration.

Why doesn't the REW button on the remote control work when I use My Music?

The REW button does not "rewind" music files. Instead, press Replay on your remote control for a similar function.

Why aren't the song information edits I made using SonicStage software shown in My Music?

If you record a song in OpenMG ATRAC format and make edits, such as title, artist, or genre, using SonicStage software, the changes become visible when the music file is played in My Music. If you make changes to a music file using Media Center, the changes are not visible when played in SonicStage software.

Why do my song information edits revert to the original content when I use My Music?

When you record songs with SonicStage software, and then use Windows® Media Player software to edit the song's information, you may not see your changes when you play the song in My Music. Windows Media Player supports playback of songs recorded in OpenMG (ATRAC3 or ATRAC3+) format, but does not support any edits made to the OpenMG format music files. Use SonicStage software to edit song information for music files that are recorded in OpenMG format.

Why do my optimized music files take so long to appear in My Music?

When you use SonicStage software to optimize music files to ATRAC3 or ATRAC3+ format, it may take a few moments for the music files to be available in My Music. To access these files sooner, start Windows Media Player software first, and then play the song with My Music.

Why do I get the error message, "The input media is invalid" when I try to play an MP3 file in My Music?

If you have added cover art to the MP3 file using SonicStage software, your file may contain an unsynchronized ID3v2 header. Media Center and Windows Media Play software programs cannot support playback of this file.

You can go to Microsoft® and download a patch to resolve this issue[1], as follows:

1. Go to http://support.microsoft.com.
2. Enter **814129** in the **Search the Knowledge Base** text box.
3. Click on the topic, **FIX: Error in Windows Media Player 9 Series When You Play Specific MP3 Files** located in the **Summaries: Search Results** area.
4. Follow the on-screen instructions to download and install the patch.

[1] The location of this information is subject to change or removal without prior notice

Why won't My Music show the albums (playlists) I recorded with SonicStage software?

Playlists (albums) recorded with SonicStage software may not be immediately available in the Media Center Album window. To access these files sooner, start Windows® Media Player software first, and then play the song with My Music.

Why did my Click to DVD software recording session capture television instead of video?

If Media Center starts a scheduled TV recording while you are capturing analog video with Click to DVD® software, the TV programming may be captured instead of the video and the timed recording may fail. Media Center and the analog capture feature of Click to DVD software both require the use a TV tuner/MPEG encoder card and cannot access the card at the same time.

To avoid recording conflicts:

- Do not open Media Center while capturing analog video using Click to DVD or Click to DVD Automatic Mode software.
- Do not schedule a TV recording to start while capturing analog video, using Click to DVD or Click to DVD Automatic Mode software. If a scheduled TV recording is already set, cancel it or postpone the analog recording until the scheduled TV recording has finished.

Why can't I view or record a movie when my computer is connected to an external device, such as a VCR or DVD player, or when I am using an analog input connection?

If you see a blue background in the View window, the movie may be copyright-protected. Your computer is not able to display or record a video or DVD that is copyright-protected by Macrovision or CGMS-A (Copy Generation Management System - Analog). Media Center software does not support recording a movie using analog input from external devices, such as a VCR, DVD player, or Digital video camera.

Why can't I fast forward or rewind a video?

The rewind and fast forward features are not supported by all video formats. Try using the Skip or Replay buttons, which provides a similar function.

How do I use the Media Center software or remote control to adjust my monitor when viewing TV programs?

Media Center software and remote control do not have video adjustment capability. Use the controls on the monitor to adjust video settings, such as contrast, hue, and brightness. See the information provided with your monitor for instructions on adjusting its video controls.

My computer freezes and restarts while I'm watching a DVD or live TV. What do I do?

Verify that the monitor refresh rate is set to 60 Hz, using the following steps:

1. Right-click on the desktop, and click **Properties** from the shortcut menu.

   The **Display Properties** window appears.

2. Click the **Settings** tab, and then click **Advanced**.

3. Click the **Monitor** tab, and in the **Monitor settings** box, confirm the screen refresh rate is set to 60 Hertz.

4. If the refresh rate is not set to 60 Hz, click the drop-down arrow, and select **60 Hertz**.

About Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on troubleshooting for Giga Pocket hardware and software features.

Why can't I see an image or an image that is displayed properly when I am using a VCR?

Some images from an externally-connected video player device or a video game console, may not display or are not displayed correctly. These images include:

- Images from a playback screen that is in pause mode.
- Menu screens of the connected video player device.
- The end of the film roll being played back using the scroll bar.
- Video output from a video game console.
- Video output from a VCR, using a coaxial cable.

Giga Pocket® cannot record or display all video images from this source.

About Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on troubleshooting for Giga Pocket hardware and software features.

Why can't I see an image or an image that is displayed properly when I am using a VCR?

Some images from an externally-connected video player device or a video game console, may not display or are not displayed correctly. These images include:

- Images from a playback screen that is in pause mode.
- Menu screens of the connected video player device.
- The end of the film roll being played back using the scroll bar.
- Video output from a video game console.
- Video output from a VCR, using a coaxial cable.

Giga Pocket® cannot record or display all video images from this source.

Why does my Giga Pocket viewing window or the images played back from a Video Capsule, appear distorted or corrupted?

There are some situations where screen or image distortion may occur, such as:

- When you change the channel on the video player device.
- If there is a damaged section on your video tape.

When using Giga Pocket Personal Video Recorder, set your display settings as follows:

- **Colors** — Use the default factory settings (32-bit).
- **Screen area** — Set your video resolution to 1024 x 768 pixels.

For PCV-W series models

Do not change the default factory settings for color or the screen area. If you use different settings, you may experience poor image quality.

Why does my computer seem to slow down when I play a Video Capsule?

Your computer may respond slower if you try to play back a Video Capsule while recording a TV program with Giga Pocket. During a timer recording, Giga Pocket may interrupt or stop your Video Capsule playback to prioritize your computer's resources for the timer recording. If this occurs, wait until the timer recording session has completed, and then play back the Video Capsule.

Why did I get the error message, "Event buffer of audio overflow?"

The timer recording may fail in certain situations, such as:

- The coaxial cable (input) is disconnected after recording has started.
- The TV channel has lost broadcast signal during the recording session.
- Video content being recorded has poor signal quality.

Why did my on-screen display shift or split?

Your on-screen display may shift or split in rare instances. If this should occur, switch the TV/Recording deck and the playback deck, or try switching the channel. Your timer recording continues even if the on-screen display has shifted or split.

Why can't I create new Video Capsules?

You cannot create new Video Capsules when the remaining free space on your hard disk drive reaches approximately 100 MB. Delete any unnecessary Video Capsules or files to increase the free space on your hard drive.

Why doesn't my mouse work properly?

- Confirm that the mouse is plugged securely into the mouse port. If you are using a USB mouse, verify that the mouse is plugged securely into the appropriate USB port.
- Save and close all open software programs. Turn off your computer, wait approximately 10 seconds, and then restart your computer.
- The mouse driver(s) may not be working properly.

Using an optical mouse

If you are using an optical mouse[1], use an appropriate surface to ensure proper mouse tracking. A good surface requires a certain amount of detail or texture to enable mouse tracking.

- Use surfaces such as plain paper, card stock, or fabric that do not have a lot of repetitive patterning.
- Avoid surfaces such as mirrors, smooth glass, or magazines.
- Avoid possible damage to easily-scratched surfaces by using a mouse pad.
- Avoid surfaces that may damage or soil your optical mouse. Dirt or damage may cause the mouse to malfunction.
- If the cursor is not moving properly, try using the mouse on another surface or using a mouse pad.

Using a standard ball mouse

If you are using a standard ball mouse, there may be dust or dirt inside the mouse mechanism. To clean the mouse, follow these steps:

1. Save and close all software programs, and turn off your computer.
2. Turn the mouse upside down.
3. Remove the mouse ball cover on the back of the mouse by turning clockwise the ring that covers the mouse ball.
4. Turn the mouse upright, and drop the mouse ball into your hand.
5. Using a piece of tape, remove any dust or dirt on the mouse ball and inside the mouse ball socket.
6. Return the mouse ball to the socket, and replace the mouse ball cover. Secure the cover by turning the ring counter-clockwise.

Using a wireless optical mouse

If you are using a wireless optical mouse:

- Confirm that the supplied AA batteries are properly installed.
- Press the **CONNECT** button on the mouse and the computer to reestablish the connection between the two devices.
- Verify the infrared receiver on the computer's front panel is free of obstructions that may prevent proper operation.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless mouse. These devices may cause interference, causing your mouse to stop working properly.
- Do not place metal furniture near your computer or wireless mouse, as this may create interference, causing your mouse to stop working properly.

[1] For wireless or standard optical mice.

Why doesn't my mouse work properly?

- Confirm that the mouse is plugged securely into the mouse port. If you are using a USB mouse, verify that the mouse is plugged securely into the appropriate USB port.
- Save and close all open software programs. Turn off your computer, wait approximately 10 seconds, and then restart your computer.
- The mouse driver(s) may not be working properly.

Using an optical mouse

If you are using an optical mouse[1], use an appropriate surface to ensure proper mouse tracking. A good surface requires a certain amount of detail or texture to enable mouse tracking.

- Use surfaces such as plain paper, card stock, or fabric that do not have a lot of repetitive patterning.
- Avoid surfaces such as mirrors, smooth glass, or magazines.
- Avoid possible damage to easily-scratched surfaces by using a mouse pad.
- Avoid surfaces that may damage or soil your optical mouse. Dirt or damage may cause the mouse to malfunction.
- If the cursor is not moving properly, try using the mouse on another surface or using a mouse pad.

Using a standard ball mouse

If you are using a standard ball mouse, there may be dust or dirt inside the mouse mechanism. To clean the mouse, follow these steps:

1. Save and close all software programs, and turn off your computer.
2. Turn the mouse upside down.
3. Remove the mouse ball cover on the back of the mouse by turning clockwise the ring that covers the mouse ball.
4. Turn the mouse upright, and drop the mouse ball into your hand.
5. Using a piece of tape, remove any dust or dirt on the mouse ball and inside the mouse ball socket.
6. Return the mouse ball to the socket, and replace the mouse ball cover. Secure the cover by turning the ring counter-clockwise.

Using a wireless optical mouse

If you are using a wireless optical mouse:

- Confirm that the supplied AA batteries are properly installed.
- Press the **CONNECT** button on the mouse and the computer to reestablish the connection between the two devices.
- Verify the infrared receiver on the computer's front panel is free of obstructions that may prevent proper operation.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless mouse. These devices may cause interference, causing your mouse to stop working properly.
- Do not place metal furniture near your computer or wireless mouse, as this may create interference, causing your mouse to stop working properly.

[1] For wireless or standard optical mice.

How do I set up my mouse for left-hand use?

1. Click **Start** in the Windows taskbar, then click **Control Panel**.
2. Click **Printers and Other Hardware**, then click **Mouse**. The **Mouse Properties** dialog box appears.
3. From the **Buttons** tab, select **Switch primary and secondary buttons** under the **Button Configuration** options.
4. Click **Apply**, then click **OK**.

Why doesn't my keyboard work properly?

- Check that the keyboard[1] is securely plugged into the keyboard port.
- Save and close all open software programs. Turn off your computer, wait approximately 10 seconds, and then restart your computer.
- If you are using a wireless keyboard:
  - Confirm that the supplied AA batteries are properly installed. For proper installation of the AA batteries, see the documentation supplied with your equipment.
  - Press the **CONNECT** button on the keyboard to reestablish the connection between the two devices.
  - Verify the infrared receiver on the computer's front panel is free of obstructions that may prevent proper operation.
  - Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless keyboard. These devices may cause interference, causing your keyboard to stop working properly.
  - Do not place metal furniture near your computer or wireless keyboard, as this may create interference, causing your keyboard to stop working properly.

[1] The VAIO "W" series computer has a built-in keyboard.

Why is my modem connection slow?

Many factors can influence modem connection speed, such as:

- Telephone line noise.
- Incompatibility with other telephone equipment such as fax machines or other modems.
- Internet Service Providers (ISP) connection capability may vary.

If you think your modem is not connecting properly to other PC-based modems, fax machines, or your ISP, check the following:

- Contact your telephone company and ask them to verify that your telephone line is free from line noise.
- If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
- For optimum performance, verify that your ISP point of presence (POP) telephone number is compliant with V.90 standards.
- If you are having a problem connecting with your ISP, check that they are not experiencing technical problems.
- Try connecting your modem through another telephone line, if available.

Why is my modem connection slow?

Many factors can influence modem connection speed, such as:

- Telephone line noise.
- Incompatibility with other telephone equipment such as fax machines or other modems.
- Internet Service Providers (ISP) connection capability may vary.

If you think your modem is not connecting properly to other PC-based modems, fax machines, or your ISP, check the following:

- Contact your telephone company and ask them to verify that your telephone line is free from line noise.
- If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
- For optimum performance, verify that your ISP point of presence (POP) telephone number is compliant with V.90 standards.
- If you are having a problem connecting with your ISP, check that they are not experiencing technical problems.
- Try connecting your modem through another telephone line, if available.

Why doesn't my modem work properly?

Your modem may be experiencing equipment or software conflicts. If your modem is not functioning properly, check the following:

- Check that the telephone line is properly plugged into the modem line jack.
- Check that the telephone line is working properly. You can verify the line by plugging in an external device such as a standard telephone or fax machine and listening for a dial tone.
- Check that the access telephone number (POP) is correct.
- All software programs that are preinstalled by Sony are compatible with your computer's modem. If you have installed other software, contact the software publisher for information on how to configure the software in order to recognize the modem.
- If it appears that your modem is not functioning properly, check the device status.

    1. Click **Start** in the Windows taskbar, then click **Control Panel**.
    2. Click **Printers and Other Hardware** and then select **Phone and Modem Options**.
    3. From the **Modems** tab, click to select your modem.
    4. Click **Properties**. The **Modem Properties** window appears.
    5. Review the information in the **Device status** section. If your modem is not working properly, click the **Troubleshoot** button. The **Help and Support Center** window appears.
    6. Follow the on-screen instructions to resolve the problem.

- The modem driver(s) may not be working properly.

How do I change my modem to rotary or touch-tone dialing?

1. Click **Start** in the Windows taskbar, then click **Control Panel**.
2. Click **Printers and Other Hardware**, then click **Phone and Modem options**.
3. From the **Dialing Rules** tab, click **Edit**. The **Edit Location** dialog box appears.
4. Select the **Tone** or **Pulse** option. Click **OK**.

How do I set up a dial-up connection?

After you have connected your computer's modem to a telephone wall jack, follow these steps to set up your dial-up connection to the Internet:

1. Click **Start** from the Windows taskbar and select **All Programs**.
2. Point to **Accessories**, point to **Communications**, and then click **New Connection Wizard**. The **New Connection Wizard** appears.

   ✍ The **Location Information** and the **Phone and Modem Options** windows appear, when using your computer for the first time. Enter your information as requested and continue to the **New Connection Wizard** window.

3. Follow the on-screen instructions to finish setting up your dial-up connection.

About the Speakers

Why is there no sound in any software program?

- Check that the speakers are plugged into the Headphones jack.
- If your speakers have a mute button, verify that it is turned off.
- If your speakers are powered by batteries, verify that the batteries are inserted properly and that they are charged.
- If your speakers use an external power source, verify that the power cord is plugged into a grounded wall outlet or power strip.
- If your speakers have volume control, check the volume level.
- You may not hear sound from your speakers if headphones are connected to your computer.
- If the software program you are using has its own volume control, check that the volume is turned up.
- Check the volume controls in the Windows® operating system using these steps:

  1. Click **Start** in the Windows taskbar, then select **Control Panel**.
  2. Select **Sounds, Speech, and Audio Devices**, then click **Adjust the system volume**.
  3. From the **Volume** tab, adjust the Device volume by moving the slider bar to the desired sound level. Verify that the **Mute** option is not selected.

- Check that the **Mute** check box is not selected in the **Volume Control** window.
- The sound driver(s) may not be working properly.

About the Speakers

Why is there no sound in any software program?

- Check that the speakers are plugged into the Headphones jack.
- If your speakers have a mute button, verify that it is turned off.
- If your speakers are powered by batteries, verify that the batteries are inserted properly and that they are charged.
- If your speakers use an external power source, verify that the power cord is plugged into a grounded wall outlet or power strip.
- If your speakers have volume control, check the volume level.
- You may not hear sound from your speakers if headphones are connected to your computer.
- If the software program you are using has its own volume control, check that the volume is turned up.
- Check the volume controls in the Windows® operating system using these steps:

    1. Click **Start** in the Windows taskbar, then select **Control Panel**.
    2. Select **Sounds, Speech, and Audio Devices**, then click **Adjust the system volume**.
    3. From the **Volume** tab, adjust the Device volume by moving the slider bar to the desired sound level. Verify that the **Mute** option is not selected.

- Check that the **Mute** check box is not selected in the **Volume Control** window.
- The sound driver(s) may not be working properly.

Why is the S/PDIF option disabled in the Microsoft Windows XP Media Center software program?

S/PDIF is enabled in Media Center[1] by changing the DVD settings. This feature is disabled because the appropriate output setting is not selected in the InterVideo® WinDVD® software program's audio setup.

To change audio settings in the WinDVD software program

1. Click **Start** in the Windows® taskbar, and point to **All Programs**.
2. Point to **InterVideo WindDVD 5**, and the click on **InterVideo WinDVD 5 for VAIO**.

   The **WinDVD** window opens.
3. Right-click in the **WinDVD** window to open the **Setup** dialog box.
4. Select the **Audio** tab.
5. To enable S/PDIF, go to **Audio Output Configuration** and select **Digital (S/PDIF) out to External Processor**.
6. Click **OK**.

[1] The Microsoft Windows XP Media Center Edition operating system is installed on certain VAIO® computers. See your specifications sheet for details on your computer's configuration.

Why can't I hear dialogue during DVD movie playback, using my 5.1 channel[1] speaker system?

- Verify that your speaker system is connected correctly.
- Change the computer's audio settings to 6-channel, to match your 5.1 speaker system.
  - Change the audio settings in the RealTek® Sound Effect Manager software program.
  - Change the audio settings in the InterVideo® WinDVD® software program.
  - Change the audio settings in the Media Center software program's DVD settings.

[1] Your computer's supplied accessories may not include a 5.1 channel speaker system. See your specifications sheet for details on your computer's supplied accessories.

About Using a Microphone

Why doesn't my microphone work properly?

Check that the microphone is plugged into the Microphone jack.

About Using a Microphone

Why doesn't my microphone work properly?

Check that the microphone is plugged into the Microphone jack.

Why is my microphone so sensitive to background noise?

If you find there is too much background noise when you record sound, you should adjust the microphone by following these steps:

1. Click **Start** in the Windows taskbar, then click **Control Panel**.
2. Click **Sounds, Speech, and Audio Devices**, then click **Sounds and Audio Devices**.
3. From the **Audio** tab, locate the **Sound recording** section and click **Volume**. The **Recording Control** dialog box appears.

   If the volume control for the microphone is visible, skip to step 6.
4. Select the **Options** menu and click **Properties**. The **Properties** dialog box appears.
5. In the section, **Show the following volume controls**, click to select the **Microphone** check box. Click **OK**.
6. From the **Recording Control** dialog box, decrease the microphone volume level by moving the slider bar down.
7. Close the **Recording Control** dialog box and then close the **Sounds and Audio Devices Properties** window.

How do I install a printer?

- Connect your USB or IEEE 1394 printer to the appropriate port on your computer's front, back or side panels[1]. If your printer has a USB, IEEE 1394, or infrared connection, contact the printer manufacturer for information or updates that may be required for proper installation.
- Check the printer manufacturer's Web site for the latest drivers for your operating system before proceeding with installation. Some printers do not function properly without the updated drivers for specific operating systems.
- To install your printer, follow these steps:

  1. Click **Start** in the Windows taskbar, then click **Control Panel**.
  2. Click **Printers and Other Hardware**, then click **Add a Printer**.

     The **Add Printer Wizard** appears.
  3. From the **Add Printer Wizard**, click **Next**.
  4. Select **Local Printer**, then click **Next**.

     Place a check mark in the box, **Automatically detect and install my Plug and Play printer**, if you are installing a recently manufactured printer equipped with Plug and Play capability.
  5. Select the appropriate port, usually LPT1 if using the parallel port, and then click **Next**.
  6. Select the appropriate printer manufacturer and model.
  7. Follow the on-screen instructions to print a test page and complete printer installation.

- If the printer is not included in the list, but the printer manufacturer provides a disk with the appropriate Windows XP Printer driver:

  1. Choose **Have Disk**.
  2. Enter the appropriate path for the disk or CD, and click **OK**.

- If the printer is not included in the list, and no drivers are provided with the printer:

  1. Select a similar printer that your printer may emulate.
  2. Refer to the user manual or guide supplied with your printer.
  3. Visit the printer manufacturer's Web site for technical support.

[1] The location of the connection ports for peripheral equipment may vary, depending upon your computer's hardware configuration.

How do I install a printer?

- Connect your USB or IEEE 1394 printer to the appropriate port on your computer's front, back or side panels[1]. If your printer has a USB, IEEE 1394, or infrared connection, contact the printer manufacturer for information or updates that may be required for proper installation.
- Check the printer manufacturer's Web site for the latest drivers for your operating system before proceeding with installation. Some printers do not function properly without the updated drivers for specific operating systems.
- To install your printer, follow these steps:

  1. Click **Start** in the Windows taskbar, then click **Control Panel**.
  2. Click **Printers and Other Hardware**, then click **Add a Printer**.

     The **Add Printer Wizard** appears.
  3. From the **Add Printer Wizard**, click **Next**.
  4. Select **Local Printer**, then click **Next**.

     Place a check mark in the box, **Automatically detect and install my Plug and Play printer**, if you are installing a recently manufactured printer equipped with Plug and Play capability.
  5. Select the appropriate port, usually LPT1 if using the parallel port, and then click **Next**.
  6. Select the appropriate printer manufacturer and model.
  7. Follow the on-screen instructions to print a test page and complete printer installation.

- If the printer is not included in the list, but the printer manufacturer provides a disk with the appropriate Windows XP Printer driver:

  1. Choose **Have Disk**.
  2. Enter the appropriate path for the disk or CD, and click **OK**.

- If the printer is not included in the list, and no drivers are provided with the printer:

  1. Select a similar printer that your printer may emulate.
  2. Refer to the user manual or guide supplied with your printer.
  3. Visit the printer manufacturer's Web site for technical support.

[1] The location of the connection ports for peripheral equipment may vary, depending upon your computer's hardware configuration.

The connected printer does not function properly when the computer resumes from a power saving mode.

- Clear the printer memory by turning the printer off for approximately 10 seconds, and then turning it back on.
- If your printer does not resume normal operations, try restarting your computer.

Notes On Use

The information in this section provides basic procedures for handling your computer and common peripheral devices, and using storage media.

- About the Power Source
- About Handling the Computer
- About Using Giga Pocket Personal Video Recorder
- About Handling a Monitor (Display)
- About Disposing of the Lithium Battery
- About Recording and Data Storage Media

About the Power Source

Before opening your computer, turn the computer off and let it cool down for 10 minutes. This protects you against internal components that may be too hot to handle.

- Your computer operates on 100-120 V AC 50/60 Hz only.
- Plug all the power cords for your computer and its peripheral equipment into the same AC supply line. AC derived from different supply lines may result in voltage differences that can cause unstable operation or unwanted weak currents at the time of connection.
- Do not share the AC outlet with any other power-consuming equipment, such as copying machines or shredders.
- You can purchase a power strip with a surge protector. This device prevents damage to your computer caused by sudden power surges such as those that may occur during an electrical storm.
- If you live in an area that experiences frequent power fluctuations, you may want to purchase an Uninterruptible Power Supply (UPS). This device contains both a surge protector and a battery backup. The surge protector prevents damage to your computer caused by power surges. The battery backup safeguards your data during a brief period of power loss.
- The power control button on the front panel does not turn off the AC power. To remove power from the computer, you must turn it off and then unplug the AC power cord from the wall outlet or power strip.
- Do not place heavy objects on the power cord.
- Do not operate the computer with the cover removed. Always reinstall the cover before turning it on.
- To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- Unplug your computer from the wall outlet if you do not intend to use the computer for a long time.
- Do not attempt to open the power supply. There are no user-serviceable parts in the power supply. To avoid personal injury or damage to your equipment, refer the repair or replacement of the power supply to qualified personnel only.

About Handling the Computer

Your computer uses high-frequency radio signals and may cause interference to radio or TV reception. If this occurs, relocate the computer a suitable distance away from the TV or radio equipment.

- Do not place your Sony computer in a location subject to:
  - Heat sources, such as radiators or air ducts
  - Direct sunlight
  - Excessive dust
  - Mechanical vibration or shock
  - Strong magnets or speakers that are not magnetically shielded
  - Ambient temperature of more than 95ºF (35ºC) or less than 50ºF (10ºC)
  - High humidity, moisture, or rain
- Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.
- Provide adequate air circulation to prevent internal heat build-up. Do not place your computer on loose surfaces (such as rugs or blankets) or near materials (such as curtains or draperies) that may block its ventilation slots. Leave a space of at least 8 inches from the back panel of your computer.
- Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine, as it may damage the finish of your Sony computer.
- Should any solid object or liquid fall into the cabinet, keyboard, or mouse, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.
- Use only specified peripheral equipment and interface cables; otherwise, problems may result.
- Do not use cut or damaged connection cables.
- Always switch the power off before connecting your computer to peripheral equipment; otherwise, damage may occur to the integrated circuits in your computer.
- Your computer, keyboard, and mouse consist of high-precision electronic parts. Do not drop them or bump them against other objects.
- Your Sony computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple telephone lines or a private branch exchange (PBX).
- If the telephone company makes a service call to your home or office and determines that your computer is responsible for the problem, the telephone company may bill you for the service call. If you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.

Moisture condensation

If your computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problem occurs, unplug your computer, and contact your Sony Service Center.

Wireless devices

Wireless devices, such as a wireless keyboard or mouse, requires unobstructed communication with your computer for proper operation.

- Do not exceed a maximum distance of 2 feet between your VAIO® computer and your wireless device.
- Verify that any infrared receiver(s) on the computer or wireless device is free of obstructions that may prevent proper operation.

- Confirm that the supplied AA batteries are properly installed in the wireless device.
- Use the **CONNECT** buttons on the wireless device and your computer, if available, to establish communication between the equipment.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless keyboard. These other devices may cause interference, causing your wireless keyboard or mouse to stop working properly.
- Do not place metal furniture near your computer or wireless device, as this may create interference, causing your wireless device to stop working properly.

The hard disk drive

- Do not place the computer in a location that is subject to vibration or shock.
- Do not move the computer during operation.
- Do not subject the computer to sudden changes in temperature.
- Do not turn off the power while the computer is accessing the hard disk drive.

About Handling the Computer

Your computer uses high-frequency radio signals and may cause interference to radio or TV reception. If this occurs, relocate the computer a suitable distance away from the TV or radio equipment.

- Do not place your Sony computer in a location subject to:
  - Heat sources, such as radiators or air ducts
  - Direct sunlight
  - Excessive dust
  - Mechanical vibration or shock
  - Strong magnets or speakers that are not magnetically shielded
  - Ambient temperature of more than 95ºF (35ºC) or less than 50ºF (10ºC)
  - High humidity, moisture, or rain
- Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.
- Provide adequate air circulation to prevent internal heat build-up. Do not place your computer on loose surfaces (such as rugs or blankets) or near materials (such as curtains or draperies) that may block its ventilation slots. Leave a space of at least 8 inches from the back panel of your computer.
- Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine, as it may damage the finish of your Sony computer.
- Should any solid object or liquid fall into the cabinet, keyboard, or mouse, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.
- Use only specified peripheral equipment and interface cables; otherwise, problems may result.
- Do not use cut or damaged connection cables.
- Always switch the power off before connecting your computer to peripheral equipment; otherwise, damage may occur to the integrated circuits in your computer.
- Your computer, keyboard, and mouse consist of high-precision electronic parts. Do not drop them or bump them against other objects.
- Your Sony computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple telephone lines or a private branch exchange (PBX).
- If the telephone company makes a service call to your home or office and determines that your computer is responsible for the problem, the telephone company may bill you for the service call. If you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.

Moisture condensation

If your computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problem occurs, unplug your computer, and contact your Sony Service Center.

Wireless devices

Wireless devices, such as a wireless keyboard or mouse, requires unobstructed communication with your computer for proper operation.

- Do not exceed a maximum distance of 2 feet between your VAIO® computer and your wireless device.
- Verify that any infrared receiver(s) on the computer or wireless device is free of obstructions that may prevent proper operation.

- Confirm that the supplied AA batteries are properly installed in the wireless device.
- Use the **CONNECT** buttons on the wireless device and your computer, if available, to establish communication between the equipment.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless keyboard. These other devices may cause interference, causing your wireless keyboard or mouse to stop working properly.
- Do not place metal furniture near your computer or wireless device, as this may create interference, causing your wireless device to stop working properly.

The hard disk drive

- Do not place the computer in a location that is subject to vibration or shock.
- Do not move the computer during operation.
- Do not subject the computer to sudden changes in temperature.
- Do not turn off the power while the computer is accessing the hard disk drive.

About Handling the Computer

Your computer uses high-frequency radio signals and may cause interference to radio or TV reception. If this occurs, relocate the computer a suitable distance away from the TV or radio equipment.

- Do not place your Sony computer in a location subject to:
  - Heat sources, such as radiators or air ducts
  - Direct sunlight
  - Excessive dust
  - Mechanical vibration or shock
  - Strong magnets or speakers that are not magnetically shielded
  - Ambient temperature of more than 95ºF (35ºC) or less than 50ºF (10ºC)
  - High humidity, moisture, or rain
- Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.
- Provide adequate air circulation to prevent internal heat build-up. Do not place your computer on loose surfaces (such as rugs or blankets) or near materials (such as curtains or draperies) that may block its ventilation slots. Leave a space of at least 8 inches from the back panel of your computer.
- Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine, as it may damage the finish of your Sony computer.
- Should any solid object or liquid fall into the cabinet, keyboard, or mouse, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.
- Use only specified peripheral equipment and interface cables; otherwise, problems may result.
- Do not use cut or damaged connection cables.
- Always switch the power off before connecting your computer to peripheral equipment; otherwise, damage may occur to the integrated circuits in your computer.
- Your computer, keyboard, and mouse consist of high-precision electronic parts. Do not drop them or bump them against other objects.
- Your Sony computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple telephone lines or a private branch exchange (PBX).
- If the telephone company makes a service call to your home or office and determines that your computer is responsible for the problem, the telephone company may bill you for the service call. If you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.

Moisture condensation

If your computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problem occurs, unplug your computer, and contact your Sony Service Center.

Wireless devices

Wireless devices, such as a wireless keyboard or mouse, requires unobstructed communication with your computer for proper operation.

- Do not exceed a maximum distance of 2 feet between your VAIO® computer and your wireless device.
- Verify that any infrared receiver(s) on the computer or wireless device is free of obstructions that may prevent proper operation.

- Confirm that the supplied AA batteries are properly installed in the wireless device.
- Use the **CONNECT** buttons on the wireless device and your computer, if available, to establish communication between the equipment.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless keyboard. These other devices may cause interference, causing your wireless keyboard or mouse to stop working properly.
- Do not place metal furniture near your computer or wireless device, as this may create interference, causing your wireless device to stop working properly.

The hard disk drive

- Do not place the computer in a location that is subject to vibration or shock.
- Do not move the computer during operation.
- Do not subject the computer to sudden changes in temperature.
- Do not turn off the power while the computer is accessing the hard disk drive.

About Handling the Computer

Your computer uses high-frequency radio signals and may cause interference to radio or TV reception. If this occurs, relocate the computer a suitable distance away from the TV or radio equipment.

- Do not place your Sony computer in a location subject to:
  - Heat sources, such as radiators or air ducts
  - Direct sunlight
  - Excessive dust
  - Mechanical vibration or shock
  - Strong magnets or speakers that are not magnetically shielded
  - Ambient temperature of more than 95ºF (35ºC) or less than 50ºF (10ºC)
  - High humidity, moisture, or rain
- Do not place electronic equipment near your computer. The computer's electromagnetic field may cause a malfunction.
- Provide adequate air circulation to prevent internal heat build-up. Do not place your computer on loose surfaces (such as rugs or blankets) or near materials (such as curtains or draperies) that may block its ventilation slots. Leave a space of at least 8 inches from the back panel of your computer.
- Clean the cabinet with a soft, dry cloth or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine, as it may damage the finish of your Sony computer.
- Should any solid object or liquid fall into the cabinet, keyboard, or mouse, shut down your computer and then unplug it. You may want to have the computer checked by qualified personnel before operating it any further.
- Use only specified peripheral equipment and interface cables; otherwise, problems may result.
- Do not use cut or damaged connection cables.
- Always switch the power off before connecting your computer to peripheral equipment; otherwise, damage may occur to the integrated circuits in your computer.
- Your computer, keyboard, and mouse consist of high-precision electronic parts. Do not drop them or bump them against other objects.
- Your Sony computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple telephone lines or a private branch exchange (PBX).
- If the telephone company makes a service call to your home or office and determines that your computer is responsible for the problem, the telephone company may bill you for the service call. If you do not disconnect your computer when it is adversely affecting the telephone line, the telephone company has the right to disconnect your service until you correct the problem.

Moisture condensation

If your computer is brought directly from a cold location to a warm one, moisture may condense inside your computer. In this case, allow at least an hour before turning on your computer. If any problem occurs, unplug your computer, and contact your Sony Service Center.

Wireless devices

Wireless devices, such as a wireless keyboard or mouse, requires unobstructed communication with your computer for proper operation.

- Do not exceed a maximum distance of 2 feet between your VAIO® computer and your wireless device.
- Verify that any infrared receiver(s) on the computer or wireless device is free of obstructions that may prevent proper operation.

- Confirm that the supplied AA batteries are properly installed in the wireless device.
- Use the **CONNECT** buttons on the wireless device and your computer, if available, to establish communication between the equipment.
- Avoid using radio-controlled toys or equipment, CB radios, and other wireless devices in the area near your wireless keyboard. These other devices may cause interference, causing your wireless keyboard or mouse to stop working properly.
- Do not place metal furniture near your computer or wireless device, as this may create interference, causing your wireless device to stop working properly.

The hard disk drive

- Do not place the computer in a location that is subject to vibration or shock.
- Do not move the computer during operation.
- Do not subject the computer to sudden changes in temperature.
- Do not turn off the power while the computer is accessing the hard disk drive.

Optical mouse

An optical mouse requires an ideal surface texture in order to provide precision pointing and tracking.

- Use surfaces such as plain paper, card stock, or fabric that have minimal repetitive patterning.
- Avoid surfaces such as mirrors, smooth glass, or magazines that have halftone printing.

About Using Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on using the Giga Pocket hardware and software features.

Display setup

Verify your display's settings before using Giga Pocket Personal Video Recorder:

- Color quality: Use factory default settings (32-bit).
- Screen resolution: Set to 1024 x 768 pixels. Using other display settings may cause an improper screen image or an incorrect recording by Giga Pocket software.

  Some displays may require the screen resolution to be set to 1280 x 1024 pixels. For information on your display's setting requirement, see the instructions supplied with your display.
- Check your display setup in the Microsoft® Windows® operating system before starting up Giga Pocket software. For more information, refer to the monitor's operating manual.
- Do not change the display setup while Giga Pocket is running, or your computer may operate improperly.

Hard disk drive

- When the available free space on your hard disk approaches 100 MB, you are not able to create a new Video Capsule. Delete unnecessary Video Capsules or files in order to increase available space on your hard disk drive.
- If you directly delete, move, or rename a file in the D:\Giga Pocket folder, Giga Pocket Personal Video Recorder features may not work properly.

Network

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time.

If a different user logs on using the Fast Switch Feature:

- Giga Pocket is not available to other user accounts. For more information, see Giga Pocket Help.
- The Timer Recording feature is not available to other user accounts. The Timer Recording Manager icon appears in the taskbar notification area for the first user.

About Using Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on using the Giga Pocket hardware and software features.

Display setup

Verify your display's settings before using Giga Pocket Personal Video Recorder:

- Color quality: Use factory default settings (32-bit).
- Screen resolution: Set to 1024 x 768 pixels. Using other display settings may cause an improper screen image or an incorrect recording by Giga Pocket software.

  Some displays may require the screen resolution to be set to 1280 x 1024 pixels. For information on your display's setting requirement, see the instructions supplied with your display.
- Check your display setup in the Microsoft® Windows® operating system before starting up Giga Pocket software. For more information, refer to the monitor's operating manual.
- Do not change the display setup while Giga Pocket is running, or your computer may operate improperly.

Hard disk drive

- When the available free space on your hard disk approaches 100 MB, you are not able to create a new Video Capsule. Delete unnecessary Video Capsules or files in order to increase available space on your hard disk drive.
- If you directly delete, move, or rename a file in the D:\Giga Pocket folder, Giga Pocket Personal Video Recorder features may not work properly.

Network

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time.

If a different user logs on using the Fast Switch Feature:

- Giga Pocket is not available to other user accounts. For more information, see Giga Pocket Help.
- The Timer Recording feature is not available to other user accounts. The Timer Recording Manager icon appears in the taskbar notification area for the first user.

About Using Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on using the Giga Pocket hardware and software features.

Display setup

Verify your display's settings before using Giga Pocket Personal Video Recorder:

- Color quality: Use factory default settings (32-bit).
- Screen resolution: Set to 1024 x 768 pixels. Using other display settings may cause an improper screen image or an incorrect recording by Giga Pocket software.

  Some displays may require the screen resolution to be set to 1280 x 1024 pixels. For information on your display's setting requirement, see the instructions supplied with your display.
- Check your display setup in the Microsoft® Windows® operating system before starting up Giga Pocket software. For more information, refer to the monitor's operating manual.
- Do not change the display setup while Giga Pocket is running, or your computer may operate improperly.

Hard disk drive

- When the available free space on your hard disk approaches 100 MB, you are not able to create a new Video Capsule. Delete unnecessary Video Capsules or files in order to increase available space on your hard disk drive.
- If you directly delete, move, or rename a file in the D:\Giga Pocket folder, Giga Pocket Personal Video Recorder features may not work properly.

Network

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time.

If a different user logs on using the Fast Switch Feature:

- Giga Pocket is not available to other user accounts. For more information, see Giga Pocket Help.
- The Timer Recording feature is not available to other user accounts. The Timer Recording Manager icon appears in the taskbar notification area for the first user.

About Using Giga Pocket Personal Video Recorder

Certain VAIO® computers are equipped with Giga Pocket® Personal Video Recorder features. This section provides information on using the Giga Pocket hardware and software features.

Display setup

Verify your display's settings before using Giga Pocket Personal Video Recorder:

- Color quality: Use factory default settings (32-bit).
- Screen resolution: Set to 1024 x 768 pixels. Using other display settings may cause an improper screen image or an incorrect recording by Giga Pocket software.

  Some displays may require the screen resolution to be set to 1280 x 1024 pixels. For information on your display's setting requirement, see the instructions supplied with your display.
- Check your display setup in the Microsoft® Windows® operating system before starting up Giga Pocket software. For more information, refer to the monitor's operating manual.
- Do not change the display setup while Giga Pocket is running, or your computer may operate improperly.

Hard disk drive

- When the available free space on your hard disk approaches 100 MB, you are not able to create a new Video Capsule. Delete unnecessary Video Capsules or files in order to increase available space on your hard disk drive.
- If you directly delete, move, or rename a file in the D:\Giga Pocket folder, Giga Pocket Personal Video Recorder features may not work properly.

Network

Microsoft® Windows® XP operating system supports a single Giga Pocket user at any given time.

If a different user logs on using the Fast Switch Feature:

- Giga Pocket is not available to other user accounts. For more information, see Giga Pocket Help.
- The Timer Recording feature is not available to other user accounts. The Timer Recording Manager icon appears in the taskbar notification area for the first user.

About Handling a Monitor (Display)

- DVD playback and certain video-related software may not function correctly when your monitor is set to a high refresh rate. If your monitor does not play back video content properly, try setting the display to a lower refresh rate.
- Do not place the display near a strong magnetic force.
- Do not block the ventilation slots on the display.
- Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The image disappears after a period of time. You can use a screen saver to prevent residual images.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.

About handling an LCD monitor[1] (display)

- Do not place the display near a strong magnetic force.
- Do not block the ventilation slots on the display.
- Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The image disappears after a period of time. You can use a screen saver to prevent residual images.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.
- Do not leave the LCD in direct sunlight, as this may damage the screen. Use caution when using the computer near a window.
- Do not exert pressure on the LCD or scratch the surface, as this may cause the screen to malfunction.
- The LCD screen is manufactured using high-precision technology. On occasion, you may see tiny black or colored points on the LCD. This is normal and does not indicate a malfunction.
- Avoid rubbing the screen, as this can damage the LCD. Use a soft, dry cloth to clean the display.

[1] The PCV-W and PCV-V series models have a built-in LCD monitor.

About Handling a Monitor (Display)

- DVD playback and certain video-related software may not function correctly when your monitor is set to a high refresh rate. If your monitor does not play back video content properly, try setting the display to a lower refresh rate.
- Do not place the display near a strong magnetic force.
- Do not block the ventilation slots on the display.
- Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The image disappears after a period of time. You can use a screen saver to prevent residual images.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.

About handling an LCD monitor[1] (display)

- Do not place the display near a strong magnetic force.
- Do not block the ventilation slots on the display.
- Using the computer in low temperature conditions may produce a residual image on the screen. This is not a malfunction. When the computer returns to normal temperature, the screen returns to normal.
- A residual image may appear on the screen if the same image is displayed for a lengthy period of time. The image disappears after a period of time. You can use a screen saver to prevent residual images.
- The screen becomes warm during operation. This is normal and does not indicate a malfunction.
- Do not leave the LCD in direct sunlight, as this may damage the screen. Use caution when using the computer near a window.
- Do not exert pressure on the LCD or scratch the surface, as this may cause the screen to malfunction.
- The LCD screen is manufactured using high-precision technology. On occasion, you may see tiny black or colored points on the LCD. This is normal and does not indicate a malfunction.
- Avoid rubbing the screen, as this can damage the LCD. Use a soft, dry cloth to clean the display.

[1] The PCV-W and PCV-V series models have a built-in LCD monitor.

About Disposing of the Lithium Battery

Dispose of the lithium battery properly. In some areas, the disposal of lithium batteries in household or business trash may be prohibited. You can return your unwanted lithium batteries to your nearest Sony Service Center or Factory Service Center. For the Sony Service Center nearest you, visit the Sony online support Web site at http://www.sony.com/pcsupport .

Do not handle damaged or leaking lithium batteries. The lithium battery may explode if mistreated. Do not disassemble it or dispose of it in fire.

Replace the battery with a Sony CR2032 lithium battery. Using a type of battery other than a CR2032 may present a risk of fire or explosion.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

About Recording and Data Storage Media

Handling CD or DVD media

- Do not touch the surface of the disc.
- Do not drop or bend the disc.
- Do not use adhesive labels to identify the disc. The label may come off while the disc is in use in the optical drive and damage the drive.

Cleaning CD or DVD media

- Fingerprints and dust on the surface of a disc may cause read errors. Proper care of the disc is essential to maintain its integrity. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray, as they may cause damage to the disc.
- For normal cleaning, hold the disc by its edge and use a soft cloth to wipe the surface from the center out.
- If the disc is badly soiled, moisten a soft cloth with water, wring it out well, and use it to wipe the surface of the disc from the center out. Wipe off any remaining moisture with a dry soft cloth.

Using Memory Stick media

- MagicGate Memory Stick and Memory Stick PRO media are the only media that support MagicGate technology. Currently, Sony® SonicStage and OpenMG software are not compatible with the new Memory Stick PRO media. Sony suggests using only the MagicGate Memory Stick media to store and transfer any data created with SonicStage and OpenMG software.
- VAIO® computers may not support all of the high-speed data transfer or access control features of the new Memory Stick PRO media. You can use the new Memory Stick PRO media as you would use a standard Memory Stick® media.
- Visit the Sony online support Web site at http://www.sony.com/pcsupport regularly for the latest information on the new Memory Stick PRO media.

Using media cards

Certain VAIO® computers support CompactFlash®, MultiMediaCard (MMC), Microdrive , xD-PictureCards and Secure Digital (SD) media cards. See your computer's specifications sheet at http://www.sony.com/pcsupport, for more information about your computer's media card slot configuration. Visit the Sony online support Web site regularly for the latest information on compatible memory cards.

- Always insert the correct media card into the appropriate media slot.
- Do not attempt to insert a different media card or adapter into a slot that is not designed to accept it. An incompatible media card or adapter may be difficult to remove from the slot and can damage your computer.

Handling floppy disks[1]

- Do not open the shutter manually and touch the surface of the floppy disk.
- Keep floppy disks away from magnets.
- Keep floppy disks away from direct sunlight and other heat sources.

[1] Certain VAIO computers are not equipped with a floppy disk drive. You can purchase a floppy disk drive separately. See the online specifications sheet for more information about your computer's hardware configuration.

Support Options

Sony provides several options to help solve common problems or to locate support for your VAIO® computer. This section describes all available resources and offers suggestions on how to access this information for maximum results.

- Immediate Help and Support
- Software Help and Support
- Resources for Additional Help and Support

Immediate Help and Support

You can locate helpful information immediately by consulting your hard copy guides and supplements, or by accessing the online Computer User Guide and individual software Help files.

Your computer is supplied with these support options:

- **VAIO® Computer Quick Start —** The Quick Start contains information on how to set up your computer quickly and easily. You can find instructions on how to connect power cords, cables, peripheral devices, and register your computer with Sony®. The Quick Start can also provide basic troubleshooting support.

- **VAIO® Recovery Options Guide —** Provides information about restoring individual software programs, software drivers, drive partition(s), or your entire hard disk drive to the original factory installed settings.

- **VAIO® Computer User Guide —** The online User Guide provides information about configuring, maintaining, and upgrading your computer. This support resource offers a variety of available topics, enabling you to quickly view specific information using context-sensitive search features. To access the online guide:

  1. Click **Start** in the Windows® taskbar, then click **Help and Support**.

  2. From the **VAIO Help And Support Center** menu, click **VAIO User Guide**.

- **Specifications** — The online specifications sheet describes the hardware and software configuration of your VAIO computer. To view the online specifications sheet:

  1. Connect to the Internet.

  2. Go to the Sony online support Web site at *http://www.sony.com/pcsupport*.

  3. Click the **Documentation button** and follow the on-screen instructions to locate your model's specifications sheet.

- **Preinstalled software Help files —** Each preinstalled software program provides online Help within the software, that describes the software's features. In these Help files, you can find tutorials that teach you to use the software and locate troubleshooting support, should problems occur. To access software Help files:

  1. Click **Start** in the Windows taskbar and point to **All Programs**. A submenu appears, listing all preinstalled software programs.

  2. Click the desired software program.[1] The software's main window appears.

  3. From the menu bar, click **Help**. The software program's **Help** appears.

- **VAIO Software** — This feature provides specific information on preinstalled software on your computer.

  To access this online software information

  1. Click **Start** in the Windows taskbar.

  2. Click **Welcome to VAIO life**.

[1] You can locate the online Help for Sony® software programs by pointing to the individual software program's icon and selecting Help from the submenu.

Software Help and Support

Support information for the preinstalled software on your computer is located in this section. Sony software support is free of charge for 90 days after the original date of purchase.

Your computer may not be supplied with all of the software discussed in this section, depending on the computer purchased. To view information about the specific software preinstalled on your computer, see the software program's online Help.

Adobe® Photoshop® Elements, Photoshop® Album, Premiere®, Reader®
Adobe Systems, Inc.

Web site http://www.adobe.com

telephone 800-685-3652

hours M - F, 6 AM - 5 PM PST

America Online® (Broadband or Dial-Up)
America Online, Inc.

Web site http://www.aol.com

Click to DVD
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

CLIÉ Converter
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

DVgate Plus
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

Giga Pocket® Personal Video Recorder
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

Microsoft® Internet Explorer
Microsoft Corp.

Web site http://www.support.microsoft.com

Microsoft® Windows Media® Player
Microsoft Corp.

Web site http://www.support.microsoft.com

Microsoft® Windows® Movie Maker
Microsoft Corp.

Web site http://www.support.microsoft.com

Microsoft® Works
Microsoft Corp.

Web site http://www.support.microsoft.com

MoodLogic
MoodLogic, Inc.

Web site http://www.moodlogic.com/support

e-mail help@moodlogic.com

Norton Internet Security (90 day trial version)
Symantec Corp.

Web site http://www.symantec.com/techsupp

PictureGear Studio
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

Quicken® New User Edition
Intuit Inc.

Web site http://www.intuit.com/support

telephone 900-555-4932; 800-644-3193[1]

[1] Intuit Inc. Software: Support from 900-555-4932 is fee-based. Support from 800-644-3193 is automated and free of charge.

RecordNow
Sonic Solutions

Web site http://support.sonic.com

SonicStage
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

SonicStage Mastering Studio
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

Sony® VAIO® Product Registration
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

VAIO Media
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

VAIO Music Services
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

VAIO Update
Sony Electronics Inc.

Web site http://www.sony.com/pcsupport

telephone 888-4-SONY-PC (888-476-6972)

hours 7 days a week, 24 hours a day

WinDVD® for VAIO®
InterVideo, Inc.

Web site	http://www.intervideo.com/jsp/Support.jsp
telephone	510-651-0888

Resources for Additional Help and Support

If the information provided with your VAIO® computer does not offer an immediate solution, or you would like to get direct support, try these additional help and support resources.

Sony online support Web site

Online help and support are available 24 hours a day, seven days a week, when you visit the Sony online support Web site. You can access the Web site at http://www.sony.com/pcsupport.

The Sony online support Web site provides:

- Information about your specific computer model, such as
  - hardware and software specifications.
  - safety and legal information.
  - quick solutions to common problems.
- An automated tutorial library that contains interactive, easy-to-understand lessons on using your computer's hardware and software features.
- Links that enable you to:
  - quickly find the nearest Sony service center locations.
  - arrange for repairs or check repair status.
  - review warranty information.
  - e-mail your question or comments to the Sony Customer Information Services Center.
  - check pricing and availability for products, accessories and parts, as well as purchase online.
  - access the Sony Solutions Knowledge Base, a database that contains answers to many frequently asked questions.

Sony Customer Information Services Center

If other support options do not resolve your issue, you can contact a Sony Support representative directly.

Before making a call to the Sony Customer Information Services Center, have this basic information readily available.

1. VAIO® computer type.
2. Model number.
3. Serial number[1].

   Example:

4. Operating system.
5. Hardware feature or software program that has a problem. (See the online *VAIO® Computer User Guide* for the appropriate software technical support information.)
6. Brief description of the issue.

For VAIO® computers purchased in the U.S. and Canada, contact a Sony Support representative at 1-888-476-6972.

[1] The serial number is located on the back panel of your computer. The serial number is on a white barcode label.

Resources for Additional Help and Support

If the information provided with your VAIO® computer does not offer an immediate solution, or you would like to get direct support, try these additional help and support resources.

Sony online support Web site

Online help and support are available 24 hours a day, seven days a week, when you visit the Sony online support Web site. You can access the Web site at http://www.sony.com/pcsupport.

The Sony online support Web site provides:

- Information about your specific computer model, such as
  - hardware and software specifications.
  - safety and legal information.
  - quick solutions to common problems.
- An automated tutorial library that contains interactive, easy-to-understand lessons on using your computer's hardware and software features.
- Links that enable you to:
  - quickly find the nearest Sony service center locations.
  - arrange for repairs or check repair status.
  - review warranty information.
  - e-mail your question or comments to the Sony Customer Information Services Center.
  - check pricing and availability for products, accessories and parts, as well as purchase online.
  - access the Sony Solutions Knowledge Base, a database that contains answers to many frequently asked questions.

Sony Customer Information Services Center

If other support options do not resolve your issue, you can contact a Sony Support representative directly.

Before making a call to the Sony Customer Information Services Center, have this basic information readily available.

1. VAIO® computer type.
2. Model number.
3. Serial number[1].

   Example:

4. Operating system.
5. Hardware feature or software program that has a problem. (See the online *VAIO® Computer User Guide* for the appropriate software technical support information.)
6. Brief description of the issue.

For VAIO® computers purchased in the U.S. and Canada, contact a Sony Support representative at 1-888-476-6972.

[1] The serial number is located on the back panel of your computer. The serial number is on a white barcode label.

Resources for Additional Help and Support

If the information provided with your VAIO® computer does not offer an immediate solution, or you would like to get direct support, try these additional help and support resources.

Sony online support Web site

Online help and support are available 24 hours a day, seven days a week, when you visit the Sony online support Web site. You can access the Web site at http://www.sony.com/pcsupport.

The Sony online support Web site provides:

- Information about your specific computer model, such as
  - hardware and software specifications.
  - safety and legal information.
  - quick solutions to common problems.
- An automated tutorial library that contains interactive, easy-to-understand lessons on using your computer's hardware and software features.
- Links that enable you to:
  - quickly find the nearest Sony service center locations.
  - arrange for repairs or check repair status.
  - review warranty information.
  - e-mail your question or comments to the Sony Customer Information Services Center.
  - check pricing and availability for products, accessories and parts, as well as purchase online.
  - access the Sony Solutions Knowledge Base, a database that contains answers to many frequently asked questions.

Sony Customer Information Services Center

If other support options do not resolve your issue, you can contact a Sony Support representative directly.

Before making a call to the Sony Customer Information Services Center, have this basic information readily available.

1. VAIO® computer type.
2. Model number.
3. Serial number[1].

   Example:

4. Operating system.
5. Hardware feature or software program that has a problem. (See the online *VAIO® Computer User Guide* for the appropriate software technical support information.)
6. Brief description of the issue.

For VAIO® computers purchased in the U.S. and Canada, contact a Sony Support representative at 1-888-476-6972.

[1] The serial number is located on the back panel of your computer. The serial number is on a white barcode label.